Programming Manual

Site Master MS2085A/MS2089A

Handheld Cable & Antenna Analyzer and RF Spectrum Analyzer

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA

Part Number: 10580-00502
Revision: B
Published: March 2025
Copyright March 2025 Anritsu Company

www.tehencom.com

Unauthorized Use or Disclosure

Anritsu Company has prepared the product user documentation for use by Anritsu Company personnel and customers as a guide for the proper installation, operation, and maintenance of Anritsu Company equipment and software programs. The drawings, specifications, and information contained therein are the property of Anritsu Company, and any unauthorized use of these drawings, specifications, and information is prohibited; they shall not be reproduced, copied, or used in whole or in part as the basis for manufacture or sale of the equipment or software programs without the prior written consent of Anritsu Company.

Export Management

The Anritsu products identified herein and their respective manuals may require an Export License or approval by the government of the product country of origin for re-export from your country. Before you export these products or any of their manuals, please contact Anritsu Company to confirm whether or not these items are export-controlled. When disposing of export-controlled items, the products and manuals must be broken or shredded to such a degree that they cannot be unlawfully used for military purposes.

www.tehencom.com

Table of Contents

Chapter 1—Programming with SCPI

1-1 Scope of Manual . . . 1-1
Additional Documentation . . . 1-1
1-2 Introduction . . . 1-2
1-3 Remote Programming Setup and Interface . . . 1-2
Network Interface Connection and Setup . . . 1-2
USBTMC Interface Connection and Setup . . . 1-6
1-4 Sending SCPI Commands with NI-VISA . . . 1-8
1-5 SCPI Command Overview . . . 1-10
Command Names . . . 1-10
Command Syntax . . . 1-10
Data Parameters . . . 1-12
Spectrum Trace Data Format . . . 1-12
Unit Suffixes . . . 1-12
Query Commands . . . 1-13
Hierarchical Command Structure . . . 1-13
1-6 SCPI Command Types . . . 1-14
SCPI Common Commands . . . 1-14
SCPI Required Commands . . . 1-15
SCPI Optional Commands . . . 1-15
1-7 Status System Reporting . . . 1-15
Status Group Registers . . . 1-15
Status Group Reporting . . . 1-16
1-8 SCPI Commands . . . 1-19
1-9 SCPI Command Programming Examples . . . 1-20
Notational Examples . . . 1-20
Spectrum Trace Data via SCPI . . . 1-21
C/C++ . . . 1-22
Programming Examples . . . 1-24

Chapter 2—MS2089A Commands

2-1 Common Commands . . . 2-1
2-2 System Commands . . . 2-4
2-3 Spectrum Analyzer Commands . . . 2-40
2-4 High Accuracy Power Meter Commands . . . 2-249
2-5 Cable and Antenna Analyzer Commands . . . 2-268
2-6 Vector Network Analyzer Commands . . . 2-317
2-7 Vector Volt Meter Commands . . . 2-405

Appendix A—SCPI Error Table

Appendix B—SCPI Command Reference

www.tehencom.com

www.tehencom.com

Chapter 1 — Programming with SCPI

1-1 Scope of Manual

This manual provides SCPI programming information and a list of SCPI programming commands for the Anritsu MS208xA Site Master Spectrum Analyzer and Cable and Antenna Analyzer.

Additional Documentation

Table 1-1. Related Manuals

Document Part Number	Model Number	Description
10100-00069	MS2085A/89A	Important Product Information, Compliance, and Safety Notices
11410-02906	MS2085A/89A	MS208xA Site Master™ Technical Data Sheet
10580-00499	MS2085A/89A	MS208xA Site Master™ User Guide
10580-00447	MS2089A	Spectrum Analyzer Measurement Guide Interference Finder (Option 24) Zero Span IF Output (Option 89) Gated Sweep (Option 90) Coverage Mapping (Option 431) EMF Measurement (Option 444)
10580-00448	MS2089A	Real-Time Spectrum Analyzer (RTSA) Measurement Guide Interference Analysis RTSA (IA RTSA) Analyzer (Option 24)
10580-00449	MS2089A	5GNR Measurement Guide (Option 888) GNSS Receiver (Option 31) Gated Sweep (Option 90) Coverage Mapping (Option 431)
10580-00450	MS2089A	LTE FDD/TDD Signal Analyzer (Option 883) Measurement Guide GNSS Receiver (Option 31) Gated Sweep (Option 90) Coverage Mapping (Option 431)
10580-00490	MS2089A	IQ Capture/Streaming Measurement Guide (Option126 and 127)
10580-00492	MS2089A	High Accuracy Power Meter Measurement Guide (Option 19)
10580-00493	MS208xA	Cable and Antenna Analyzer Measurement Guide (Option 331)
10580-00501	MS2089A	WCDMA Measurement Guide (Option 871)
10580-00504	MS2089A	Channel Scanner Measurement Guide (Option 27)
10580-00505	MS2085A/89A	Anritsu Report Tool User Guide

For additional information and literature covering your product, visit the product page of your instrument and select the Library tab:

https://www.anritsu.com/en-us/test-measurement/products/ms208xa

www.tehencom.com

1-2 Introduction

This chapter provides an introduction to Standard Commands for Programming Instruments (SCPI). The SCPI standard defines a set of programming commands and standards for use by all SCPI compatible instruments. SCPI is intended to provide a consistent environment for program development. It does so by defining standardized controller messages, instrument responses, and message formats for all SCPI compatible instruments. The following sections include descriptions of the command types, hierarchical command structure, command subsystems, data parameters, and notational conventions with examples.

1-3 Remote Programming Setup and Interface

Remote programming and operation of the instrument is accomplished via the Ethernet or WLAN (Wi-Fi), or USB C interfaces. The following sections provide information about the interface connections, cable requirements, and remote operation setup.

Network Interface Connection and Setup

The MS2085A/89A uses Ethernet or WLAN to communicate remotely with a controller. Most instrument functions (except power on/off) can be controlled via a network connection to a PC connected directly (with an Ethernet cross-over cable or Wi-Fi peer-to-peer/ad hoc) or through a network. The instrument software supports the TCP/IP raw socket network protocol.

Ethernet networking uses a bus or star topology in which all of the interfacing devices are connected to a central cable called the bus, or are connected to a hub. Ethernet uses *Carrier Sense Multiple Access/Collision Detection* (CSMA/CD) access method to handle simultaneous transmissions over the bus. This standard enables network devices to detect simultaneous data channel usage, called a *collision*, and provides for a contention protocol. When a network device detects a collision, the CSMA/CD standard dictates that the data is retransmitted after waiting a random amount of time. If a second collision is detected, the data is again retransmitted after waiting twice as long. This is known as exponential back off.

Wi-Fi uses a similar star topology in which all of the interfacing devices are connected to an access point. Wi-Fi uses *Carrier Sense Multiple Access/Collision Avoidance* (CSMA/CA) access method to handle simultaneous transmissions. CSMA/CA doesn't detect collisions but rather avoids them through the use of a control message. If the control message collides with another control message from another node, it means that the medium is not available for transmission and the back-off algorithm is applied before attempting another transmission.

www.tehencom.com

The TCP/IP setup requires the following:

- IP Address: Every computer and electronic device in a TCP/IP network requires an IP address. An IP address has four numbers (each between 0 and 255) separated by periods. For example: 128.111.122.42 is a valid IP address.
- Subnet Mask: The subnet mask distinguishes the portion of the IP address that is the network ID from the portion that is the station ID. The subnet mask 255.255.0.0, when applied to the IP address given above, would identify the network ID as 128.111 and the station ID as 122.42. All stations in the same local area network should have the same network ID, but different station IDs.
- Default Gateway: A TCP/IP network can have a gateway to communicate beyond the LAN identified by the network ID. A gateway is a computer or electronic device that is connected to two different networks and can move TCP/IP data from one network to the other. A single LAN that is not connected to another LAN requires a default gateway setting of 0.0.0.0. If you have a gateway, then the default gateway would be set to the appropriate value of your gateway.
- Ethernet Address: An Ethernet address, or *Media Access Control* (MAC) address, is a unique 48-bit value that identifies a network interface card to the rest of the network. Every network card has a unique Ethernet address permanently stored into its memory.
- Remote programming and operation between the instrument and remote program is accomplished via a TCP/IP raw socket connection to port 9001. The remote program must establish a TCP/IP raw socket connection at port 9001 to the MS2085A/89A.
- The remote application may connect to the instrument IP address or to its `HOSTNAME`. If using DHCP instead of a static IP, using the `HOSTNAME` may be more reliable for finding an instrument on a network.
- You may need to contact your network administrator to ensure network security policies, antivirus, and firewall settings do not block access to the controlling computer and its ports.

The MS208xA can be configured for *Dynamic Host Configuration Protocol* (DHCP), an Internet protocol that automates the process of setting IP addresses for devices that use TCP/IP, and is the most common method of configuring a device for network use.

To determine if a network is set up for DHCP, connect the instrument to the network and select DHCP protocol. Power cycle the instrument. If the network is set up for DHCP, the assigned IP address should be displayed in the network settings.

www.tehencom.com

Network Connection

Interface between the instrument and other devices on the network is via a category five (CAT-5) interface cable connected to a network. This cable uses four twisted pairs of insulated copper wires terminated into an RJ45 connector. CAT-5 cabling is capable of supporting frequencies up to 100 MHz and data transfer speeds up to 1 Gbps, which accommodates 1000Base-T, 100Base-T, and 10Base-T networks. CAT-5 cables are based on the EIA/TIA 568 Commercial Building Telecommunications Wiring Standard developed by the Electronics Industries Association. A pinout diagram is shown in Table 1-2.

Table 1-2. 8-pin Ethernet RJ45 Connector Pinout Diagram

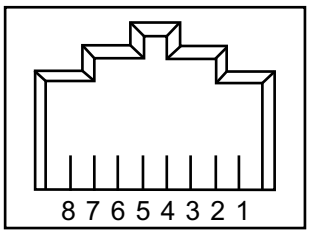

Pin	Name	Description	Wire Color
1	TX+	Transmit data (> +3 volts)	White/Orange
2	TX–	Transmit data (< –3 volts)	Orange
3	RX+	Receive data (> +3 volts)	White/Green
4	–	Not used (common mode termination)	Blue
5	–	Not used (common mode termination)	White/Blue
6	RX–	Receive data (< –3 volts)	Green
7	–	Not used (common mode termination)	White/Brown
8	–	Not used (common mode termination)	Brown

Integrated into the RJ45 connector are two LEDs. The amber LED indicates the presence of LAN voltages (a live LAN connection) while the green LED flashes to show that LAN traffic is present. The instrument IP address and its `HOSTNAME` are set via the System menu (upper left corner) and accessing the Ethernet or WIFI settings menu.

TCP/IP connectivity requires setting up the parameters described at the beginning of this section. The following is a brief overview of how to set up a general LAN connection on the MS2085A/89A.

Note	You may need to consult your network documentation or network administrator for assistance in configuring your network setup.

www.tehencom.com

1. Access the System menu (three line icon in upper left corner).
2. Press SETTINGS to access the instrument settings menu, then select either Ethernet or WIFI to change the IP address or HOSTNAME.

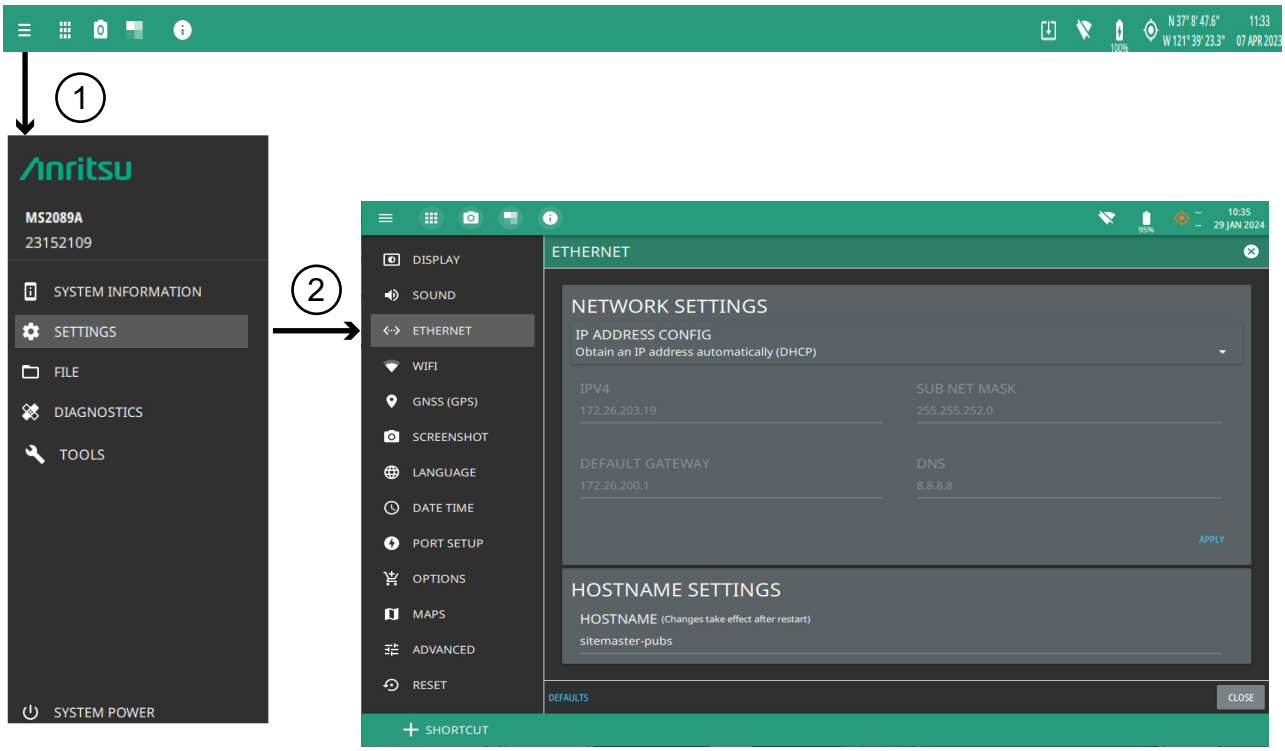

Figure 1-1. Network Settings

When using Ethernet, the instrument IP address can be set automatically using DHCP or manually by entering the desired IP address, gateway address, and subnet mask. DHCP is an Internet protocol that automates the process of setting IP addresses for devices that use TCP/IP, and is the most common method of configuring a device for network use.

To determine if a network is set up for DHCP, connect the instrument to the network and select DHCP protocol. Power cycle the instrument. If the network is set up for DHCP, the assigned IP address should be displayed in the network settings.

Note	An active Ethernet cable must be connected to the instrument before it is turned on in order to enable the Ethernet port for DHCP or for a static IP address. Depending on local conditions, the port may remain enabled when changing between DHCP and static IP address, or when temporarily disconnecting the Ethernet cable. If the port becomes disabled, verify that an active Ethernet cable is attached to the instrument, then cycle the instrument power off and on

When using Wi-Fi, an active Wi-Fi connection to an access point that is connected to your network must be established in order to enable DHCP. Static IP and HOSTNAME connections are not supported by the MS2085A/89A.

www.tehencom.com

USBTMC Interface Connection and Setup

The Universal Serial Bus (USB) architecture is a high-performance networking standard that is considered "plug and play" compatible. The USB driver software is automatically detected and configured by the operating system of the devices that are connected to the bus. The instrument USB C port must be used for remote program interface. This port conforms to the USB 3.0 standard and supports data rates of up to 5 Gbit/s with the following restrictions:

- One USB network can support up to 127 devices.
- The maximum length of USB cables between active devices is 3 meters for USB 3.0, 5 meters for USB 2.0, and 3 meters for USB 1.0.

The following USBTMC features are not yet supported:

- SET_FEATURE
- SYNCH_FRAME

For remote USB control, the controller PC must have a version of VISA installed that supports USBTMC (USB Test and Measurement Class) devices. Refer to http://www.ni.com/visa/ for software downloads and installation instructions. The USB C port connector can be used to connect the MS208xA directly to a PC. The first time the instrument is connected to a PC, the normal USB device detection by the computer operating system takes place.

The USB C port must be used to connect the MS2085A/89A directly to a PC. The first time the instrument is connected to a PC, the normal USB device detection by the computer operating system takes place.

1. Power on the instrument and controller PC and wait for the systems to power up completely.
2. Connect the USB port C cable connector to the instrument.
3. Connect the USB port A cable connector to the controller PC USB host port. The controller PC generally installs the driver software in the background and briefly displays a notification balloon near the system tray when the device is ready for use and the setup is then complete.

   Some configurations will display a "New Hardware Found" dialog and you will then need to complete the remaining steps in this procedure by clicking Next.

Figure 1-2. Found New Hardware Wizard

www.tehencom.com

4. Select to allow the Wizard to search for and install the USB software automatically.

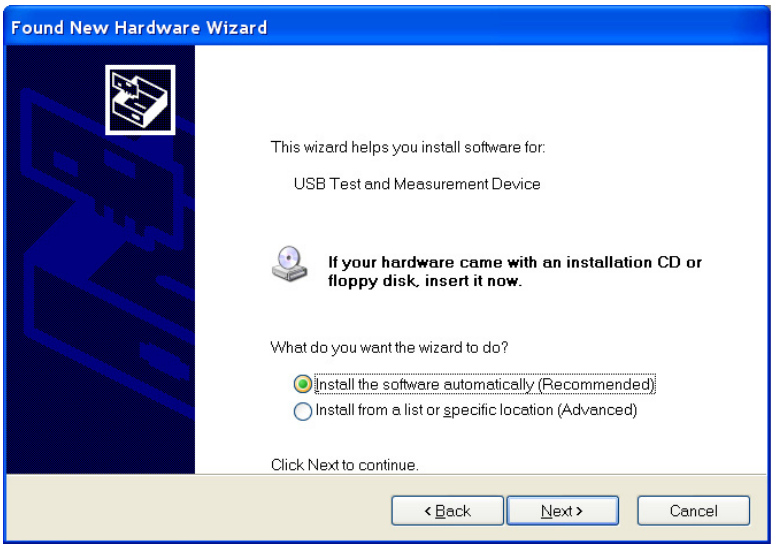

Figure 1-3. Found New Hardware Wizard

5. After the software finishes installing, close the Wizard by clicking Finish.

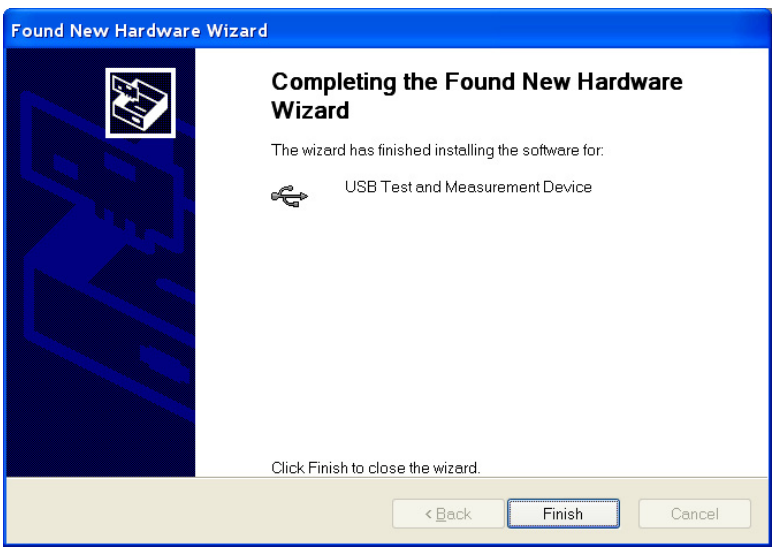

Figure 1-4. Found New Hardware Wizard

Note	The USBTMC connection interface does not work with instruments installed with secure communication Option 17.

www.tehencom.com

1-4 Sending SCPI Commands with NI-VISA

SCPI commands can be sent to the instrument through any Virtual Instrument Software Architecture (VISA) controller. VISA is a commonly used API in the Test and Measurement industry for communicating with instruments from a PC. The physical connection between the PC and the instrument can be Ethernet or USB. NI-VISA is the National Instruments implementation of the VISA I/O standard. Information and downloads are available at http://www.ni.com/visa/.

The following example describes the verification that a VISA controller can interact with the instrument. The images shown and the instructions for your instrument and software may differ from the example shown here, so refer to the NI user instructions for more details. Note that the screenshots below are included to be shown as an example only.

Follow the instructions below to send SCPI commands via USBTMC standard or Ethernet:

1. On the PC, open VISA Interactive Control dialog and double-click on the desired instrument resource and press Enter for USBTMC.
2. Enter the IP address and press Enter for Ethernet

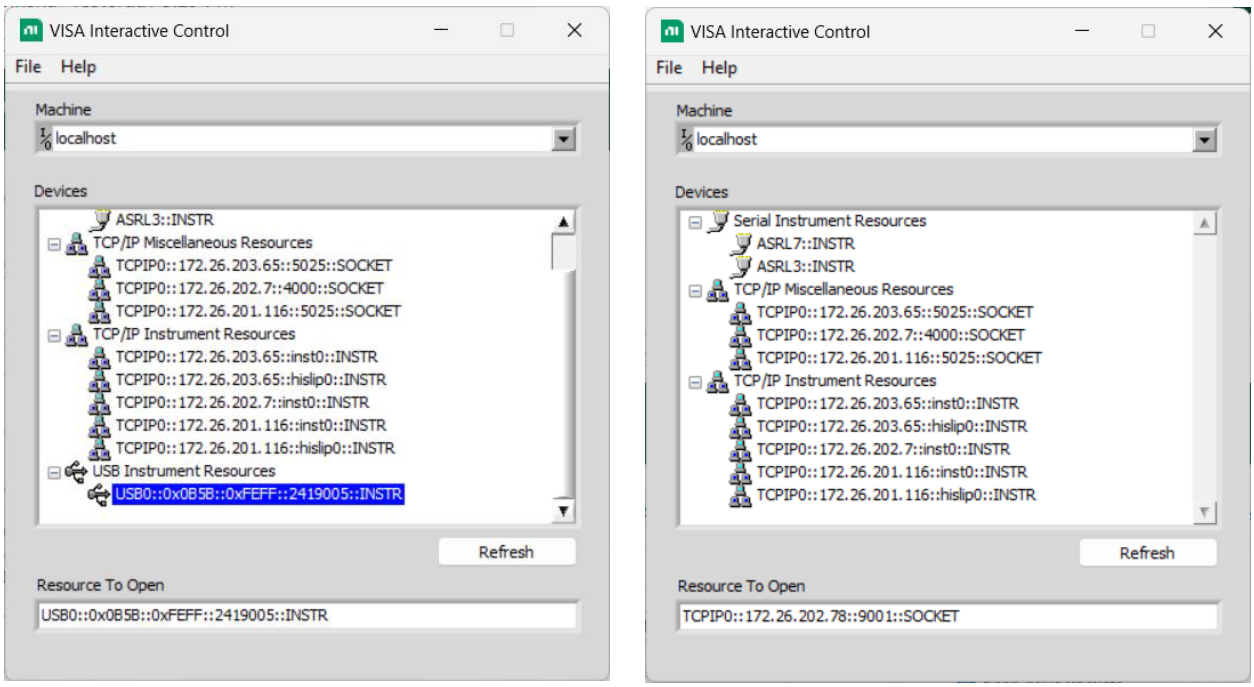

Figure 1-5. VISA Interactive Control Dialog - USBTMC (left); Ethernet (right)

www.tehencom.com

3. Select Input/Output tab and enter the default `*IDN?\n command` and click Query button. Note that this step holds good for USBTMC and Ethernet.

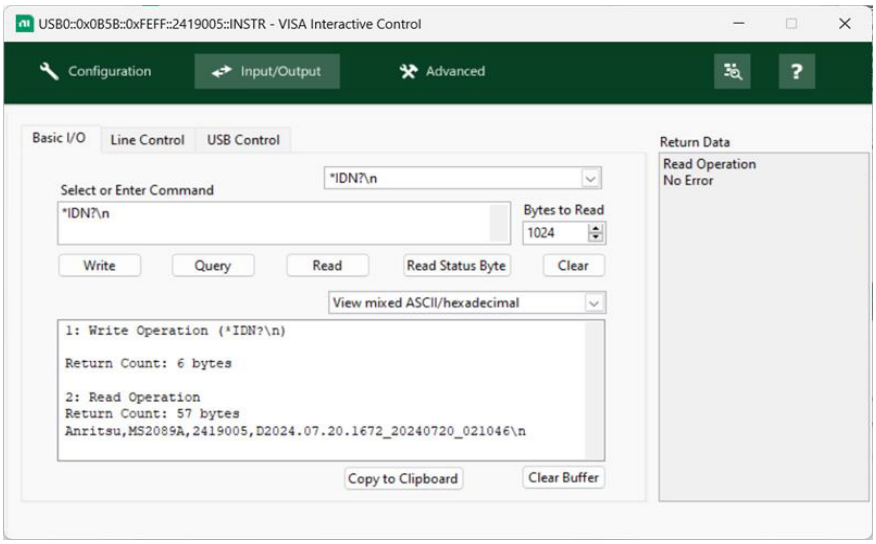

Figure 1-6. VISA Interactive Control - Input/Output Tab (USBTMC)

Note	The NI-VISA controller is not compatible with instruments installed with Secure Communication Option 17.

www.tehencom.com

1-5 SCPI Command Overview

SCPI commands, which are also referred to as SCPI instructions, are messages to the instrument to perform specific tasks and to return data. The following sections provide descriptions of the command syntax and notational conventions, command types and the hierarchical command structure, and command subsystems and data parameter format. For further information about SCPI, refer to the Standard Commands for Programmable Instruments (SCPI) 1999.0 document hosted by the IVI Foundation. A subset of the standard conventions defined in that document as they apply to the MS208xA are covered in this manual.

Command Names

Typical SCPI commands consist of one or more keywords, parameters, and punctuation. SCPI command keywords can be a mixture of upper and lower case characters. As with any programming language, the exact command keywords and command syntax must be used. The syntax of the individual commands is described in detail in the programming command chapters. Unrecognized versions of long form or short form commands or improper syntax will generate an error.

Long Format vs. Short Format

Except for common commands, each keyword has a long and a short form. The short form is a subset of the long form of the command. In this manual, the long form is presented with the short form in upper case and the remainder in lower case. For example, the long form of the command keyword to control the instrument display is `:DISPlay`.

The short form keyword is usually the first four characters of the long form (`:DISP` for `:DISPlay`). The exception to this rule is when the long form is longer than four characters *and* the fourth character is a vowel. In such cases, the vowel is dropped and the short form becomes the first three characters of the keyword. For example, the short form of the keyword `:POWer` is `:POW`.

A mixture of short form keywords with the entire long form keyword of each command is acceptable. For example, `:SENS:FREQuency:STAR` is an acceptable form of the command. However, `:SENS:FREQuen:STAR` is not an acceptable form of the command because `:FREQuen` is not the entire short nor long form of the command keyword.

Command Syntax

The command statement usually starts with a colon ":" and includes a number of keywords and parameters. The leading colon is optional, but each subsequent keyword must be separated by a colon ":" and may be followed by a parameter setting when they are available. The end of the command string and the first command parameter must be separated by a space. For example:

```
:DISPlay:POINtcount 201
```

A comma "," is generally used for separating multiple command parameters, for example:

```
:SYSTem:DATE 2018,10,31
```

Complete command strings may be combined on a single line and separated by a semicolon ";" as follows:

```
:SENSe:FREQuency:STARt 1000; SENSe:FREQuency:STOP 5000
```

Some command keywords may have a keyword parameter suffix to differentiate between multiple instrument features such as multiple trace options. When these features are available, the keyword parameter is identified and enclosed by curly braces. For example, `:TRACe<n>` is entered as `:TRACe1` or `:TRACe3`.

Note	If a keyword parameter is not included in a command, the first option is implied. In the previous paragraph, `:TRACe` is identical to `:TRACe1`. Angle brackets < > enclose keyword and command parameters. Curly braces { } enclose optional command parameters. Square brackets [ ] enclose optional command keywords.

www.tehencom.com

Notational Conventions

The SCPI interface standardizes command syntax and style that simplifies the task of programming across a wide range of instrumentation. As with any programming language, the exact command syntax, and command keywords, must be used. Unrecognized commands or improper syntax will not function and most often produce an error condition. The table below lists the standard notational conventions used in this document.

Table 1-3. Notational Conventions

:	A colon links command keywords together to form commands. The colon is not an actual part of the keyword, but is a signal to the SCPI interface parser. A colon must precede a root keyword immediately following a semicolon (see "Notational Examples" on page 1-20).
;	A semicolon separates commands if multiple commands are placed on a single program line.
[ ]	Square brackets enclose one or more optional keywords.
{ }	Curly braces enclose one or more keyword or command parameters that may be included one or more times.
|	A vertical bar indicates "or" and is used to separate alternative parameter options. For example: `ON|OFF` is the same as `ON` or `OFF`.
< >	Angle brackets enclose keyword and command parameters (see "Data Parameters" on page 1-12).

Command Terminators

The newline character \n (ASCII 10) in the last data byte of a command string is used as a command terminator. Use of a command terminator will reset the command path to the root of the tree.

www.tehencom.com

Data Parameters

Data parameters, referred to simply as "parameters," are the quantitative values used as arguments for the SCPI commands. The parameter type associated with a particular SCPI command is determined by the type of information required to control the particular instrument function. For example, Boolean (`ON|OFF`) type parameters are used with commands that control switch functions. Some command descriptions specify the type of data parameter to be used with each command. The most commonly used parameter types are numeric, extended numeric, discrete, string, and Boolean.

Numeric: Numeric parameters comprise integer numbers or any number in decimal or scientific notation, and may include polarity signs. This includes specific extended values as defined in "Data Parameter Notations" below.

Extended Numeric: Extended numeric parameters include values such as `NAN|INFinity|NINFinity` (not a number | infinity | negative infinity).

Discrete: Discrete parameters, such as `INTernal` and `EXTernal`, are used to control program settings to a predetermined finite value or condition.

Boolean: Boolean parameters represent binary conditions and may be expressed as `ON`, `OFF` or `1`, `0`.

Data Parameter Notations

The following conventions are used to note data parameter descriptions:

Table 1-4. Parameter Notations

<integer>	an unsigned integer without a decimal point (implied radix point)
<numeric_value>	SCPI numeric value: `<NRf>|NAN|INFinity|NINFinity` or other types <NRf> is any of <NR1>|<NR2>|<NR3> <NR1> is a signed integer without a decimal point (implied radix point) <NR2> is a signed number with an explicit radix point <NR3> is a scaled explicit decimal point numeric with an exponent (floating point number) +/- infinity (`INFinity|NINFinity`) and Not-A-Number (`NAN`) values can be specified for parameters of type NR3 with the values of +/- 9.9e37 and 9.91e37, respectively.
<char>	<CHARACTER PROGRAM DATA> Examples: CW, FIXed, UP, and DOWN
<string>	<STRING PROGRAM DATA> ASCII characters enclosed by double quotes, such as `"OFF"`
<block>	IEEE-488.2 block data format (see "Spectrum Trace Data Format")

Spectrum Trace Data Format

Trace data uses SCPI standard (IEEE 488.2) block data format. The data format is '#AXD', where D is a comma separated list of amplitudes (in ASCII) terminated with a newline \n character, X is one or more ASCII digits specifying the number of bytes in D, and A is a single ASCII digit specifying the number of digits in X.

Trace data only contains amplitude. The frequency information for each point is

```
Frequency = start_frequency + (span/(display_points-1))*N
where N = 0, 1, 2, … display_points
```

Unit Suffixes

Unit suffixes are not required for data parameters, provided the values are scaled for the global default units; they do not require a space and they are not case sensitive. The instrument SCPI default units are:

- `HZ` (hertz) for frequency related parameters
- `DB` for power related parameters
- `MS` (milliseconds) for time related parameters
- `M` (meters) for distance related parameters

www.tehencom.com

Query Commands

All commands, unless specifically noted in the commands syntax descriptions, have a query form. As defined in IEEE-488.2, a query is a command with a question mark "?" appended to the command. For example:

```
SENS:FREQ:STAR?
```

When a query form of a command is received, the current setting associated with the command is placed in the output buffer. Query commands always return the short form of the parameter unless otherwise specified. Boolean values are returned as `1` or `0`, even when they can be set as `on` or `off`.

Hierarchical Command Structure

All SCPI commands, except the common commands, are organized in a hierarchical structure similar to the inverted tree file structure used in most computers. The SCPI standard refers to this structure as "the Command Tree." The command keywords that correspond to the major instrument control functions are located at the top of the command tree. The root command keywords for the SCPI command set are shown in Figure 1-7.

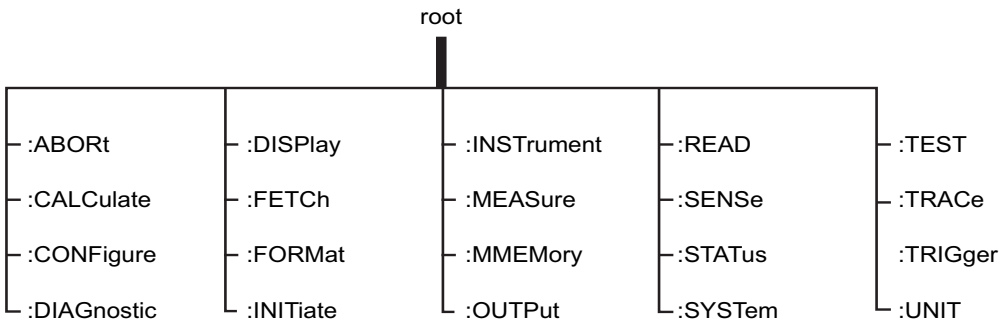

Figure 1-7. SCPI Command Tree

All instrument SCPI commands, except the `:ABORt` command, have one or more subcommands (keywords) associated with them to further define the instrument function to be controlled. The subcommand keywords may also have one or more associated subcommands (keywords). Each subcommand level adds another layer to the command tree. The command keyword and its associated subcommand keywords form a portion of the command tree called a command subsystem. A sample of the `:UNIT` command subsystem is shown in Figure 1-8.

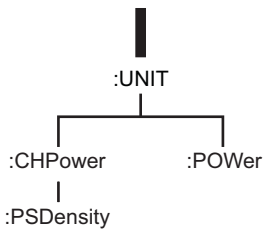

Figure 1-8. SCPI :Sample :UNIT Subsystem

www.tehencom.com

1-6 SCPI Command Types

The MS208xA command set includes the following command types:

- SCPI “common” commands (IEE488.2 mandated commands)
- SCPI required commands (per SCPI 1999.0)
- SCPI optional commands

SCPI Common Commands

Some common commands are defined in the IEEE-488.2 standard and must be implemented by all SCPI compatible instruments. These commands are identified by an asterisk (*) at the beginning of the command. These commands are defined to control instrument status registers, status reporting, synchronization, and other common functions. Examples of common commands supported by the instrument are shown below.

***CLS**

Title: Clear Status Command

Description: This command clears all status data structures in the device (registers and error queue) and forces the Operation Complete state to Idle.

***IDN?**

Title: Identify

Description: This command returns the following information in <string> format separated by commas: manufacturer name ("Anritsu"), model number, serial number, and firmware package number.

***RST**

Title: Reset

Description: This command sets the instrument into a known state that is ready for SCPI command processing. Setting the instrument into a known state includes the following steps:

1. All applications beside the default application of the particular model will be turned off.

2. Settings for all applications (regardless of an application being active) are preset to default values.

3. System settings excluding settings associated with client connections (like Ethernet addresses or DNS) are preset to default values.

4. Pending operations are aborted and the pending operation flag will be reset. The instrument will be forced into the operation complete command idle state (OCIS) and the operation complete query idle state (OQIS) before the pending operation flag is reset.

www.tehencom.com

SCPI Required Commands

The required SCPI commands supported by the instrument are listed below. These commands work in all measurement modes.

Table 1-5. SCPI Required Commands

:STATus
:SYSTem

SCPI Optional Commands

Optional SCPI commands comprise the majority of the MS208xA command set. These commands control most of the programmable functions of the instrument. The top level command subsystems are listed in the table below.

Table 1-6. SCPI Optional Commands

:ABORt	:FETCh	:MMEMory	:SWEep
:CALCulate	:FORMat	:OUTPut	:TEST
:CONFigure	:INITiate	:READ	:TRACe
:CPRI	:INPut	:ROUTE	:TRIGger
:DIAGnostic	:INSTrument	:SENSe	:UNIT
:DISPlay	:MEASure		

The SCPI optional commands are sorted by measurement modes and the commands may be repeated in more than one mode.

1-7 Status System Reporting

The MS2085A/89A status system consists of the following SCPI-defined status-reporting structures:

- The Instrument Summary Status Byte Group
- The Standard Event Status Group
- The Operation Status Group
- The Questionable Status Group

The following paragraphs describe the registers that make up a status group and explain the status information that each status group provides.

Note Parallel Polling is not supported in the MS2085A/89A.

Status Group Registers

In general, a status group consists of a condition register, a transition filter, an event register, and an enable register. Each component is briefly described in the following paragraphs.

Condition Register

The condition register is continuously updated to reflect the current status of the MS2085A/89A. There is no latching or buffering for this register, it is updated in real time. Reading the contents of a condition register does not change its contents.

www.tehencom.com

Event Register

The event register latches transition events from the condition register as specified by the transition filter. Bits in the event register are latched, and once set they remain set until cleared by a query or a *CLS command Event registers are read only.

Enable Register

The enable register specifies the bits in the event register that can produce a summary bit. The MS2085A/89A logically ANDs corresponding bits in the event and enable registers, and ORs all the resulting bits to obtain a summary bit. Summary bits are recorded in the Summary Status Byte. Enable registers are read-write. Querying an enable register does not affect it.

Status Group Reporting

The state of certain MS2085A/89A hardware and operational events and conditions can be determined by programming the status system. Three lower status groups provide status information to the Summary Status Byte group. The Summary Status Byte group is used to determine the general nature of an event or condition and the other status groups are used to determine the specific nature of the event or condition. The following paragraphs explain the information that is provided by each status group. Programming commands for the status system can be found in Section 2-1 “Common Commands”.

Summary Status Byte Group

The Summary Status Byte group, consisting of the Summary Status Byte Enable register and the Summary Status Byte, is used to determine the general nature of a MS2085A/89A event or condition. The bits in the Summary Status Byte provide the following:

Table 1-7. Status Byte Group

Bit #	Bit Name	Description
0,1	Not Used	These bits are always set to 0.
2	Not Used	These bits are always set to 0.
3	Not Used	These bits are always set to 0.
4	Message Available (MAV)	Set to indicate that the MS2085A/89A has data ready in its error queue.
5	Standard Event (ESB)	Set to indicate that the Standard Event Status summary bit has been set. The Standard Event Status register can then be read to determine the specific event that caused the bit to be set.
6	Master Summary Status (MSS/RQS)	Set to indicate that the MS2085A/89A has at least one reason to require service. This bit is also called the Master Summary Status Bit (MSS). The individual bits in the Status Byte are ANDed with their corresponding Service Request Enable Register bits, then each bit value is ORed and input to this bit.
7	Not Used	These bits are always set to 0.

www.tehencom.com

Standard Event Status Group

The Standard Event Status group, consisting of the Standard Event Status register (an Event register) and the Standard Event Status Enable register, is used to determine the specific event that set bit 5 of the Summary Status Byte. The bits in the Standard Event Status register provide the following:

Table 1-8. Standard Event Status Group

Bit #	Bit Name	Description
0	Operation Complete (OP)	Set to indicate that all pending MS2085A/89A operations were completed following execution of the "*OPC" command. For more information, see the descriptions of the *OPC, *OPC?, and *WAI commands in Section 2-1 "Common Commands".
1	Not Used	The bit is always set to 0.
2	Query Error	Set to indicate that a query error has occurred (error -400 in Appendix A, "SCPI Error Table").
3	Device Dependent Error	Set to indicate that a device-dependent error has occurred (errors -300 to -399 in Appendix A, "SCPI Error Table").
4	Execution Error	Set to indicate that an execution error has occurred (errors -200 to -299 in Appendix A, "SCPI Error Table").
5	Command Error	Set to indicate that a command error (usually a syntax error) has occurred (errors -100 to -199 in Appendix A, "SCPI Error Table").
6	Not Used	This bit should be set to 0 (zero).
7	Power ON	Set to indicate that the MS2085A/89A is powered ON and in operation.

Operation Status Group

The Operation Status group, consisting of the Operation Condition register, the Operation Positive Transition register, the Operation Negative Transition register, the Operation Event register, and the Operation Event Enable register, is used to determine the specific condition that set bit 7 in the Summary Status Byte. The bits in the Operation Event register provide the following:

Table 1-9. Operation Status Group

Bit #	Bit Name	Description
0-7	Not Used	This bit should be set to 0 (zero).
8	Sweep Complete	Set to indicate that a sweep is complete.
9	I/Q Capture	Set to indicate that I/Q data capture is in process.
10-15	Not Used	These bits should be set to 0 (zero).

www.tehencom.com

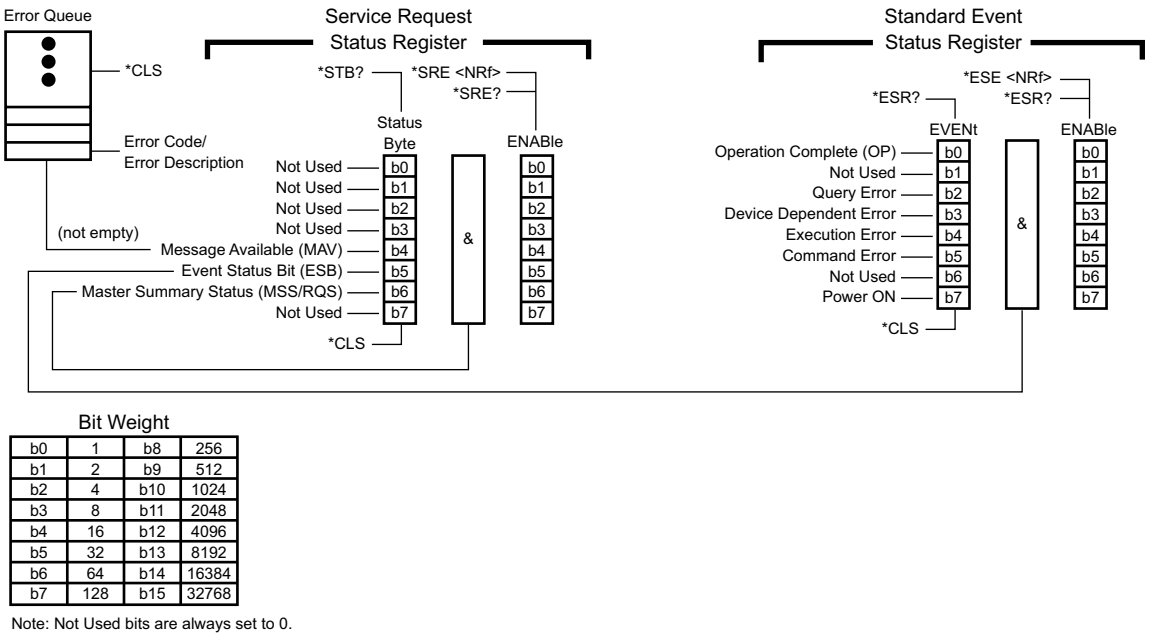

Bit Weight

b0	1	b8	256
b1	2	b9	512
b2	4	b10	1024
b3	8	b11	2048
b4	16	b12	4096
b5	32	b13	8192
b6	64	b14	16384
b7	128	b15	32768

Note: Not Used bits are always set to 0.

Figure 1-9. Status Register Structure

www.tehencom.com

1-8 SCPI Commands

Command subsystems control specific instrument functions and some general purpose functions as described earlier in this text. All command subsystems are identified by the leading keyword in a command statement, as in `:INITiate:CONTinuous`.

The following information is provided for each command described in this guide:

- The command name, see "Command Names" on page 1-10
- The path from the subsystem root command, see "Hierarchical Command Structure" on page 1-13
- The query form of the command (if applicable), see "Query Commands" on page 1-13
- A description of the command function and purpose
- The data parameters used as arguments for the command, see "Data Parameters" on page 1-12 This may include the parameter type, available parameter choices, and numeric ranges and default values.

Refer to the following for the programming command descriptions:

- Chapter 2, "MS209xx Commands"

Refer to the following for an alphabetical list of all supported SCPI commands:

- Appendix A, "Alphabetical SCPI Command List"

Refer to the next section for the programming examples.

www.tehencom.com

1-9 SCPI Command Programming Examples

SCPI commands are sent to port 9001 of the instrument. Command statements read from left to right and from top to bottom. In the command statement below, the `:FREQuency` keyword immediately follows the `:SENSe` keyword with no separating space. A space is used between the command string and its argument.

Notational Examples

`[:SENSe]:FREQuency:STARt <numeric_value>{HZ|KHZ|MHZ|GHZ}`

The following command syntax all produce the same result:

```
:SENSe:FREQuency:STARt 1 MHZ
:SENS:FREQ:STAR 1 MHZ
:sense:frequency:start 1000000
:FREQ:STAR 1000 KHZ
```

Note	Note that the first keyword in the command string does not require a leading colon; however, it is good practice to always use a leading colon for all keywords. Note also that the :SENSe keyword is optional. This is a SCPI convention for all voltage or signal source type instruments that allows shorter command statements to be used.

`:CALCulate:MARKer<n>:X <numeric_value>{HZ|KHZ|MHZ|GHZ}`

The first two commands below set the location of marker 1, the third command sets the location of marker 2:

```
:CALC:MARK:X 1 GHZ
:CALC:MARK1:X 1 GHZ
:CALC:MARK2:X 2ghz
```

`:UNIT:POWer <DBM|DBUV>`

The following command syntax is identical:

```
:UNIT:POWer DBM
:unit:pow dbm
```

`:INITiate:CONTinuous <0|1|ON|OFF>`

The following commands are identical:

```
:INITiate:CONTinuous OFF
:init:cont 0
```

The following is an example of a multiple command statement that uses two separate commands in a single program line:

```
:FREQuency:STARt 10E6;:FREQuency:STOP 20E9
```

Note	A semicolon is used to join the commands and a leading colon used immediately after the semicolon to start the second command.

www.tehencom.com

Spectrum Trace Data via SCPI

This section provides an abbreviated example of setting up and capturing spectrum trace data via SCPI commands. SCPI commands are sent to port 9001 of the instrument.

```
//Set the Start and Stop Frequencies
SENS:FREQ:STAR 88 MHz
SENS:FREQ:STOP 108 MHz

//Set the RBW to 30 kHz
BAND:RES 30 KHz

//Set the Reference Level to -30 dBm
DISP:WIND:TRAC:Y:SCAL:RLEV -30

//Set to single sweep
INIT:CONT OFF

//Get trace amplitude data
TRACE:DATA? 1

//Get number of display points to calculate frequency array
DISP:POIN?
```


www.tehencom.com

C/C++

This example is run on the command line using the USBTMC interface. It sends the *IDN? query to the instrument and prints the response to the console.

```
// IdnExample.cpp : Microsoft Visual Studio-Generated Example
//Usage : IdnExample "USB0::0x0B58::0xFFF9::xxxxxxxx_xxx_xx::INSTR"
//where xxxxxxxx_xxx_xx is the USB Device ID of the instrument.
//Output : The string identity string returned from the instrument.
//VISA Header : visa.h (must be included)
//VISA Libarary : visa32.lib(must be linked with)
#include "stdafx.h"
#include "stdio.h"
#include "string.h"
#include "visa.h"
#define BUFFER_SIZE 255
int main(int argc, char* argv[])
{
ViStatus status; /* For checking errors */
ViSession defaultRM, instr; /* Communication channels */
ViUInt32 retCount; /* Return count from string I/O */
ViChar buffer[BUFFER_SIZE]; /* Buffer for string I/O */
char tempDisplay[BUFFER_SIZE]; /* Display buffer for example */
char *pAddress;
/* Make sure we got our address. */
if ( argc < 2 )
{
printf("Usage: IdnExample
\"USB0::0x0B58::0xFFF9::xxxxxxxx_xxx_xx::INSTR");
printf("\t where xxxxxxxx_xxx_xx is the USB Device ID of your instrument.\n");
return -1;
}
/* Store the address. */
pAddress = argv[1];
/* Begin by initializing the system*/
status = viOpenDefaultRM(&defaultRM);
if (status < VI_SUCCESS)
{
/* Error Initializing VISA...exiting*/
printf("Can't initialize VISA\n");
return -1;
}
```


www.tehencom.com

```
/* USB0::0x0B58::0xFFF9::xxxxxxxx_xxx_xx::INSTR*/
/* NOTE: For simplicity, we will not show error checking*/
/* TODO: Add error handling. */
status = viOpen(defaultRM, pAddress, VI_NULL, VI_NULL, &instr);
/* Set the timeout for message-based communication*/
/* TODO: Add error handling. */
status = viSetAttribute(instr, VI_ATTR_TMO_VALUE, 120000);
/* Ask the device for identification */
sprintf(buffer, "*IDN?\n");
status = viWrite(instr, (unsigned char *)&buffer[0], 6, &retCount);
status = viRead(instr, (unsigned char *)buffer, BUFFER_SIZE, &retCount);
/* TODO: Add code to process data. */
strncpy(tempDisplay, buffer, retCount);
tempDisplay[retCount] = 0; /* Null-terminate display string. */
printf("*IDN? Returned %d bytes: %s\n", retCount, tempDisplay);
/* Close down the system */
/* TODO: Add error handling. */
status = viClose(instr);
status = viClose(defaultRM);
return 0;
}
```


www.tehencom.com

Programming Examples

Raw Socket Connection

import socket from time import sleep, time

```
class SocketConnection:

"""Provides a means to connect and send SCPI commands to the DUT using a raw TCP
socket."""

def __init__(self, ipAddress):
"""Initializes an instance of SocketConnection class
@param ipAddress The IP address of the device"""

# split out port number if given
splitIpAddress = ipAddress.split(':')

assert len(splitIpAddress) > 0
assert len(splitIpAddress) <= 2
self._ipAddress = splitIpAddress[0]

#assign port
if len(splitIpAddress) == 2:
self._portNumber = int(splitIpAddress[1])
else:
self._portNumber = 9001

self._socketConnection = None

self._timeoutInSec = 120
self._socketReadSize = 4096
self.__nonBulkDataSizeCuttoff = 32768
# Time to let the other end of the connection close
self.__timeoutAfterCloseInSec = 1
self._terminatedBlockResponse = False
self.prefix = ''
self._verbose = False

self._establishConnection()
```


www.tehencom.com

```
def __del__(self):
"""This gets called by the garbage collector so it is possible that the connection
will remain open for a while before this gets collected."""
self._closeConnection()

def getpeername(self):
return self._ipAddress, self._portNumber

def settimeout(self, *args, **kwargs):
return self._socketConnection.settimeout(*args, **kwargs)

def expectTerminatedBlockResponse(self, newval=None):
if newval is not None:
self._terminatedBlockResponse = newval
return self._terminatedBlockResponse

def sendWriteCommand(self, scpiCommand):
"""Sends a SCPI write command. @param scpiCommand The SCPI command to send."""

scpiCommand = self.prefix + scpiCommand
try:
returnValue = self._socketConnection.sendall(scpiCommand + "\n")
assert returnValue is None, "Error sending command: " + scpiCommand
if self._verbose:
if len(scpiCommand) < self.__nonBulkDataSizeCuttoff:
print(scpiCommand + " sent successfully")
else:
print( "sent long scpi command of length: " + str(len(scpiCommand)))
except socket.error as  msg:
assert False, "Failed to send SCPI command: a socket error occurred (Error code: "
+ str(msg[0]) + ", Error message: " + str(msg[1]) + ")"
return
```


www.tehencom.com

```
def sendQueryCommand(self, scpiCommand):
"""Sends a SCPI query command and return the response. @param scpiCommand The SCPI
query to send. @return The result of the SCPI command."""
scpiCommand = self.prefix + scpiCommand
try:
returnValue = self._socketConnection.sendall(scpiCommand + "\n")
assert returnValue is None, "failed to send command"
if self._verbose:
print(scpiCommand + " sent successfully")

# Read 1 byte to check for a block data response header
data = self._socketConnection.recv(1)
assert len(data) > 0, "No data returned for query"
if len(data) > 0 and data[0] == '#':
# Block data response
data = self._getBlockDataResponse()
elif len(data) > 0 and data[0] == '\n':
# Check for a response string that only contains a newline. Remove the newline and
return empty data.
data = data[:-1]
elif len(data) > 0:
# ASCII response: receive until the entire response is read
while True:
data += self._socketConnection.recv(self._socketReadSize)

assert len(data) < self.__nonBulkDataSizeCuttoff, \
"No newline character found in response to "  + scpiCommand + " SCPI command."

# Check for a new line at the end of the response
if data[-1] == '\n':
break;

# Remove the trailing \n from the response
data = data[:-1]
if self._verbose:
print('Data received: "%s"' % data)
```


www.tehencom.com

```
except socket.error as msg:
assert False, "Failed to send SCPI command: a socket error occurred \n" +
msg.__str__()
return data


def _establishConnection(self):
"""Establishes a connection. The call will fail if a connection is already open."""
assert self._socketConnection is None, "connection should not already be open"
try:
self._socketConnection = socket.socket(socket.AF_INET, socket.SOCK_STREAM)
self._socketConnection.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
self._socketConnection.settimeout(self._timeoutInSec)
self._socketConnection.connect((self._ipAddress, self._portNumber))
self._socketConnection.setsockopt(socket.IPPROTO_TCP, socket.TCP_NODELAY, 1)
except socket.error as msg:
assert False, "Failed to establish DUT connection (Error code: " + str(msg[0]) + ",
Error message: " + str(msg[1]) + ")"


def _closeConnection(self):
"""Closes the socket connection and asserts that it closed. This informs the other
end of the socket that it should close but it may take some time depending on
implementation, network conditions, etc."""
if self._socketConnection is not None:
self._socketConnection.shutdown(socket.SHUT_RDWR)
self._socketConnection.close()
self._socketConnection = None
sleep(self.__timeoutAfterCloseInSec)
assert self._socketConnection is None, "Socket connection not closed"


def _getBlockDataResponse(self):
""" Receives a SCPI block data response of the form 'AXD' where A is a single ASCII
byte specifying the number of digits in X, X is one or more ASCII bytes specifying
the number of bytes in D, and D is one or more bytes containing the response binary
data."""
numSizeBytes = int(self._socketConnection.recv(1))


assert numSizeBytes > 0, "The definite-length empty block response must be #10 not
#0."
```


www.tehencom.com

```
numDataBytesLeft = int(self._socketConnection.recv(numSizeBytes))
responses = []
readBuffer = bytearray(numDataBytesLeft)
view = memoryview(readBuffer)

timeoutSeconds = self._socketConnection.gettimeout()
lastReadTime = time()

while numDataBytesLeft > 0:
numBytesRead = self._socketConnection.recv_into(view, numDataBytesLeft)
if numBytesRead > 0:
lastReadTime = time()

dt = time() - lastReadTime
if dt > timeoutSeconds:
raise Exception('Timeout after %d ms: Only read %d/%d bytes'
% (dt, len(readBuffer),
len(readBuffer) + numDataBytesLeft))

view = view[numBytesRead:]
numDataBytesLeft = numDataBytesLeft - numBytesRead

if self._terminatedBlockResponse:
blockTerminator = self._socketConnection.recv(2)
assert blockTerminator in ('\r\n', '\n')

if self._verbose:
print("Read bytes of block data: ", len(readBuffer))
return readBuffer

def reset(self, delay_seconds=-1):
"""Resets the established connection @param delay_seconds: Wait time between
closing the connection and attempting tore-establish the connection.  This is
useful when rebooting an instrument."""
self._closeConnection()
```


www.tehencom.com

```
if delay_seconds >= 0:
sleep(delay_seconds)
try:
self._establishConnection()
except socket.error as msg:
assert False, "Failed to establish DUT connection (Error code: " + str(msg[0]) + ",
Error message: " + str(msg[1]) + ")"
else:
reset_timeout = 300  # 300 seconds == 5 minutes == max polling time
time.sleep(5)  # Fixed delay before attempting to reconnect
while reset_timeout > 0:
try:
self._socketConnection = socket.socket(socket.AF_INET, socket.SOCK_STREAM)
self._socketConnection.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
self._socketConnection.settimeout(self._timeoutInSec)
self._socketConnection.connect((self._ipAddress, self._portNumber))
break
except Exception as msg :
self._socketConnection.close()
self._socketConnection = None
sleep(1)
reset_timeout -= 1
if reset_timeout <= 0:
assert False, "Failed to establish DUT connection (Error code: " + str(msg[0]) + ",
Error message: " + str(msg[1]) + ")"
```


www.tehencom.com

www.tehencom.com

Chapter 2 — MS2089A Commands

2-1 Common Commands

***CLS**

Title: Clear Status Command

Description: This command clears all status data structures in the device (registers and error queue) and forces the Operation Complete state to Idle.

***ESE <numeric_value>**
***ESE?**

Title: Standard Event Status Enable

Description: This command provides access the Standard Event Status Enable Register.

Refer to the Status System Reporting section within this manual or IEEE 488.2, section 11.5.1 for more information about each supported bit.

Value ranges from 0 to 255.

Query returns a NR1 Numeric response.

Refer to *ESR? for the list of supported bit values.

Parameter(s): <numeric_value>

***ESR?**

Title: Standard Event Status

Description: This command queries the Standard Event Status Register.

Refer to the Status System Reporting section within this manual or IEEE 488.2, section 11.5.1 for more information about each supported bit.

Query returns a NR1 Numeric response.

Supported bits:

bit 0: Operation Complete (OP)

bit 1: Not Used

bit 2: Query Error

bit 3: Device Dependent Error

bit 4: Execution Error

bit 5: Command Error

bit 6: Not Used

bit 7: Power On

***IDN?**

Title: Identify

Description: This command returns the following information in <string> format separated by commas: manufacturer name ("Anritsu"), model number, serial number, and firmware package number.

www.tehencom.com

***OPC**
***OPC?**

Title: Operation Complete

Description: The *OPC command causes the device to set the OPC bit of the Standard Event Status Register on the next transition of the No Operation Pending flag from false to true.

The *OPC? command returns 1 in the response whenever the No Operation Pending Flag is true, blocking until the operation is complete.

Note that for IQ streaming, *OPC? will return 1 immediately so that ABORt is not blocked.

***OPT?**

Title: Option Identification

Description: The *OPT command queries the device to identify reportable device options. The response is a list of numeric options separated by commas. If no options are available, a value of "0" will be reported

***RCL <numeric_value>**

Title: Recall Setup

Description: Recalls the saved setup from the desired slot, 1-9. If no setup exists at that slot, will produce an error.

Recalling from slot 0 will recall the instrument's last auto-saved setup.

Parameter(s): <numeric_value>

***RST**

Title: Reset

Description: This command sets the instrument into a known state that is ready for SCPI command processing. Setting the instrument into a known state includes the following steps:

1. All applications beside the default application of the particular model will be turned off.

2. Settings for all applications (regardless of an application being active) are preset to default values.

3. System settings excluding settings associated with client connections (like ethernet addresses or DNS) are preset to default values.

4. Pending operations are aborted and the pending operation flag will be reset. The instrument will be forced into the operation complete command idle state (OCIS) and the operation complete query idle state (OQIS) before the pending operation flag is reset.

www.tehencom.com

***SAV <numeric_value>**

Title: Save Setup

Description: Saves the current instrument configuration to internal storage. Differs from :MMEMory:STORe:STATe in that the setup file is not stored in a user-accessible location.

The command accepts a number 0-9, where numbers 1-9 will save a setup to that numbered slot, and *RCL <n> will recall the setup from that slot.

Entering 0 will instead manually trigger the instrument's auto-save functionality. The instrument saves settings every 5 minutes and when shut down safely, but this may be used for situations where you wish to have a guaranteed save.

The saved setups in slots 1-9 are deleted during a User File Reset and Reset All.

Parameter(s): <numeric_value>

***SRE <numeric_value>**
***SRE?**

Title: Service Request Enable

Description: This command provides access to the Service Request Enable Register.

Refer to the Status System Reporting section within this manual or IEEE 488.2, section 11.5.1 for more information about each supported bit.

Refer to *STB? for the list of supported mask bit values.

Bit 6 (MSS) cannot be set as per IEEE 488.2 standard.

Query returns a NR1 Numeric response.

Parameter(s): <numeric_value>

***STB?**

Title: Status Byte Query

Description: This command queries the Status Byte Register.

Refer to the Status System Reporting section within this manual or IEEE 488.2, section 11.5.1 for more information about each supported bit.

Query returns a NR1 Numeric response.

Supported bits:

bit 0: Not Used

bit 1: Not Used

bit 2: Error Queue (ERRQ)

bit 3: Not Used

bit 4: Message Available (MAV)

bit 5: Standard Event Status (ESB)

bit 6: Master Summary Status (MSS)

bit 7: Not Used

www.tehencom.com

***TST?**

Title: Self Test

Description: Causes the unit to perform a full internal self-test.

Status messages that indicate self-test results are placed in the error queue in the order they occur. Bits in the status register are also affected.

Returns the number of errors placed in the error queue. 0 means the unit passed self-test.

***WAI**

Title: Wait-to-Continue Command

Description: This command causes the device to execute no further commands or queries until the No Operation Pending flag is TRUE.

2-2 System Commands

:DIAGnostic:MEMory?

Title: Used Memory

Description: This command returns the total memory available on the instrument, the free memory, and the memory used by the backend process in kB.

If the instrument runs into an error while retrieving system memory data, "nan,nan,nan" will be returned as the response and a "-100" (SCPI command error) will be placed in the SCPI error queue.

:DISPlay:LANGuage <EN|ES|ZH|JA|FR|KO>
:DISPlay:LANGuage?

Title: System Display Language

Description: This command sets and queries the system's displayed language

Parameter(s): <EN | ES | ZH | JA | FR | KO>

Query Return: EN | ES | ZH | JA | FR | KO

Default Value: EN

:DISPlay[:WINDow]:TEXT:STATe <0 | 1 | ON | OFF>
:DISPlay[:WINDow]:TEXT:STATe?

Title: Display Window Text State

Description: This command requires Option 0007 Secure Data.

Set or query the Display Text State for user display.

When enabled, parameters will be visible as normal.

When disabled, parameters will be hidden.

The instrument will function normally even when this setting is disabled.

Changing state from disabled to enabled presets all applications.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

:FETCh:GPS?

Title: Basic GPS Information

Description: This command returns the timestamp, latitude, and longitude of the device. The response is a comma-delimited ASCII response of one of the following forms: NO FIX or GOOD FIX,<timestamp>,<latitude>,<longitude>

If no GPS fix is currently available, the first response form (NO FIX) is returned.

If the GPS does have a fix, the second response form (GOOD FIX) is returned.

<timestamp> is in ISO8601 format. The timestamp provides the 24-hour time, and will include the year/date and/or UTC offset if the hardware supports it. If no UTC offset is provided, the time is in UTC time.

<latitude> and <longitude> are specified in decimal degrees.

:FETCh:GPS:ALL?

Title: Full GPS Information + Satellite System Information

Description: This command returns the fix timestamp, latitude, longitude, altitude and information on the satellites used for the last fix and the GNSS systems they are from. The response is in JSON format in the one of the following forms: {"fix":"GPS OFF"}

or {"fix":"GOOD FIX","timestamp":<timestamp>,"latitude":<latitude>,"longitude":<longitude>,"altitude":<altitude>, "satellitesUsed":<satellitesUsed>,"satellites":[{"name":"GPS","count":x}, {"name":"Galileo","count":x}, {"name":"GLONASS","count":x}, {"name":"BeiDou","count":x}]} {"name":"SBAS","count":x}]} <timestamp> is in ISO8601 format. The timestamp provides the 24-hour time, and will include the year/date and/or UTC offset if the hardware supports it. If no UTC offset is provided, the time is in UTC time.

<latitude> and <longitude> are specified in decimal degrees.

<altitude> specifies the current altitude relative to mean sea level, in meters\.

All satellite systems will be present with a count of 0 if they are not used in the fix.

:FETCh:GPS:FULL?

Title: Full GPS Information

Description: This command returns the timestamp, latitude, longitude, altitude, and satellite count of the device. The response is a comma-delimited ASCII response of one of the following forms: NO FIX or GOOD FIX,<timestamp>,<latitude>,<longitude>,<altitude>,<satellites>

If no GPS fix is currently available, the first response form (NO FIX) is returned.

If the GPS does have a fix, the second response form (GOOD FIX) is returned.

<timestamp> is in ISO8601 format. The timestamp provides the 24-hour time, and will include the year/date and/or UTC offset if the hardware supports it. If no UTC offset is provided, the time is in UTC time.

<latitude> and <longitude> are specified in decimal degrees.

<altitude> specifies the current altitude relative to mean sea level, in meters.

<satellites> specifies an integer count of the number of satellites currently used in the fix.

www.tehencom.com

:FETCh:GPS:LAST?

Title: Last GPS Fix

Description: This command returns the timestamp, latitude, longitude, and altitude of the last fixed GPS result. The response is a comma-delimited ASCII response of one of the following forms: NO FIX or GOOD FIX,<timestamp>,<latitude>,<longitude>,<altitude> If a GPS fix has never been acquired, the first response form (NO FIX) is returned.

If a GPS fix was previously acquired, the second response form (GOOD FIX) is returned.

<timestamp> is in ISO8601 format. The timestamp provides the 24-hour time, and will include the year/date and/or UTC offset if the hardware supports it. If no UTC offset is provided, the time is in UTC time.

<latitude> and <longitude> are specified in decimal degrees.

<altitude> specifies the current altitude relative to mean sea level, in meters.

:INSTrument:APPLication:STATe <SPA|HIPM|CAA|VNA|VVM>,<0 | 1 | ON | OFF>

Title: Activate or Deactivate Application

Description: This command turns the specified application ON or OFF one at a time. When an application is turned ON (i.e. activated), it is loaded into memory and can be used to make measurements. An application must be activated before it will respond to commands. Please expect some delay in the application response to a command right after being turned on. The delay will vary depending on the application type and the options being installed. When an application is turned OFF (i.e. deactivated), any measurements it is making are stopped and it is unloaded from memory. Attempting to turn ON the same application twice or turn OFF an application that is not currently ON is not permitted and will result in an execution error (-200).

Attempting to turn on a different application (not the currently active application) requires turning the current application OFF. Otherwise, it will result in an execution error. To turn off an application uses the :INSTrument:APPLication:STATe command.

Unlike INSTrument:SELect, which selects a given application and makes it active if it is not already active, this command can be used to activate an application without selecting it.

If the requested application is the selected application (which can be queried with INSTrument:SELect?), turning it OFF will cause the current application selection to be reported as NONE via INSTrument:SELect?.

This command takes two parameters. The first parameter is a string value that specifies which application should be turned ON or OFF. The permitted values of this parameter are the same as those used by the INSTrument:SELect command. The second parameter is a Boolean value that specifies whether the application should be turned ON or OFF.

After a reset, the default selected application is the only active application.

Parameter(s): <SPA|HIPM|CAA|VNA|VVM>,<0 | 1 | ON | OFF>

:INSTrument:CATalog:ACTive?

Title: List Active Applications

Description: This command queries all active applications. The response is returned as a comma delimited list of application names. The application names are the same as those returned by the INSTrument:CATalog:FULL? query or used as parameters to the INSTrument:SELect command.

If no applications are currently active, this query will return NONE.

www.tehencom.com

:INSTrument:CATalog:ALL?

Title: Query Available Applications with all information

Description: This query returns a JSON list of avaialble applications with metadata including active status, appId modes and SCPI API version. [{"name":"SPA", "active":"true", "appId":"1","modes":["SPEC","NRAD"], "version": 1}, {"name":"VNA", "active":"false", "appId":"26","modes":["VNA"], "version": 1}, {"name":"SYSTEM", "version":1 }]

The list will always contain at least one item since the System application will always be included.

:INSTrument:CATalog:FULL?

Title: Query Available Applications

Description: This query returns a list of string - number pairs. The string contains the name of the available application. The immediately following NR1-formatted number is its associated application number. All response data elements are comma separated.

If no application is available, a null string followed by a zero is returned.

:INSTrument:NSELect <numeric_value>
:INSTrument:NSELect?

Title: Select Application by Number

Description: Sets the selected application based on the value of <integer>. The query version returns the number associated with the current application. The list of valid integers and the applications they correspond to can be queried with INSTrument:CATalog:FULL?

Selecting a different application (not the currently active application) requires turning the current application OFF. Otherwise, it will result in an execution error. To turn off an application uses the :INSTrument:APPLication:STATe command.

If no applications are active, the query version of this command will return 0.

Parameter(s): <numeric_value>

:INSTrument[:SELect] <SPA|HIPM|CAA|VNA|VVM>
:INSTrument[:SELect]?

Title: Select Application by Name

Description: Sets the selected application based on the application name specified by <identifier>. The <identifier> is a valid application name (character data). The list of valid application names can be queried with INSTrument:CATalog:FULL?

Selecting a different application (not the currently active application) requires turning the current application OFF. Otherwise, it will result in an execution error. To turn off an application uses the :INSTrument:APPLication:STATe command.

The query version returns the name of the current application.

If no applications are active, the query version of this command will return NONE.

Parameter(s): <SPA | HIPM | CAA | VNA | VVM>

Query Return: NONE | SPA | VNA | HIPM | VVM | CAA

Default Value: NONE

www.tehencom.com

:MMEMory:CATalog:DIRectory? <string>,<string>

Title: Memory Catalog Directory

Description: Returns the non-recursive contents of the memory specified by the MSUS and DIRECTORY parameters. Both parameters are case sensitive.

Parameter 1: Directory. Use "/" as a directory separator. Note that this parameter should NOT be an empty string. To access the root directory, pass in "/" as the first parameter.

Parameter 2: MSUS (Use :MMEMory:CATalog:MSUSs query command to retrieve the list of available storage devices).

For example:

MMEMory:CATalog:DIRectory? "/", "USB1-1"

The response is formatted as follows: <total space used on MSUS>,<total space available on MSUS>,{<file entry1>},..{<file entryN>} where <file entry> is: <file or directory name>,<file type>,<file size>

Parameter(s): <string>,<string>

:MMEMory:CATalog:DIRectory:SIZE? <string>,<string>

Title: MMemory Catalog Directory Size

Description: This command is query-only and returns the size of a given directory. It has two parameters. Both are case sensitive.

<directory>,<msus>

Parameter 1: The full path of a directory to query the size. Use "/" as a directory separator. Note that this parameter should NOT be an empty string. To access the root directory, pass in "/" as the first parameter.

Parameter 2: MSUS (Use :MMEMory:CATalog:MSUSs query command to retrieve the list of available storage devices).

For example:

MMEMory:CATalog:DIRectory:SIZE? "/", "USB1-1"

The response is a single ASCII string of the size of the given directory.

Parameter(s): <string>,<string>

:MMEMory:CATalog:MSUSs?

Title: Memory Catalog Msuss

Description: Returns a list of all available mass storage devices present, formatted as follows: <Device Name 1>,<Device Name 2>,...<Device Name N>

For example, sending:

MMEMory:CATalog:MSUSs?

could return:

Internal,USB1-1

www.tehencom.com

:MMEMory:CDIRectory <string>
:MMEMory:CDIRectory?

Title: Default Mass Storage Directory

Description: This command selects the default directory on the default mass storage device (see :MMEMory:MSIS) for use with MMEMory commands. The parameter is case sensitive. Use "/" as a directory separator.

For example:

MMEMory:CDIRectory "/example_folder"

The set command will fail and an error is reported if the requested directory does not exist. Note that the query command returns the name of the default directory that was previously set and the device does not check whether the directory is still present.

Parameter(s): <string>

Default Value: /

:MMEMory:COPY <string>,<string>,<string>,<string>

Title: Copy File

Description: This command copies the specified source file into a new file located at the specified destination location. Four parameters are required for this command:

1. Source File Location: The file path to the file to be copied.

2. Source MSUS: The mass storage device the file is located in (i.e. Internal).

3. Destination File Location: The destination file path that the file should be copied to.

4. Destination MSUS: The mass storage device that the destination file should be written to (i.e. Internal).

For example:

MMEMory:COPY "/example_file.ext", "Internal", "/example_file.ext", "USB1-1"

Please note that if a file already exists at the destination location or if the source file does not exist, the command will fail to execute and add an execution error into the SCPI error queue. This command will only copy files. If a directory path is passed in as a parameter, the command will fail to execute.

Parameter(s): <string>,<string>,<string>,<string>

www.tehencom.com

:MMEMory:CREate:DIRectory <string>,<string>

Title: Create Directory

Description: Creates a directory at the specified mass storage device. Both parameters are case sensitive.

Parameter 1: Directory. Use "/" as a directory separator.

Parameter 2: MSUS (Use :MMEMory:CATalog:MSUSs query command to retrieve the list of available storage devices)

For example:

MMEMory:CREate:DIRectory "/example_folder", "USB1-1"

If the intermediate directories in the path don't exist, the command will automatically create them. Common causes of the command failure are:

- The MSUS device is not present (Use :MMEMory:CATalog:MSUSs query command to retrieve the list of available storage devices)

- The total space available on MSUS device is not big enough (Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS)

Parameter(s): <string>,<string>

www.tehencom.com

:MMEMory:DATA <string>,<string>,<block data>
:MMEMory:DATA? <string>,<string>

Title: File Transfer

Description: This command imports/exports a file to/from the instrument. Data is transferred to/from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

This set command takes three parameters:

1. File Path: The path of the file to be written

2. Msus: The mass storage device to write the file to

3. Block Data: The data to be written to the instrument in block data format

If any directories in the file path do not exist, the instrument will automatically create the required directories. Please note that the maximum file transfer size to the instrument is 25 MB.

The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

The query command takes two parameters.

1. File Path: The path to the file to be retrieved.

2. Msus: The mass storage device to retrieve the file from.

The file is returned in block data format with an ASCII header The query command will return a #10 if the file cannot be found.

Set Command Parameter(s): <string>,<string>,<block data>

Query Command Parameter(s): <string>,<string>

:MMEMory:DELete:DIRectory <string>,<string>

Title: Delete Directory

Description: Deletes the specified directory and all its content at the specified mass storage device. The two parameters for this command are directory name and mass storage device. Both parameters are case sensitive. Use "/" as a directory separator. To delete the root folder in a specified mass storage device, enter "/" for directory name parameter.

For example:

MMEMory:DELete:DIRectory "/example_folder", "USB1-1"

The available mass storage devices can be retrieved by using the :MMEMory:CATalog:MSUSs command. The command will fail if the directory doesn't exist or the mass storage device is not present.

Parameter(s): <string>,<string>

www.tehencom.com

:MMEMory:DELete:FILe <string>,<string>

Title: Delete File

Description: Deletes the specified file at the specified mass storage device. The two parameters for this command are file name with relative path and mass storage device. Both parameters are case sensitive. Use "/" as a directory separator.

For example:

MMEMory:DELete:FILe "/example_folder/example_file.ext", "USB1-1"

The available mass storage devices can be retrieved by the :MMEMory:CATalog:MSUSs command. The command will fail if the file doesn't exist or the mass storage device is not present.

Parameter(s): <string>,<string>

:MMEMory:EJECt <string>

Title: Eject USB drive

Description: This command safely ejects (unmounts) a USB drive from the instrument. Following this command, a USB drive can be safely removed from the instrument. See :MMEMory:CATalog:MSUSs for more information on obtaining the name of the USB drive(s) currently mounted on the instrument.

For example:

MMEMory:EJECT "USB1-1"

Parameter(s): <string>

:MMEMory:LOAD:STATe <numeric_value>,<string>,<string>

Title: Load State

Description: This command recalls the specified setup. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Numeric Value: currently unused. Send a 0.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension is optional.

3. MSUS: Device to recall the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:LOAD:STATe 0,"/example_setup_file", "Internal"

The model of the device that the setup was created in must match the model of the device to recall in; otherwise, the recall will be rejected. The options of the device that the setup was created in must be enabled in the device to recall in; otherwise, the recall will be rejected.

Parameter(s): <numeric_value>,<string>,<string>

www.tehencom.com

:MMEMory:LOAD:TRACe <string>,<string>,<string>

Title: Load Trace

Description: This command recalls the specified measurement and setup. After recall all traces will have update state turned off, but sweeping will continue with the recalled setup. This means that traces will retain the recalled measurement data until the trace update state is turned on. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Label: Used to specify which trace to recall. Currently, the label only supports recalling all traces. Send an empty string or "ALL" to load all traces.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension is optional.

3. MSUS: Device to recall the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:LOAD:TRACe "ALL", "/example_measurement_file", "Internal"

The model of the device that the measurement was saved in must match the model of the device to recall in; otherwise, the recall will be rejected. The options of the device that the measurement was saved in must be enabled in the device to recall in; otherwise, the recall will be rejected.\

Parameter(s): <string>,<string>,<string>

:MMEMory:MSIS <string>
:MMEMory:MSIS?

Title: Default Mass Storage Device

Description: This command selects the default device for use with MMEMory commands. The mass storage device parameter is case sensitive and must match a device returned from the :MMEMory:CATalog:MSUSs? command

For example:

MMEMory:MSIS "Internal"

If Secure Data option is installed, the query command will return the next available external storage device.

If no external storage device is plugged in, the query command returns "None".

Parameter(s): <string>

Default Value: Internal

www.tehencom.com

:MMEMory:STORe:STATe <numeric_value>,<string>,<string>

Title: Store State

Description: This command saves the current setup to the specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive. If a file with the resolved name already exists, it will be overwritten.

Parameters:

1. Numeric Value: currently unused. Send a 0.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

3. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:STORe:STATe 0,"/example_setup_file", "Internal"

A common cause of the command failure is not having enough space available on MSUS to save the setup. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS.

This command is disabled if Secure Data Option is available and enabled.

Parameter(s): <numeric_value>,<string>,<string>

:MMEMory:STORe:TRACe <string>,<string>,<string>

Title: Store Trace

Description: This command saves the current measurement data along with the current setup to the specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive. Parameters:

1. Label: Used to specify which trace to save. Currently, the label only supports saving all traces. Send an empty string or "ALL" to store all traces.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

3. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:STORe:TRACe "ALL", "/example_measurement_file", "Internal"

A common cause of the command failure is not having enough space available on MSUS to save trace. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS.

Parameter(s): <string>,<string>,<string>

www.tehencom.com

:OUTPut:ROSCillator:STATe <0 | 1 | ON | OFF>
:OUTPut:ROSCillator:STATe?

Title: 10MHz Reference Output State

Description: This command enables or disables the 10MHz reference output. The query returns 1 if 10MHz reference output is enabled; otherwise, returns 0. Not available on the MS2080A or MS2070A.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:BIAS:EXTernal:CURRent?

Title: External Bias Current

Description: This command queries the actual bias current in A.

[:SENSe]:BIAS:EXTernal:STATe <0 | 1 | ON | OFF>
[:SENSe]:BIAS:EXTernal:STATe?

Title: External Bias On/Off

Description: This command enables or disables the external bias. The query returns 1 if external bias is enabled; otherwise, returns 0.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:BIAS:EXTernal:TRIPped[:STATe]?

Title: External Bias Fault

Description: This command queries whether the external bias is tripped. The query returns 1 for tripped; otherwise, returns 0.

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:BIAS:EXTernal:TRIPped[:STATe]:CLEar

Title: Clear External Bias Fault

Description: This command clears the external bias tripped status. See command [:SENSe]:BIAS:EXTernal:TRIPped[:STATe] for retrieving the current tripped status.

[:SENSe]:BIAS:EXTernal:VOLTage <numeric_value>
[:SENSe]:BIAS:EXTernal:VOLTage?

Title: External Bias Voltage

Description: This command sets the desired voltage for the external bias. The query returns the actual bias voltage in V.

Parameter(s): <numeric_value>

www.tehencom.com

[:SENSe]:FREQuency:REFerence:SOURce?

Title: Frequency Reference Source

Description: Returns the current frequency reference source used by the instrument, as specified in the following table:

Return value: Description

GPS: GPS High Accuracy

ACQ: Acquiring GPS Reference

INT: Internal Standard Accuracy

HI: Internal High Accuracy

EXT: External (10 MHz) Reference

Query Return: ACQ | EXT | GPS | HI | INT

Default Value: INT

[:SENSe]:RF:SAFE:MODE <0 | 1 | ON | OFF>
[:SENSe]:RF:SAFE:MODE?

Title: RF Safe Mode

Description: This command enable or disable RF safe mode state

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:TIME:REFerence:SOURce?

Title: Time Reference Source

Description: Returns the current time reference used by the instrument, as specified in the following table:

Return value Description

GPS GPS High Accuracy

INT Internal Standard Accuracy

HI Internal High Accuracy

Query Return: GPS | HI | INT

Default Value: INT

www.tehencom.com

:SYSTem:COMMunicate:LAN:CONFig <string>,[<string>],[<string>]
:SYSTem:COMMunicate:LAN:CONFig?

Title: Static LAN Configuration

Description: This command set and queries the static ethernet configuration of the device. The static configuration allows user to specify the ip, gateway, and subnet mask of the unit on a network. Parameters:

- Static IP Address: The desired IP address of the unit.

- Gateway: (optional)The network gateway

- Subnet Mask: (optional) The subnet mask of the network the device is connected to.

For a subnet mask of 255.255.255.0(/24), you only have a valid host IP range of x.x.x.1-x.x.x.254. The first IP in the subnet (x.x.x.0) is reserved for the network ID and the last one (x.x.x.255) is reserved as the broadcast ID. You can have a different range of valid host addresses if you change the subnet mask to a different number. For example, if a subnet mask of 255.255.254.0 is used, the gateway can be set to 192.168.101.0 since the valid host IP range is 192.168.100.1-192.168.101.254.

More information on subnetting can be found here:

https://docs.microsoft.com/en-us/troubleshoot/windows-client\networking/tcpip-addressing-and-subnetting

A calculator for finding valid host IP addresses in a subnet can be found here:

https://www.calculator.net/ip-subnet-calculator.html

The Gateway and Subnet Mask settings will remain no change if user has no input.

The dhcp will be turned off.

A new valid configuration will automatically be applied to the device. The user will be required to access the unit through the new configuration.

CAUTION: Consult with your network administrator when configuring the network interface to avoid potential loss of access or discovery of the device.

Parameter(s): <string>,[<string>],[<string>]

:SYSTem:COMMunicate:LAN:CONFig:CURRent?

Title: Current LAN Configuration

Description: This command queries the current ethernet configuration of the device.

www.tehencom.com

:SYSTem:COMMunicate:LAN:DHCP <ON|OFF>
:SYSTem:COMMunicate:LAN:DHCP?

Title: DHCP Configuration

Description: This command sets and queries the DHCP configuration of the device. If the DHCP configuration is set to OFF, the device is configured to the static ethernet configuration (See :SYSTem:COMMunicate:LAN:CONFig). If the DHCP configuration is set to ON, the device will obtain its IP address, gateway, and subnet mask from the DHCP server in the network.

This set command should be used to caution, as changing the ethernet configuration will result in temporary loss of communication with the device.

CAUTION: Consult with your network administrator when configuring the network interface to avoid potential loss of access or discovery of the device.

Parameter(s): <ON|OFF>

Query Return: ON|OFF

Default Value: OFF

:SYSTem:COMMunicate:LAN:DNS <string>,<string>,<string>
:SYSTem:COMMunicate:LAN:DNS?

Title: Dynamic DNS Configuration

Description: This command sets and queries the Dynamic Domain Name Server (Dynamic DNS) configuration of the device. Currently, only http://www.noip.com (TM) is available for use. For support, please contact the vendor at http://www.noip.com. Parameters:

- Dynamic DNS NoIp.com Host Name: Desired host name of the device.

- Dynamic DNS NoIp.com Username: noip.com username.

- Dynamic DNS NoIp.com Password: noip.com password.

Parameter(s): <string>,<string>,<string>

:SYSTem:COMMunicate:LAN:DNSServer:APPend <string>, {<string>}, ...

Title: Domain Name System Server Append

Description: This command will add one or more Domain Name System Servers to the end of the device's current list of DNS Servers.

To view the entire list of DNS Servers, see SYSTem:COMMunicate:LAN:DNSServer:LIST. To remove a DNS Server, see SYSTem:COMMunicate:LAN:DNSServer:DELete.

This command takes a list of one or more string values. For example: SYSTem:COMMunicate:LAN:DNSServer:APPend "8.8.8.8", "8.8.4.4"

Parameter(s): <string>, {<string>}, ...

www.tehencom.com

:SYSTem:COMMunicate:LAN:DNSServer:DELete <string>, {<string>}, ...

Title: Domain Name System Server Delete

Description: This command will delete the device's given Domain Name System Servers from the device's current list of DNS servers. To view the entire list of DNS Servers, see SYSTem:COMMunicate:LAN:DNSServer:LIST.

This command takes a list of one or more string values. For example: SYSTem:COMMunicate:LAN:DNSServer:DELete "8.8.8.8", "8.8.4.4"

Parameter(s): <string>, {<string>}, ...

:SYSTem:COMMunicate:LAN:DNSServer:LIST <string>, {<string>}, ...
:SYSTem:COMMunicate:LAN:DNSServer:LIST?

Title: Domain Name System Server List

Description: This command sets and retrieves a list of the device's currently set Domain Name System Servers.

The DNS Server is used to resolve a Domain Name. The list of DNS Servers will be contacted after any DNS Server assigned by DHCP Setting, if applicable, and will be contacted in the order given in the list.

This command takes a list of one or more string values. Setting the DNS server list with this command will override the currently set DNS server list.

An example of using the command: SYSTem:COMMunicate:LAN:DNSServer:LIST "8.8.8.8", "8.8.4.4"

This query version of this command returns a comma delimited list of strings. For example: 8.8.8.8, 8.8.4.4

To remove DNS Server, see SYSTem:COMMunicate:LAN:DNSServer:DELete.

To add to the end of the current list, see SYSTem:COMMunicate:LAN:DNSServer:APPend.

Parameter(s): <string>, {<string>}, ...

:SYSTem:COMMunicate:LAN:FTP:STATe <0 | 1 | ON | OFF>
:SYSTem:COMMunicate:LAN:FTP:STATe?

Title: FTP Server State

Description: This command sets the system up to execute (ON) or bypass (OFF) the FTP server startup on the next instrument boot.

The query returns the state of the FTP server based on the bypass flag, 0 for bypass, 1 for start. The actual state of the FTP server is not check for the query.

Parameter(s): <0 | 1 | ON | OFF>

:SYSTem:COMMunicate:LAN:HOSTname <string>
:SYSTem:COMMunicate:LAN:HOSTname?

Title: Local Host Name

Description: This command sets and retrieves the local host name of the instrument. A valid hostname may contain only the ASCII letters 'a' through 'z' (in a case-insensitive manner), the digits '0' through '9', and the hyphen ('-'). They cannot start/end with '-'.

No other symbols, punctuation characters, or white space are permitted.

Parameter(s): <string>

www.tehencom.com

:SYSTem:COMMunicate:LAN:HTTP:SECure:STATe <0 | 1 | ON | OFF>
:SYSTem:COMMunicate:LAN:HTTP:SECure:STATe?

Title: HTTPS Port State

Description: This command sets the system up to allow (ON) or bypass (OFF) the HTTPS port setup on the next instrument boot.

The query returns the state of the HTTPS port based on the bypass flag, 0 for bypass, 1 for configure. The actual state of the HTTPS port is not check for the query. Bypassing the HTTPS port will prevent use of remote software file transfer.

Parameter(s): <0 | 1 | ON | OFF>

:SYSTem:COMMunicate:LAN:SECure:CREDentials <string>,<string>,<RSA>

Title: Secure Communication Custom Certificate Key Pair

Description: Loads a custom certificate and key pair into the instrument to be used with secure connections.

The command takes 3 parameters:

1. Certificate contents (in PEM format).

2. Private key contents (in PEM format).

3. Key type. Currently, only RSA is supported.

The command is only available if the Secure Communication option is installed.

On a secure connection, the command is only accessible after command :SYSTem:PASSword:CENable has been received with a valid password.

Parameter(s): <string>,<string>,<RSA>

:SYSTem:COMMunicate:LAN:SECure:SSLCertificate?

Title: Secure Communication Certificate Information

Description: Returns the information about the SSL certificate being used in the secure connection. The information is returned in JSON format and consists of the following fields:

1. Start Date("notBefore"): When the certificate was generated (in GMT).

2. End Date("notAfter"): When the certificate will expire (in GMT).

3. Country("C"): Country of origin.

4. State("ST"): State of origin.

5. Location("L"): City of origin.

6. Organization("O"): Organization of origin.

7. Common Name("CN"): Associated host name.

All fields will be populated into a JSON array. The resulting response will be similar to the following: [{"C":"<country>", "ST":"<state>", "L":"<city>", "O":"<organization>", "CN":"<host_name>", "notAfter":"<notAfter_date>", "notBefore":"<notBefore_date>"}]

The command is only available if the Secure Communication option is installed.

www.tehencom.com

:SYSTem:COMMunicate:WLAN:CONFig:CURRent?

Title: Current WLAN Configuration

Description: This command queries the device wireless LAN configuration.

For example: { "ipAddress" : "192.168.0.190",

"gateWay" : "192.168.0.1",

"subnetMask" : "255.255.255.0"

}

:SYSTem:COMMunicate:WLAN:CONNection <string>,[<string>]

Title: Connect to a WiFi Access Point

Description: This command connects to a WiFi access point. The first string parameter is the ssid of the access point. The second string parameter, which is optional is the password of the access point.

Parameter(s): <string>,[<string>]

:SYSTem:COMMunicate:WLAN:CONNection:ACTive?

Title: WiFi Active Connection Information

Description: This command returns properties of the current WLAN connection.

If SYSTem:COMMunicate:WLAN:CONNection:STATus is not CONNected, the response is an ASCII empty JSON object: {} Otherwise the response is an ASCII JSON object with the following property:

SSID (ssid): The Service Set Identifier identifying the access point connected to.

For example: { "ssid" : "ExampleAccessPoint",

}

:SYSTem:COMMunicate:WLAN:CONNection:DISConnect

Title: Disconnect from a WiFi Access Point

Description: This command disconnects from the currently connected WiFi access point. This will also turn off auto connecting to another wireless network until the device is rebooted or WiFi is toggled on and off.

:SYSTem:COMMunicate:WLAN:CONNection:FORGet <string>

Title: Forget a WiFi Access Point

Description: This command disconnects and forgets a WiFi access point.

The first string parameter is the ssid of the access point.

Parameter(s): <string>

:SYSTem:COMMunicate:WLAN:CONNection:FORGet:ALL

Title: Forget All WiFi Access Points

Description: This command disconnects and forgets all saved WiFi Access Points

www.tehencom.com

:SYSTem:COMMunicate:WLAN:CONNection:SAVed?

Title: Saved WiFi Access Points

Description: This command returns all saved WiFi access points as JSON array

For example: [

"TheBestNetwork",

"TheShoppingMall",

]

:SYSTem:COMMunicate:WLAN:CONNection:STATus?

Title: WiFi Connection Status

Description: This command returns the connection status of the WLAN device. The response is ASCII character data of one of the following values:

Parameter value Description

CONNected A connection is established

DISConnected No connection currently exists

Query Return: CONN | DISC

Default Value: DISConnected

www.tehencom.com

:SYSTem:COMMunicate:WLAN:NETWorks?

Title: WiFi Access Points

Description: This command returns available WiFi access points.

If SYSTem:COMMunicate:WLAN:STATe is false, the response is an empty list [] Otherwise the response is ASCII of JSON object array with the following properties:

1. SSID (ssid): The Service Set Identifier identifying the access point connected to.

2. Frequency (frequency): The radio channel frequency in use by the access point, in MHz.

3. Max Bit Rate (rate): The maximum bitrate this access point is capable of.

4. Signal Strength (signal): The current signal quality of the access point, in percent.

5. BSSID (bssid): The hardware address of the access point.

6 Security Methods (security) : the security methods supported by the access point

For example: {

"ssid" : "RAPTOR",

"frequency" : "5220 MHz",

"rate" : "54 Mbit/s",

"signal" : 72,

"bssid" : "00:13:1A:34:D8:52",

"security" : "WPA1","WPA2"

},

{

"ssid" : "AM-Employee",

"frequency" : "5 MHz",

"rate" : "5.22",

"signal" : 62,

"bssid" : "06:18:1A:31:4E:62"

"security" : "WPA1","WPA2"

}

:SYSTem:COMMunicate:WLAN:NETWorks:REFResh

Title: Refresh WiFi Access Points

Description: This command will force the wireless network card to rescan local access points. This command will not return any data. Scanning for access points can take between 10-40 seconds before updating. Network rescans are rate limited by the hardware, consecutive calls to this command will not result in multiple rescans by the hardware. Calling SYST:COMM:WLAN:NETW? too soon after calling this command can result in a return of non updated data, or an empty list.\

www.tehencom.com

:SYSTem:COMMunicate:WLAN:STATe <0 | 1 | ON | OFF>
:SYSTem:COMMunicate:WLAN:STATe?

Title: Enable or Disable WiFi

Description: This command toggles the WLAN interface on or off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:SYSTem:DATE <numeric_value>,<numeric_value>,<numeric_value>
:SYSTem:DATE?

Title: System Date

Description: This command sets and queries the system's internal calendar. Changing the system date does not affect the system time zone (if time zone is available). The three parameters for this command are <year>,<month> and <day>. The query response message shall consist of three fields separated by commas: <year>,<month>,<day>.

The year shall be entered as a four-digit number, including century and millennium information. This shall not be affected by a *RST command. Note: Some products only support the query version of this command.

Parameter(s): <numeric_value>,<numeric_value>,<numeric_value>

:SYSTem:DEFault:RESet:ALL

Title: Default Reset All

Description: This command performs a factory reset as well as deletes last saved settings, log files, and user files. The factory reset includes presetting parameters in all applications, presetting all system settings with the exception of ethernet settings (DHCP On/Off, static IP, Static Gateway, Static Subnet) and time zone settings, and cleaning up all previous access point connections if the instrument is equipped with WiFi.

:SYSTem:DEFault:RESet:DATA <USER|SYSTem>

Title: Reset System Files

Description: This command deletes the instrument data files as specified in the following table:

Parameter Value Description

USER Deletes all user files in the instrument's internal memory including measurements, setup files, and screen shots. User-customized system files will not be deleted.

SYSTem Deletes all user-customized system files including keyboard EZ names, cable lists, antenna lists, and log files.

Parameter(s): <USER|SYSTem>

:SYSTem:DEFault:RESet:FACTory

Title: Factory Default Reset

Description: This command presets parameters in all applications as well as system settings with the exception of ethernet settings (DHCP On/Off, static IP, Static Gateway, Static Subnet) and time zone setting to their factory default values, and restarts the instrument. Last saved settings will be deleted. If unit equips with WiFi, the previous access point connections will be clean up.

www.tehencom.com

:SYSTem:ERRor:DISPlay <0 | 1 | ON | OFF>
:SYSTem:ERRor:DISPlay?

Title: SCPI Error Message State

Description: Sets or queries the state of SCPI error messages being displayed. By default, when a SCPI error enters the error queue it will be displayed on-screen. This command toggles whether those errors should be displayed. This command defaults to 0, meaning errors will NOT be displayed.

Usage: Suppress SCPI Error Messages: SYST:ERR:DISP 0 Show all SCPI Error Messages: SYST:ERR:DISP 1.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:SYSTem:ERRor[:NEXT]?

Title: System Error Queue

Description: If an error occurs, the error number and message are placed in the error queue, which can be read by this query command. Errors are cleared by reading them. Error code 0 is "No error".

Error codes from -100 to -199 belong to the Command error category and set bit 5 of the standard ESR register.

Error codes from -200 to -299 belong to the Command error category and set bit 4 of the standard ESR register.

Error codes from -400 to -499 belong to the Query error category and set bit 2 of the standard ESR register.

Error codes from -300 to -399 and 1 to 32767 belong to the Device-specific error category and set bit 3 of the standard ESR register.

Negative error numbers (command error, execution error, device-dependent error, query error) are standard SCPI errors. Positive error numbers are device specific errors, not standard SCPI errors.

The error queue is also cleared by *CLS, *RST, and when power is turned on.

If more errors have occurred than can fit in the buffer, the last error stored in the queue (the most recent error) is replaced with -350, Queue overflow. No additional errors are stored until removing errors from the queue. If no errors have occurred when reading the error queue, the instrument responds with 0, No error.

www.tehencom.com

:SYSTem:FIRMware:UPDate <string>,<string>

Title: Firmware Update

Description: Initiate a firmware update from the MSUS whose path is specified as parameters. If the requested firmware package is not recognized, an appropriate error will be added to the error queue. Otherwise, the instrument will verify that the package is safe to install, update to the new firmware.

The two parameters for this command are file name with relative path and mass storage device. Both parameters are case sensitive. Use "/" as a directory separator.

For example:

SYSTem:FIRMware:UPDate "V2019.01.1.raucb", "USB4-1"

The available mass storage devices can be retrieved by the :MMEMory:CATalog:MSUSs command. The command will fail if the file doesn't exist or the mass storage device is not present.

Parameter(s): <string>,<string>

:SYSTem:FIRMware:UPDate:LIST?

Title: Firmware Package List

Description: This command queries the instrument for a list of firmware packages that can be installed from mounted USB block devices. Please note that firmware packages are only detected on the top level of a USB block device. Any files located in subfolders will be ignored.

The response is in JSON format and consists of the path of the package relative to the root of the MSUS, the MSUS that the package is located in, and the version of the package.

The following is an example of the response:
[{"msus":"USB1-1","path":"V2018.2.22.raucb","version":"V2018.2.22"},
{"msus":"USB2-1","path":"V2018.2.19.raucb","version":"V2018.2.19"}]

These package names enumerate the valid parameter values to the :SYSTem:FIRMware:UPDate command.

:SYSTem:FIRMware:UPDate:REMote <string>

Title: Remote Firmware Update

Description: Initiate a remote firmware update to the package whose name is specified as a parameter. Use :SYSTem:FIRMware:UPDate:REMote:LIST? to inspect the packages that can be installed. If the requested firmware package is not recognized, an appropriate error will be added to the error. Otherwise, the instrument will download the specified firmware package, verify that the package is safe to install, update to the new firmware.

The instrument will disconnect all remote clients and reboot after the new firmware has been installed.

If the <STRING DATA> argument begins with (case insensitive) any of

http://

https://

ftp://

Then the firmware update will be downloaded from that URL. The URL must be percent-encoded per RFC-2396 section 2.4.1.

Parameter(s): <string>

www.tehencom.com

:SYSTem:FIRMware:UPDate:REMote:AUTO <0 | 1 | ON | OFF>
:SYSTem:FIRMware:UPDate:REMote:AUTO?

Title: Remote Firmware Update Auto Check

Description: This command sets and queries the state to enable automatically checking a remote server (see SYSTem:FIRMware:UPDate:REMote:SOURce?) for software updates. If this command is set to ON, The server will be checked for a newer version on bootup and every 24 hours thereafter. If this command is set to OFF, no automatic checking will take place, but a check can be initiated manually (see SYSTem:FIRMware:UPDate:REMote:LIST:REFResh command). If the check finds a newer version available, the SYSTem:FIRMware:UPDate:REMote:LATest? query will indicate the newer version. Use the SYSTem:FIRMware:UPDate:REMote command to initiate the download and install.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

:SYSTem:FIRMware:UPDate:REMote:LATest?

Title: Check For Firmware Update

Description: Check whether the instrument firmware is at the latest version. This command will access the package list specified by SYST:FIRM:UPD:REM:SOUR and return a response of the form <string>,<number> where <string> is the name of the latest firmware package, and <number> is 1 if the latest firmware package is newer than the version of firmware currently installed (a firmware update is available), or 0 if the current instrument firmware version matches the latest version (the instrument is up to date).

Clients can update the instrument to the latest firmware by passing the <string> component of the response as a parameter to the SYST:FIRM:UPD:REM command.

:SYSTem:FIRMware:UPDate:REMote:LIST?

Title: Remote Firmware Package List

Description: This command queries the instrument for a list of firmware packages that can be installed remotely. The package list will be populated from a resource file that is downloaded from a URL specified by the current value of :SYSTem:FIRMware:UPDate:REMote:SOURce.

The response is ASCII response consisting of one or more comma-delimited package names. For example: 2.0.0,1.0.0

These package names enumerate the valid parameter values to the :SYSTem:FIRMware:UPDate:REMote command.

www.tehencom.com

:SYSTem:FIRMware:UPDate:REMote:LIST:REFResh

Title: Remote Firmware Package List Refresh

Description: This command causes the list of firmware packages that can be installed remotely (:SYSTem:FIRMware:UPDate:REMote:LIST?) to be refreshed from the remote source server immediately. Normally the list is automatically updated on a timer interval to limit the amount of network requests. The exact timer interval varies by model and could be anywhere from one minute to one day. Use this command if you do not want to wait for the next automatic timer-based update to the remote firmware package list.

Note that this command only initiates the request to the server to get the updated list of packages. It does not wait until the list (as visible by :SYSTem:FIRMware:UPDate:REMote:LIST?) is actually updated as the request is made asynchronously.

www.tehencom.com

:SYSTem:FIRMware:UPDate:REMote:SOURce <string>
:SYSTem:FIRMware:UPDate:REMote:SOURce?

Title: Remote Firmware Package Source

Description: This command sets or queries the instrument's remote firmware update package list source. This source must be an http URL that is accessible to the instrument over the current network interface.

The set version of this command takes a string that spells the URL to the package list file. The query version returns that string. The default value points to the repository on anritsu.com where official firmware packages for this instrument are distributed. Most users will never need to change this setting from the default.

For example, the url value either set or query returned may be:

http://softwareupdates.anritsu.com/en-us/ms209xa.txt

The package list file must be a JSON file that has a minimum structure. The root object must contain a "version" string (which is reserved but currently unused), a "packages" array of zero or more package objects (each at minimum have a "name", "url", "version", and "model"), and a "default" string that matches one of the package names, or is "". The version and model attributes have semantic meaning, but the name and filename (url) can be anything. An example package list file is shown below:

{
"default": "V2021.11.2 (MS209xA)",
"packages": [
{
"name": "V2021.11.2 (MS209xA)",

"version": "V2021.11.2",
"model": "MS209xA",
"url": "http://softwareupdates.anritsu.com/en-us/MS2090A_V2021.11.2.raucb"
}
],
"version": "1.0.0"
}

or, as with MS2710xA:

{
"default": "V1.0.0 (MS2710xA)",
"packages": [
{
"name": "V1.0.0 (MS2710xA)",
"version": "V1.0.0",
"model": "MS2710xA",
"url": "http://softwareupdates.anritsu.com/en-us/MS2710xA_V1.0.0.tar"
}
],
"version": "1.0.0"

www.tehencom.com

}

When the package source is set, the instrument will attempt to download the file and validate it according to the above rules before making the change permanent. If the file cannot be accessed or the file does not conform to the minimum criteria, a device specific error will be added to the error queue and the package source will remain unchanged.

Parameter(s): <string>

:SYSTem:FIRMware:VERSion?

Title: Firmware Version

Description: This command queries the device firmware version.

:SYSTem:GPS:SEARch:MODE <GGLonass|GGALileo|GBEidou|GGGalileo>
:SYSTem:GPS:SEARch:MODE?

Title: GPS Satellite System Search Mode

Description: Sets and queries the GPS Satellite system search option.

The satellite system search options can be:

GPS: GPS only

GGLonass: GPS + GLONASS

GGALileo: GPS + GALILEO

GBEidou: GPS + BEIDOU

GGGalileo: GPS + GLONASS + GALILEO

Parameter(s): <GGLonass | GGALileo | GBEidou | GGGalileo>

Query Return: GGL | GGAL | GBE | GGG

Default Value: GGGalileo

:SYSTem:GPS:STATe <0 | 1 | ON | OFF>
:SYSTem:GPS:STATe?

Title: GPS State

Description: Enable or disable the GPS. When the GPS is OFF, the GPS module is placed into standby to save power, and features which depend on the GPS may be unusable.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:SYSTem:GPS:VOLTage <numeric_value>
:SYSTem:GPS:VOLTage?

Title: GPS Voltage

Description: Supplies either 3.3V or 5V to power the attached GPS

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 3.3

Range: 3.3 to 5

www.tehencom.com

:SYSTem:LOG:ERRor?

Title: System Error Log

Description: This command retrieves the error log. The log is encrypted and can be saved to a file and sent to Anritsu Service if required.

:SYSTem:MACaddress?

Title: MAC Address

Description: Query the MAC address of the instrument.

Setting the MAC address is only available to customer service.

:SYSTem:OPTions?

Title: Query Options

Description: This command retrieves the options that are currently set. The response is returned in "/" delimited form.

:SYSTem:OPTions:ALL?

Title: Query All Options

Description: This command returns all installed options with their metadata in JSON format. The expiration date time is in UTC time and in a string format of the form yyyy-MM-ddTHH:mm:ss corresponding to the ISO 8601 specification.

Example:

[{"expirationDate":"","option":"0090", "state":"active", "description":"Gated Sweep"},

{"expirationDate":"2022-07-05T19:00:42Z","option":"9103", "state":"pendingReboot", "description":"50 MHz Analysis Bandwidth" },

{"expirationDate":"","option":"9431", "state":"available", "description":"Coverage Mapping"}]

:SYSTem:OPTions:CONFig?

Title: Option Configuration

Description: This command returns a quoted string of characters readable only by Anritsu Customer Service. Only instrument configuration information is returned. No setup information is included.

:SYSTem:OPTions:TIMed:ACTivate <string>

Title: Activate Timed Options

Description: This command activates an existing Timed Option.

Parameter(s): <string>

:SYSTem:OPTions:UPDate:REMote

Title: Option Update Remote

Description: This command retrieves all available Licenses for given instrument and installs them.

www.tehencom.com

:SYSTem:OPTions:UPGRade <string>

Title: Option Upgrade

Description: This command upgrades the options of the device with a valid license key provided as a quoted string parameter. The device must be rebooted immediately after this command for the installation of the new options to complete. The device must not be powered off while the command is executing. When the operation completes, a success message will be shown and request to reboot the device. The recommended way to restart the device safely is by sending the *RST command after this command. This command might report the following error code: -200: The command failed to complete. A detailed error message will be provided in the response of :SYStem:ERRor[:NEXT]? command. -2: The command failed because the options provided in the option file are incompatible with this instrument.

Parameter(s): <string>

:SYSTem:PASSword:CDISable <string>

Title: Enable Remote Password

Description: Enable the remote password state.

All existing remote connections to the instrument on a raw socket will be closed.

Future remote connections to the instrument must be on a secure socket via port 9003 and must provide a matching password (using :SYSTem:PASSword:CENable command) in order to gain access to other SCPI commands on the instrument.

Parameter:

1. StringValue: The remote password encrypted using OpenSSL RSA encryption algorithm with Anritsu Remote Password public key and OAEP padding mode in a base64 string. Use :SYSTem:PASSword:SSLKey to get Anritsu Remote Password public key.

Sending an invalid password generates error -221 (setting conflict).

The command is only available if the Secure Communication option is installed.

Parameter(s): <string>

:SYSTem:PASSword:CENable <string>

Title: Enable Password Protected Connection

Description: Unlocks a particular connection to allow all SCPI commands to be sent via that connection when remote password state is ON.

Parameter:

1. StringValue: The remote password encrypted using OpenSSL RSA encryption algorithm with Anritsu Remote Password public key and OAEP padding mode in a base64 string. Use :SYSTem:PASSword:SSLKey to get Anritsu Remote Password public key.

Sending an invalid password generates error -221 (setting conflict).

Send an empty string as the password parameter if the remote password has not been set but the remote password state is ON.

The command is only available if the Secure Communication option is installed.

Parameter(s): <string>

www.tehencom.com

:SYSTem:PASSword:CENable:ALL <string>

Title: Disable Remote Password

Description: Disable the remote password state.

Remote connections to the instrument on a secure socket via port 9003 will be disabled.

Remote connections to the instrument on a raw socket via port 9001 are enabled.

Parameter:

1. StringValue: The remote password encrypted using OpenSSL RSA encryption algorithm with Anritsu Remote Password public key and OAEP padding mode in a base64 string. Use :SYSTem:PASSword:SSLKey to get Anritsu Remote Password public key.

Sending an invalid password generates error -221 (setting conflict).

The command is only available if the Secure Communication option is installed.

Parameter(s): <string>

:SYSTem:PASSword:CONNection:STATe?

Title: Remote Password Connection State

Description: Returns whether the particular connection the command is being sent from is locked behind a password.

The query will return 0 if the connection is still locked behind a password or 1 if SCPI commands can be sent.

To unlock the connection for all SCPI commands, use :SYSTem:PASSword:CENable.

The command is only available if the Secure Communication option is installed.

www.tehencom.com

:SYSTem:PASSword:INTegrity?

Title: Remote Password Integrity

Description: Returns whether the remote password checksum is good or bad. The query command will return one of the two following values:

Good: The password integrity is good and can be used as normal.

Bad: The password has failed checksum and will possibly no longer match properly.

Commands that require the entry of the password (:SYSTem:PASSword:CENable, :SYSTem:PASSword:CENable:ALL, :SYSTem:PASSword:CDISable, and :SYSTem:PASSword:NEW)

may no longer function.

The remote password can be reset in one of two ways:

1. On instruments with a local GUI, a new password can be set WITHOUT triggering a master reset.

2. To reset the password remotely, the system override reset_remote_password command will have to be used.

The command can be sent through a connection to the 8001(normal socket)/8002(secure socket) port of the instrument

and has the format:

reset_remote_password,<system_override_specific_password>

Please read the user manual for more details about the system override password.

Note that resetting the password through system override will clear the password, set the remote password state to OFF,

and trigger a master reset (which clears all user files).

www.tehencom.com

:SYSTem:PASSword:NEW <string>,<string>

Title: Remote Password Set

Description: Set a new remote password.

Paramters:

1. StringValue: The current encrypted password in base64 string.

2. StringValue: The new encrypted password in base64 string.

The current and new passwords must be encrypted using OpenSSL RSA encryption algorithm with Anritsu Remote Password public key and OAEP padding mode. Use :SYSTem:PASSword:SSLKey to get Anritsu Remote Password public key.

Sending an invalid current password generates error -221 (setting conflict).

Sending a new password not meeting the password complexity rules generates error -232 (invalid format).

The command is only available if the Secure Communication option is installed.

On a secure socket connection, the command is only accessible after command :SYSTem:PASSword:CENable has been received with a valid password.

The remote password is empty by default.

A new password must pass the following checks to be accepted:

1. It must have 12 characters minimum and 64 characters maximum.

2. It must have letters and number(s).

3. It must have both lowercase and uppercase letters.

4. It must have at least one special character. Valid special characters are @#$_&-+=%*"':;!?() ,.`~/{}[]<>

5. It must not have 5 or more increasing sequential numbers (such as 12345).

6. It must not have 5 or more repeated characters (such as aaaaa).

Parameter(s): <string>,<string>

:SYSTem:PASSword:SET?

Title: Remote Password is Set

Description: Returns whether the remote password is set.

The command will return 1 if the remote password is set to a non-empty value and 0 if the password is empty.

:SYSTem:PASSword:SSLKey?

Title: Remote Password Public Key

Description: Return Anritsu OpenSSL RSA public key (in PEM format). The key is used to encrypt the remote password parameter for password protected commands such as :SYSTem:PASSword:CENable.

The key is returned in IEEE definite length arbitrary block format:

<#AX><key> where A is a single ascii digit (1-9) describing the number of bytes in the length section (X).

X is ascii string of digits (0-9) describing the length of the <key>.

The command is only available if the Secure Communication option is installed.

www.tehencom.com

:SYSTem:PASSword:STATe?

Title: Remote Password State

Description: Returns whether the instrument is locked behind a remote password. While remote password is turned on, only

commands that are not password protected will be processed until either the connection itself is unlocked using

:SYSTem:PASSword:CENable or if the remote password state is turned off using :SYSTem:PASSword:CENable:ALL

Query Return: 0 | 1

Default Value: OFF

:SYSTem:PRESet

Title: Preset

Description: This command presets parameters in the current application to their factory default values.

:SYSTem:PRESet:MODE

Title: Preset Mode

Description: This command presets parameters in the current mode to their factory default values.

:SYSTem:REBoot

Title: System Reboot

Description: This command saves the current state of the instrument and reboots the instrument.

:SYSTem:REMote:DISPlay:LOCK <0 | 1 | ON | OFF>
:SYSTem:REMote:DISPlay:LOCK?

Title: Remote Control State

Description: This command restricts front panel activity on the instrument until remote control is turned off either through this SCPI command or through a button on the front panel.

The query will return 1 if the pop-up is active, or 0 if the pop-up is inactive.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:SYSTem:SETup:SHORtcuts <numeric_value>,<string>,[<string>]
:SYSTem:SETup:SHORtcuts?

Title: Set System Footer Shortcuts

Description: This command allows saving up to 5 setup files into shortcuts will display at the base of the user interface.

This will allows easy access to loading frequently used setups. The shortcuts are numbered 1-5 from left to right.

Parameters:

1. Numeric Value: The shortcut number that you would like to set

2. Name value: The name that will be displayed on the user interface screen.

3. File path: The file path (including the file name) relative to the MSUS. Without Secure Data option, MSUS is the Internal device. With Secure Data option installed, MSUS is a connected USB device. File extension can be specified, but is not required. Only .stp files will be accepted. If left blank, it will save the current setup and the file will be saved to a default file

Example usage:

Set shortcut #3 to file example_file.stp in your instrument file folder: SYST:SET:SHOR 1,"EMF Setup 1", "example_file.stp"

Set the current setup of Spectrum to shortcut #1: SYST:SET:SHOR 2,"SPEC 10 MHz"

SYST:SET:SHORT? will return as:
[{"app":"SPA","file":"example_file.stp.stp","mode":"SPEC","name":"EMF Setup 1"},{"app":"SPA","file":"SPEC_10_MHz.stp","mode":"SPEC","name":"SPEC 10 MHz"},{"app":"N/A","file": "N/A","mode":"N/A","name":"SHORTCUT"}]

This command is disabled if Secure Data Option is available and enabled.

Parameter(s): <numeric_value>,<string>,[<string>]

Default Value:

[{"app":"N/A","file":"N/A","mode":"N/A","name":"SHORTCUT","status":false,"lastLoaded":false}]

:SYSTem:SETup:SHORtcuts:CLEar

Title: Load System Footer Shortcuts

Description: This command will clear all of the System Setup shortcuts returned by SYST:SET:SHOR?

This command is disabled if Secure Data Option is available and enabled.

:SYSTem:SETup:SHORtcuts:DEL <numeric_value>

Title: Delete a Single System Footer Shortcut

Description: This command will delete a single System Setup shortcuts returned by SYST:SET:SHOR? at the given index.

This command is disabled if Secure Data Option is available and enabled.

Parameter(s): <numeric_value>

www.tehencom.com

:SYSTem:SETup:SHORtcuts:LOAD <numeric_value>

Title: Load System Footer Shortcuts

Description: This command will load the setup saved at the given shortcut number.

Parameters:

1. Numeric Value: The shortcut number that you would like to load

Usage: SYST:SET:SHOR:LOAD 2

This command is disabled if Secure Data Option is available and enabled.

Parameter(s): <numeric_value>

:SYSTem:SETup:SHORtcuts:REName <numeric_value>,<string>

Title: Rename System Footer Shortcuts

Description: This command allows renaming a shortcut display name.

Parameters:

1. Numeric Value: The shortcut number that you would like to set

2. Name value: The new name that will be displayed on the user interface screen for that given shortcut number.

Usage: SYST:SET:SHOR:LOAD 2, "Example Name"

SYST:SET:SHORT? will return as:
[{"app":"SPA","file":"example_file.stp.stp","mode":"SPEC","name":"EMF Setup 1"},{"app":"SPA","file":"SPEC_10_MHz.stp","mode":"SPEC","name":"Example Name"},{"app":"N/A","file": "N/A","mode":"N/A","name":"SHORTCUT"}]

This command is disabled if Secure Data Option is available and enabled.

Parameter(s): <numeric_value>,<string>

:SYSTem:SHUTdown

Title: System Shutdown

Description: This command shuts down the instrument. The current instrument state and settings will be saved.

:SYSTem:TEMPerature?

Title: Get CPU Temperature

Description: This command returns the CPU temperature in Celsius.

:SYSTem:TIME <numeric_value>,<numeric_value>,<numeric_value>
:SYSTem:TIME?

Title: System Time

Description: This command sets and queries the system's internal clock. Changing the system time does not affect the system time zone (if time zone is available). The three parameters for this command are <hour>,<minute> and <second>. The query response message shall consist of three fields separated by commas: <hour>,<minute>,<second>. Note: Some products only support the query version of this command.

Parameter(s): <numeric_value>,<numeric_value>,<numeric_value>

www.tehencom.com

:SYSTem:TIME:SYNC <AUTO|MANual>
:SYSTem:TIME:SYNC?

Title: Sync System Time

Description: This command sets the system to either automatically synchronize with GPS/Internet server or manually adjust the time setting. Valid parameter values are AUTO|MANual. When AUTO is selected, GPS takes priority if it is present and turned on (see command :SYSTem:GPS:STATe to set GPS on or off). When the time setting is AUTO synchronized, the current time zone setting is not changed.

Parameter(s): <AUTO|MANual>

Query Return: AUTO|MAN

Default Value: AUTO

:SYSTem:TIME:SYNC:STATus?

Title: Sync Time Status

Description: This command query the last system time synchronization status. The return value range are INT, GPS, NONE, or NA.

INT - the system time was successfully synchronized with internet server.

GPS - the system time was successfully synchronized with GPS device time.

NONE - the system time was set to automatically synchronize with GPS/internet. However, it was unable to synchronize with the time source. It may indicates the time source connection is not available or time source is not ready such as GPS is off.

NA - the system time was set to manually update, thus synchronization status is not available.

Query Return: INT|GPS|NONE|NA

Default Value: INTernet

:SYSTem:TIME:ZONE <string>
:SYSTem:TIME:ZONE?

Title: System Time Zone

Description: This command sets and queries the system time zone. The time zone parameter is in string format of "(UTC+/-offset) Area/Location" as returned from the :SYSTem:TIME:ZONE:CATalog command. Changing the system time zone affects the system date/time.

Parameter(s): <string>

Default Value: (UTC-08:00) America/Los_Angeles

:SYSTem:TIME:ZONE:CATalog?

Title: System Time Zone Catalog

Description: This command queries the available system time zone catalog. The query returns comma delimited description for time zone sorted by UTC offset. Each item is in the format of "(UTC+/-offset) Area/Location" where Area/Location is defined in the tz database

www.tehencom.com

:SYSTem:UNIT:NAMe <string>
:SYSTem:UNIT:NAMe?

Title: System Unit Name

Description: This command sets/queries the unit name of the current system.The name of the unit must not be greater than 45 ASCII characters

Parameter(s): <string>

:TEST:SELFtest?

Title: Self Test

Description: Perform a self-test and return the results. The response is formatted as a JSON (http://json.org/) array of name,value pair result objects. Some result objects also include a 'status' property that will be either 'pass' or 'fail' based on whether the criteria for that test was met.

For tests of voltages, the test passes if the measured voltage is within 10% of the expected voltage.

:TRIGger[:SEQuence]:PORT<n>[:DIRection] <IN|OUT>
:TRIGger[:SEQuence]:PORT<n>[:DIRection]?

Title: Trigger Port Direction

Description: This command configures the direction of the trigger ports, which can behave as either trigger in or trigger out. The command suffix selects which of the two trigger ports to configure. Note that port 1 doubles as a reference out port and cannot be a reference out and trigger port at the same time. To use port one as a trigger port the reference output state must be turned off (see the 10MHz Reference Output State) command. For port 2 when set to trigger out, the GPS PPS will be the pulse output. Command not available on the MS2080A or MS2070A, where the direction is always IN.

Parameter(s): <IN | OUT>

PORT Suffix Range: 1-2, Default = 1

2-3 Spectrum Analyzer Commands

:ABORt

Title: Abort

Description: Resets the trigger system. This has the effect of aborting the sweep or any measurement that is currently in progress.

Additionally, any pending operation flags that were set by initiation of the trigger system will be set to false.

If :INITiate:CONTinuous is OFF (i.e. the instrument is in single sweep mode), send the command :INITiate[:IMMediate] to trigger the next sweep.

If :INITiate:CONTinuous is ON (i.e. the instrument is in continuous sweep mode) a new sweep will start immediately.

www.tehencom.com

:CALCulate:LIMit<n>:COMMent <string>
:CALCulate:LIMit<n>:COMMent?

Title: Limit Comment

Description: Associates a user-defined comment with each limit. The set version of this command takes a single parameter that is a string containing the desired comment. The query version returns the comment that is set.

If a limit of the specified number does not already exist, a default limit will be created first (having empty

data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <string>

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:CONTrol[:DATA] <numeric_value> {HZ | KHZ | MHZ | GHZ}, {<numeric_value> {HZ | KHZ | MHZ | GHZ}}, ...
:CALCulate:LIMit<n>:CONTrol[:DATA]?

Title: Limit Control Data

Description: This command sets or queries the control data (X-axis values) for the specified limit.

The numeric suffix on LIMit specifies which limit number to query or set data. If the suffix is omitted, the command will refer to limit 1.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

This command takes a list of one or more frequency values as parameters. For example, CALC:LIM1:CONT:DATA 1 MHz, 2MHz, 3MHz

Note that it is permitted to set one or more invalid 'placeholder' values of Not-A-Number (NAN). The placeholder value for NAN is 9.91e37. If a control data point contains a value of 9.91e37, limit line interpolation from the previous data point, and to the next data point, will not occur. This is useful for defining discontiguous (or segmented) limit lines within a single limit.

For example, to define a limit line of two discontiguous segments, one from 1 MHz to 10 MHz, and another from 20 MHz to 30 MHz, send the following control data: CALC:LIM1:CONT:DATA 1MHz, 10MHz, 9.91e37, 20MHz, 30MHz

Note that the upper (or lower) data, if used, should contain the same amount of points as the control data (see CALC:LIM:FAIL? for details on what happens when this is not true). Thus, when using placeholders in control data, it is recommended that placeholders are also used in the upper (or lower) data. For example, CALC:LIM1:CONT:UPP 0dBm, 10dBm, 9.91e37, 10dBm, 0dBm

The exact value for the middle point does not matter, as interpolation will always be skipped due to the control data containing NAN, but using NAN for the corresponding upper (or lower) data value will make it easier to remember that the point is a placeholder.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}, {<numeric_value> {HZ | KHZ | MHZ | GHZ}}, ...

LIMit Suffix Range: 1-10, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:CONTrol:MODE <ABSolute|RELative>
:CALCulate:LIMit<n>:CONTrol:MODE?

Title: Limit Control Mode

Description: Choose either ABSolute or RELative limit.

In ABSolute mode, the control value of the limit line is defined by absolute physical values (Hz).

In RELative mode, the control value of the limit line is relative to the center frequency (Hz).

If a limit of the specified number does not already exist, a default limit will be created first (having empty

data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <ABSolute|RELative>

Query Return: ABS|REL

LIMit Suffix Range: 1-10, Default = 1

Default Value: ABSolute

:CALCulate:LIMit<n>:CONTrol:SHIFt <numeric_value> {HZ | KHZ | MHZ | GHZ}

Title: Limit Control Shift

Description: Move a limit line along the control axis. This command changes the value of :CALCulate<n>:LIMit<k>:CONTrol[:DATA].

Issuing this command multiple times will change the limits each time. For example, sending

CALC:LIM1:CONT:SHIFT 1 Hz

CALC:LIM1:CONT:SHIFT 1 Hz

CALC:LIM1:CONT:SHIFT 1 Hz

CALC:LIM1:CONT:SHIFT 1 Hz

CALC:LIM1:CONT:SHIFT 1 Hz

will shift the control axis by 5 Hz

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

LIMit Suffix Range: 1-10, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:COPY <numeric_value>

Title: Limit Copy

Description: Copies a limit line eg: CALC:LIM1:COPY 2 Copies limit 1 to line 2

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value>

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:DELete

Title: Limit Delete

Description: Deletes a limit line

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:FAIL?

Title: Limit Fail

Description: This command queries the result of a limit check.

All traces that have had checking enabled (via CALC:TRAC:CHEC) will be evaluated against the upper and lower data of the specified limit, unless the limit STATe is OFF (in which case this command will always return 0), or the upper or lower STATe is OFF (in which case only the data with STATe ON will be checked).

If the sweep has not completed yet, the partial trace will be evaluated. If INITiate:CONTinuous is ON, a snapshot of the trace at the time this command was received will be evaluated against the limit. This command returns 1 if any of the checked traces violate the limit, otherwise it returns 0.

When a limit is evaluated, there are some rules that are followed if the cardinality of the limits control, upper, and lower data are not equal. If there are fewer control data points than upper or lower data points, then only the first n upper or lower points will be evaluated, where n is the number of control points. If there are fewer upper or lower points than control points, then the effective number of upper or lower points will be increased to the number of control points, with the 'extrapolated' points having a value equal to the last upper or lower point.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

LIMit Suffix Range: 1-10, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:LOWer[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
:CALCulate:LIMit<n>:LOWer[:DATA]?

Title: Lower Limit Data

Description: This command sets or queries the lower limit data (Y-axis values) for the specified limit.

The numeric suffix on LIMit specifies which limit number to query or set data. If the suffix is omitted, the command will refer to limit 1.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

This command takes a list of one or more amplitude values as parameters. For example,

CALC:LIM1:LOW:DATA 1 dBm, 2dBm, 3 dBm

Note that it is permitted to set one or more data values of +/- infinity. The placeholder value for +/- infinity is +/-9.9e37. If a lower data point contains a value of +/-9.9e37, the amplitude at that point will be treated as if it were +/-infinity (i.e. the lower limit will either always fail or always pass at that point).

It is also permitted to set one or more invalid 'placeholder' values of Not-A-Number (NAN). This is useful for defining discontiguous (or segmented) limit lines within a single limit.

For details, and an example, of using placeholder values, see CALC:LIM:CONT:DATA.

Note that if the units for the limit values are specified (as shown in the example above), they must have the same unit.

Note that this command is not available for Spectral Emission Mask measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:LOWer:MODE <ABSolute|RELative>
:CALCulate:LIMit<n>:LOWer:MODE?

Title: Limit Lower Mode

Description: Choose either ABSolute or RELative limit.

In ABSolute mode, the control value of the limit line is defined by absolute physical values (dBm).

In RELative mode, the control value of the limit line is relative to the reference level (dB).

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <ABSolute|RELative>

Query Return: ABS|REL

LIMit Suffix Range: 1-10, Default = 1

Default Value: ABSolute

www.tehencom.com

:CALCulate:LIMit<n>:LOWer:SHIFt <numeric_value> {DB}

Title: Lower Limit Shift

Description: Move the lower limit up or down by a relative amplitude. This command changes the value of :CALCulate<n>:LIMit<k>:LOWer[:DATA].

Issuing this command multiple times will change the limits each time. For example, sending

CALC:LIM1:LOW:SHIFT 1 dB

CALC:LIM1:LOW:SHIFT 1 dB

CALC:LIM1:LOW:SHIFT 1 dB

CALC:LIM1:LOW:SHIFT 1 dB

CALC:LIM1:LOW:SHIFT 1 dB

will shift the lower limit by 5 dB

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:LOWer:STATe <0 | 1 | ON | OFF>
:CALCulate:LIMit<n>:LOWer:STATe?

Title: Lower Limit State

Description: Turns ON or OFF the lower limit.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

LIMit Suffix Range: 1-10, Default = 1

Default Value: OFF

:CALCulate:LIMit<n>:NAME <string>
:CALCulate:LIMit<n>:NAME?

Title: Limit Name

Description: Associates a user-defined name with each limit.

The set version of this command takes a single parameter that is a string containing the desired limit name. The query version returns the name that is set.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <string>

LIMit Suffix Range: 1-10, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:STATe <0 | 1 | ON | OFF>
:CALCulate:LIMit<n>:STATe?

Title: Limit State

Description: Turns the limit check for a specific limit ON or OFF.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

LIMit Suffix Range: 1-10, Default = 1

Default Value: OFF

:CALCulate:LIMit<n>:TRACe<n>:CHECk <0 | 1 | ON | OFF>
:CALCulate:LIMit<n>:TRACe<n>:CHECk?

Title: Limit Trace Check

Description: This command turns the limit check for a specific trace on and off.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <0 | 1 | ON | OFF>

LIMit Suffix Range: 1-10, Default = 1

TRACe Suffix Range: 1-6, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:UPPer[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
:CALCulate:LIMit<n>:UPPer[:DATA]?

Title: Upper Limit Data

Description: This command sets or queries the upper limit data (Y-axis values) for the specified limit.

The numeric suffix on LIMit specifies which limit number to query or set data. If the suffix is omitted, the command will refer to limit 1.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

This command takes a list of one or more amplitude values as parameters. For example, CALC:LIM1:UPP:DATA 1 dBm, 2dBm, 3 dBm

Note that it is permitted to set one or more data values of +/- infinity. The placeholder value for +/- infinity is +/-9.9e37. If an upper data point contains a value of +/-9.9e37, the amplitude at that point will be treated as if it were +/-infinity (i.e. the upper limit will either always pass or always fail at that point).

It is also permitted to set one or more invalid 'placeholder' values of Not-A-Number (NAN). This is useful for defining discontiguous (or segmented) limit lines within a single limit.

For details, and an example, of using placeholder values, see CALC:LIM:CONT:DATA.

Note that if the units for the limit values are specified (as shown in the example above), they must have the same unit.

Note that this command is not available for Spectral Emission Mask measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:UPPer:MODE <ABSolute|RELative>
:CALCulate:LIMit<n>:UPPer:MODE?

Title: Upper Limit Mode

Description: Choose either ABSolute or RELative limit.

In ABSolute mode, the control value of the limit line is defined by absolute physical values (dBm).

In RELative mode, the control value of the limit line is relative to the reference level (dB).

If a limit of the specified number does not already exist, a default limit will be created first (having empty

data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <ABSolute|RELative>

Query Return: ABS|REL

LIMit Suffix Range: 1-10, Default = 1

Default Value: ABSolute

www.tehencom.com

:CALCulate:LIMit<n>:UPPer:SHIFt <numeric_value> {DB}

Title: Upper Limit Shift

Description: Move the upper limit up or down by a relative amplitude. This command changes the value of :CALCulate<n>:LIMit<k>:UPPer[:DATA].

Issuing this command multiple times will change the limits each time. For example, sending

CALC:LIM1:UPP:SHIFT 1 dB

CALC:LIM1:UPP:SHIFT 1 dB

CALC:LIM1:UPP:SHIFT 1 dB

CALC:LIM1:UPP:SHIFT 1 dB

CALC:LIM1:UPP:SHIFT 1 dB

will shift the upper limit by 5 dB

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:UPPer:STATe <0 | 1 | ON | OFF>
:CALCulate:LIMit<n>:UPPer:STATe?

Title: Upper Limit State

Description: Turns ON or OFF the upper limit.

If a limit of the specified number does not already exist, a default limit will be created first (having empty data, with state set to ON).

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

LIMit Suffix Range: 1-10, Default = 1

Default Value: OFF

:CALCulate:LIMit:ACTive?

Title: Limit Active

Description: Queries the numbers of all active limit lines in ascending order. This command returns a empty string if no limits are active.

Note that this command is not available for Spectral Emission Mask measurement.

www.tehencom.com

:CALCulate:ACPower:LIMit:ADJacent:ABSolute <numeric_value> {<amplitude_units>}
:CALCulate:ACPower:LIMit:ADJacent:ABSolute?

Title: Adjacent Channel Power Adjacent Absolute Limit
Description: Sets and queries the amplitude of absolute limit for ACPR adjacent power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {<amplitude_units>}
Query Return: Numeric (<amplitude_units>)
Default Value: 10 dBm
Default Unit: dBm
Range: -200 dBm to 200 dBm

:CALCulate:ACPower:LIMit:ADJacent:LOWer:FAIL?

Title: ACPR Limit Adjacent Lower Fail
Description: This command queries the result of a limit check
on lower adjacent channel power

:CALCulate:ACPower:LIMit:ADJacent:RELative <numeric_value> {DB}
:CALCulate:ACPower:LIMit:ADJacent:RELative?

Title: Adjacent Channel Power Adjacent Relative Limit
Description: Sets and queries the amplitude of relative limit for ACPR adjacent power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {DB}
Query Return: Numeric (dB)
Default Value: 10 dB
Default Unit: dB
Range: -200 dB to 200 dB

:CALCulate:ACPower:LIMit:ADJacent:UPPer:FAIL?

Title: ACPR Limit Adjacent Upper Fail
Description: This command queries the result of a limit check
on upper adjacent channel power

www.tehencom.com

:CALCulate:ACPower:LIMit:ALTernate:ABSolute <numeric_value> {<amplitude_units>}
:CALCulate:ACPower:LIMit:ALTernate:ABSolute?

Title: Adjacent Channel Power Alternate Absolute Limit
Description: Sets and queries the amplitude of absolute limit for ACPR alternate power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {<amplitude_units>}
Query Return: Numeric (<amplitude_units>)
Default Value: 10 dBm
Default Unit: dBm
Range: -200 dBm to 200 dBm

:CALCulate:ACPower:LIMit:ALTernate:LOWer:FAIL?

Title: ACPR Limit Alternate Lower Fail
Description: This command queries the result of a limit check
on lower alternate channel power

:CALCulate:ACPower:LIMit:ALTernate:RELative <numeric_value> {DB}
:CALCulate:ACPower:LIMit:ALTernate:RELative?

Title: Adjacent Channel Power Alternate Relative Limit
Description: Sets and queries the amplitude of relative limit for ACPR alternate power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {DB}
Query Return: Numeric (dB)
Default Value: 10 dB
Default Unit: dB
Range: -200 dB to 200 dB

:CALCulate:ACPower:LIMit:ALTernate:UPPer:FAIL?

Title: ACPR Limit Alternate Upper Fail
Description: This command queries the result of a limit check
on upper alternate channel power

:CALCulate:ACPower:LIMit:FAIL?

Title: ACPR Limit Fail
Description: This command queries the result of a limit check
on adjacent channel power ratio

www.tehencom.com

:CALCulate:ACPower:LIMit:MAIN <numeric_value> {<amplitude_units>}
:CALCulate:ACPower:LIMit:MAIN?

Title: Adjacent Channel Power Main Limit
Description: Sets and queries the amplitude of limit for main power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {<amplitude_units>}
Query Return: Numeric (<amplitude_units>)
Default Value: 10 dBm
Default Unit: dBm
Range: -200 dBm to 200 dBm

:CALCulate:ACPower:LIMit:MODE <ABSolute|RELative>
:CALCulate:ACPower:LIMit:MODE?

Title: Adjacent Channel Power Limit Mode
Description: Sets the ACPR limit mode to be absolute or relative
Parameter(s): <ABSolute|RELative>
Query Return: ABS|REL
Default Value: ABSolute

:CALCulate:ACPower:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:ACPower:LIMit:STATe?

Title: Adjacent Channel Power Limit State
Description: Sets the ACPR limit state to be ON or OFF
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: OFF

:CALCulate:CHPower:LIMit <numeric_value> {<amplitude_units>}
:CALCulate:CHPower:LIMit?

Title: Channel Power Limit
Description: Sets and queries the amplitude of limit on channel power.
See UNIT:POWer to query or set the current amplitude units.
Parameter(s): <numeric_value> {<amplitude_units>}
Query Return: Numeric (<amplitude_units>)
Default Value: 10 dBm
Default Unit: dBm
Range: -200 dBm to 70 dBm

:CALCulate:CHPower:LIMit:FAIL?

Title: Channel Power Limit Fail
Description: This command queries the result of a limit check
on channel power

www.tehencom.com

:CALCulate:CHPower:LIMit:PSDensity <numeric_value> {<amplitude_units>}
:CALCulate:CHPower:LIMit:PSDensity?

Title: Channel Power Spectral Density Limit

Description: Sets and queries the amplitude of limit on channel power spectral density.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -200 dBm to 70 dBm

:CALCulate:CHPower:LIMit:PSDensity:STATe <0 | 1 | ON | OFF>
:CALCulate:CHPower:LIMit:PSDensity:STATe?

Title: Channel Power Spectral Density Limit State

Description: Sets and queries the state of limit on channel power spectral density. The set form of this command sets the limit state to be ON or OFF

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:CHPower:LIMit:PSD:FAIL?

Title: Power Spectral Density Limit Fail

Description: This command queries the result of a limit check

on channel power spectral density

:CALCulate:CHPower:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:CHPower:LIMit:STATe?

Title: Channel Power Limit State

Description: Sets and queries the state of limit on channel power. The set form of this command sets the limit state to be ON or OFF

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:CALCulate:CINTerference:CARrier:LIMit <numeric_value> {<amplitude_units>}
:CALCulate:CINTerference:CARrier:LIMit?

Title: Carrier Limit

Description: Sets and queries the amplitude of the Carrier channel power limit for the Carrier-to-Interference Ratio measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -150 dBm to 100 dBm

:CALCulate:CINTerference:CARrier:LIMit:FAIL?

Title: CI Carrier Limit Fail

Description: Queries the result of the Carrier channel power limit check for the Carrier-to-Interference Ratio measurement.

:CALCulate:CINTerference:CARrier:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:CINTerference:CARrier:LIMit:STATe?

Title: Carrier Limit State

Description: Sets and queries the state of the Carrier channel power limit for the Carrier-to-Interference Ratio measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:CINTerference:CIRatio:LIMit <numeric_value> {DB}
:CALCulate:CINTerference:CIRatio:LIMit?

Title: CI Ratio Limit

Description: Sets and queries the amplitude of the Carrier-to-Interference Ratio measurement's relative limit.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 60 dB

Default Unit: dB

Range: 0 dB to 150 dB

:CALCulate:CINTerference:CIRatio:LIMit:FAIL?

Title: CI Ratio Limit Fail

Description: Queries the result of the Carrier-to-Interference ratio's relative limit check.

www.tehencom.com

:CALCulate:CINTerference:CIRatio:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:CINTerference:CIRatio:LIMit:STATe?

Title: CI Ratio Limit State

Description: Sets and queries the state of the Carrier-to-Interference Ratio measurement's relative limit. The set form of this command sets the limit state to be ON or OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:CINTerference:INTerference:LIMit <numeric_value> {<amplitude_units>}
:CALCulate:CINTerference:INTerference:LIMit?

Title: Interference Limit

Description:

Sets and queries the amplitude of the Interference channel power limit for the Carrier-to-Interference Ratio measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: -50 dBm

Default Unit: dBm

Range: -150 dBm to 100 dBm

:CALCulate:CINTerference:INTerference:LIMit:FAIL?

Title: CI Interference Limit Fail

Description: Queries the result of the Interference channel power limit check for the Carrier-to-Interference Ratio measurement.

:CALCulate:CINTerference:INTerference:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:CINTerference:INTerference:LIMit:STATe?

Title: Interference Limit State

Description: Sets and queries the state of the Interference channel power limit for the Carrier-to-Interference Ratio measurement. The set form of this command sets the limit state to be ON or OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:EIRPower:HORizontal:LIMit:FAIL?

Title: Horizontal EIRP Limit Pass/Fail

Description: This command queries the result of the Horizontal EIRP limit check. The query returns 1 for fail and 0 for pass.

www.tehencom.com

:CALCulate:EIRPower:HORizontal:SAVE

Title: Save Horizontal EIRP

Description: Saves the active trace's EIRP value as the Horizontal EIRP. Recalculates Sum EIRP. Use :FETCh:EIRPower to query new Horizontal and SUM values.

:CALCulate:EIRPower:LIMit:FAIL?

Title: EIRP Limit Pass/Fail

Description: This command queries the result of a limit check on EIRP. The query returns 1 for fail and 0 for pass.

:CALCulate:EIRPower:LIMit:LOWer <numeric_value> {<amplitude_units>}
:CALCulate:EIRPower:LIMit:LOWer?

Title: EIRP Lower Limit

Description: This command sets or queries the EIRP Lower limit. The query returns the EIRP lower limit in the current amplitude unit.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -99 dBm to 100 dBm

:CALCulate:EIRPower:LIMit:LOWer:STATe <0 | 1 | ON | OFF>
:CALCulate:EIRPower:LIMit:LOWer:STATe?

Title: EIRP Lower Limit State

Description: This command sets or queries the EIRP lower limit state. The query returns 1 if the lower limit state is On, otherwise 0.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:EIRPower:LIMit:UPPer <numeric_value> {<amplitude_units>}
:CALCulate:EIRPower:LIMit:UPPer?

Title: EIRP Upper Limit

Description: This command sets or queries the EIRP upper limit. The query returns the EIRP upper limit in the current amplitude unit.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -99 dBm to 100 dBm

www.tehencom.com

:CALCulate:EIRPower:LIMit:UPPer:STATe <0 | 1 | ON | OFF>
:CALCulate:EIRPower:LIMit:UPPer:STATe?

Title: EIRP Upper Limit State

Description: This command sets or queries the EIRP upper limit state. The query returns 1 if the upper limit state is On, otherwise 0.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:EIRPower:MAXimum:LIMit:FAIL?

Title: MAXimum EIRP Limit Pass/Fail

Description: This command queries the result of the maximum EIRP limit check. The query returns 1 for fail and 0 for pass.

:CALCulate:EIRPower:SUM:LIMit:FAIL?

Title: Sum EIRP Limit Pass/Fail

Description: This command queries the result of the SUM EIRP limit check. The query returns 1 for fail and 0 for pass.

:CALCulate:EIRPower:VERTical:LIMit:FAIL?

Title: Vertical EIRP Limit Pass/Fail

Description: This command queries the result of the Vertical EIRP limit check. The query returns 1 for fail and 0 for pass.

:CALCulate:EIRPower:VERTical:SAVE

Title: Save Vertical EIRP

Description: Saves the active trace's EIRP value as the Vertical EIRP. Recalculates Sum EIRP. Use :FETCh:EIRPower to query new Vertical and SUM values.

:CALCulate:INTerference:LIMit <numeric_value> {<amplitude_units>}
:CALCulate:INTerference:LIMit?

Title: Interference Tone Limit

Description: Sets and queries the limit of integrated power for the Interference Tone measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -200 dBm to 200 dBm

:CALCulate:INTerference:LIMit:FAIL?

Title: Interference Tone Limit Fail

Description: This command queries the result of a limit check

in the Interference Tone measurement.

www.tehencom.com

:CALCulate:INTerference:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:INTerference:LIMit:STATe?

Title: Interference Tone Limit State

Description: Sets and queries the state of limit on Interference Tone power. The set form of this command sets the limit state to be ON or OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit<n>:ENVelope:UPDate:Y

Title: Update Limit Envelope Amplitude

Description: This command updates the amplitude of the upper and lower limits without changing the frequencies of the inflection points.

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:LOWer:ENVelope:CREate

Title: Create Lower Limit Envelope

Description: This command is used to create an Lower limit envelope on the selected trace.

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:LOWer[:TRACe]:POINts?

Title: Lower Limit Points

Description: This command queries the lower limit trace points (Y-axis values) for the specified limit. This differs from the limit data in that a value is returned for each point in the trace to indicate the values that are being used to evaluate limit pass/fail status.

The numeric suffix on LIMit specifies which limit number to query or set data. If the suffix is omitted, the command will refer to limit 1.

If a limit of the specified number does not exist, an empty list will be returned. Points which are not covered by the limit will be 'inf'.

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit<n>:UPPer:ENVelope:CREate

Title: Create Upper Limit Envelope

Description: This command is used to create an Upper limit envelope on the selected trace.

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

www.tehencom.com

:CALCulate:LIMit<n>:UPPer[:TRACe]:POINts?

Title: Upper Limit Points

Description: This command queries the upper limit trace points (Y-axis values) for the specified limit. This differs from the limit data in that a value is returned for each point in the trace to indicate the values that are being used to evaluate limit pass/fail status.

The numeric suffix on LIMit specifies which limit number to query or set data. If the suffix is omitted, the command will refer to limit 1.

If a limit of the specified number does not exist, an empty list will be returned. Points which are not covered by the limit will be 'inf'.

Note that this command is not available for Spectral Emission Mask measurement.

LIMit Suffix Range: 1-10, Default = 1

:CALCulate:LIMit:ALARm <0 | 1 | ON | OFF>
:CALCulate:LIMit:ALARm?

Title: Limit Alarm

Description: This command enables/disables the AAE notification for limit failures.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:ENVelope:OFFSet <numeric_value> {<amplitude_units>}
:CALCulate:LIMit:ENVelope:OFFSet?

Title: Limit Envelope Offset

Description: This command sets/gets the limit envelope offset. This defines how far away from the measured signal indicated the limit envelope is placed. Use :CALCulate:LIMit:TYPe to set the currently active limit line.

Note that this command is not available for Spectral Emission Mask measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 3 dBm

Default Unit: dBm

Range: -100 dBm to 100 dBm

www.tehencom.com

:CALCulate:LIMit:ENVelope:POINt <numeric_value>
:CALCulate:LIMit:ENVelope:POINt?

Title: Number of Limit Envelope Points

Description: This command sets the number of inflection point for the limit envelope.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 20

Range: 2 to 41

:CALCulate:LIMit:ENVelope:SHAPe <SQUare|SLOPe>
:CALCulate:LIMit:ENVelope:SHAPe?

Title: Limit Envelope Shape

Description: This command sets/gets the currently active limit envelope shape.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <SQUare | SLOPe>

Query Return: SQU | SLOP

Default Value: SQUare

:CALCulate:MARKer<n>:FUNCtion <OFF|NOISe|FCOunter|QUASi>
:CALCulate:MARKer<n>:FUNCtion?

Title: Marker Function

Description: Select the marker function to perform post-processing operation. The default/OFF function performs pass through operation.

Parameter(s): <OFF | NOISe | FCOunter | QUASi>

Query Return: OFF | NOIS | FCO | QUAS

MARKer Suffix Range: 1-12, Default = 1

Default Value: OFF

:CALCulate:MARKer<n>:MAXimum

Title: Maker Move To Highest Peak

Description: Moves the marker X value to the point in the marker's assigned trace that has the highest peak.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>:MAXimum:LEFT

Title: Marker Move To Left Peak

Description: Moves the marker X value to the point in the marker's assigned trace that is the highest peak to the LEFT of the current X position of the marker.

MARKer Suffix Range: 1-12, Default = 1

www.tehencom.com

:CALCulate:MARKer<n>:MAXimum:NEXT

Title: Marker Move To Next Peak

Description: Moves the marker X value to the point in the marker's assigned trace that is the next highest peak.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>:MAXimum:RIGHt

Title: Marker Move To Right Peak

Description: Moves the marker X value to the point in the marker's assigned trace that is the highest peak to the RIGHT of the current X position of the marker.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>:MODE <POSition|DELTa|FIXed>
:CALCulate:MARKer<n>:MODE?

Title: Marker Mode

Description: Select the marker mode. POSition mode is a normal marker mode. DELTa mode is marker report difference relative to another marker. FIXed mode is a marker who's Y value is fixed at the last measured value before it is set to FIXed.

Parameter(s): <POSition | DELTa | FIXed>

Query Return: POS | DELT | FIX

MARKer Suffix Range: 1-12, Default = 1

Default Value: POSition

:CALCulate:MARKer<n>:MOVE:LEFT

Title: Marker Move To Left

Description: Moves the marker X value to the next display point to the LEFT.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>:MOVE:RIGHt

Title: Marker Move To Right

Description: Moves the marker X value to the next display point to the RIGHT.

MARKer Suffix Range: 1-12, Default = 1

www.tehencom.com

:CALCulate:MARKer<n>:REFerence <numeric_value>
:CALCulate:MARKer<n>:REFerence?

Title: Marker Reference

Description: Sets the reference marker for the specified delta marker. This setting will be applied only if the marker mode set to DELTa.

Parameter(s): <numeric_value>

Query Return: Numeric

MARKer Suffix Range: 1-12, Default = 1

Default Value: 0

Range: 0 to 12

:CALCulate:MARKer<n>[:SET]:CENTer

Title: Marker Set Center

Description: Sets the center frequency of the instrument to the current X value of the marker.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>[:SET]:RLEVel

Title: Marker Set Reference Level

Description: Sets the reference level of the instrument to the current Y value of the marker.

MARKer Suffix Range: 1-12, Default = 1

:CALCulate:MARKer<n>:STATe <0 | 1 | ON | OFF>
:CALCulate:MARKer<n>:STATe?

Title: Marker State

Description: Turns the selected marker on or off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

MARKer Suffix Range: 1-12, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate:MARKer<n>:TRACe <numeric_value>
:CALCulate:MARKer<n>:TRACe?

Title: Marker Trace
Description: Changes the trace to which the marker is currently attached.
Parameter(s): <numeric_value>
Query Return: Numeric
MARKer Suffix Range: 1-12, Default = 1
Default Value: 1
Range: 1 to 6

:CALCulate:MARKer<n>:X <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate:MARKer<n>:X?

Title: Marker Position Zero Span
Description: Sets the marker time.
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
MARKer Suffix Range: 1-12, Default = 1
Default Value: 29999.99 ms
Default Unit: ms
Range: -1000 ms to 61670 ms

:CALCulate:MARKer<n>:X <numeric_value> {HZ | KHZ | MHZ | GHZ}
:CALCulate:MARKer<n>:X?

Title: Marker Position
Description: Sets the marker frequency.
Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}
Query Return: Numeric (Hz)
MARKer Suffix Range: 1-12, Default = 1
Default Value: 53000000000 Hz
Default Unit: Hz
Range: -106000000000 Hz to 6000000000 Hz

www.tehencom.com

:CALCulate:MARKer<n>:Y <numeric_value> {<amplitude_units>}
:CALCulate:MARKer<n>:Y?

Title: Marker Value

Description: Set/Get the marker Y value. The user defined Y maker value will be applied only if the marker is in Fixed mode.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

MARKer Suffix Range: 1-12, Default = 1

Default Value: 10 dBm

Default Unit: dBm

Range: -250 dBm to 130 dBm

:CALCulate:MARKer:AOFF

Title: Marker All Off

Description: Turns all markers off.

:CALCulate:MARKer:APReset

Title: Marker Preset

Description: Presets all markers to their preset values.

:CALCulate:MARKer[:DATA]:ALL?

Title: All Marker Data

Description: Returns the last stored X and Y values of all markers. The response format is (marker1.x, marker1.y), (marker2.x, marker2.y), ... (markern.x, markern.y). Returns (0,nan) if the marker has never been turned on or the marker is preset.

:CALCulate:MARKer:FUNCtion:FCOunter:RESolution <R0|R1|R2|R3>
:CALCulate:MARKer:FUNCtion:FCOunter:RESolution?

Title: Frequency Counter Marker Resolution

Description: This command specifies the desired counter marker frequency resolution.

Value Resolution

R0 1 Hz

R1 100 mHz

R2 10 mHz

R3 1 mHz

Parameter(s): <R0|R1|R2|R3>

Query Return: R0|R1|R2|R3

Default Value: R0

www.tehencom.com

:CALCulate:MARKer:PEAK:EXCursion <numeric_value> {DB}
:CALCulate:MARKer:PEAK:EXCursion?

Title: Marker Excursion

Description: Sets the excursion for a marker. The excursion is the vertical distance from the peak to the next highest valley which must be exceeded for a peak to be considered a peak in marker max commands.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 200 dB

:CALCulate:MARKer:PEAK:EXCursion:STATe <0 | 1 | ON | OFF>
:CALCulate:MARKer:PEAK:EXCursion:STATe?

Title: Marker Excursion State

Description: Turn on/off excursion checking for marker max commands.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:MARKer:PEAK:THReshold <numeric_value> {<amplitude_units>}
:CALCulate:MARKer:PEAK:THReshold?

Title: Marker Threshold

Description: Sets the threshold level for a marker. The threshold is the level that a peak must exceed to be considered a peak in marker max commands.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -200 dBm to 100 dBm

:CALCulate:MARKer:PEAK:THReshold:STATe <0 | 1 | ON | OFF>
:CALCulate:MARKer:PEAK:THReshold:STATe?

Title: Marker Threshold State

Description: Turn on/off threshold checking for marker max commands.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:CALCulate:OBW:LIMit <numeric_value> {HZ | KHZ | MHZ | GHZ}
:CALCulate:OBW:LIMit?

Title: OBW Limit

Description: Sets and queries the frequency limit on occupied bandwidth power.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10000 Hz

Default Unit: Hz

Range: 1000 Hz to 6000000000 Hz

:CALCulate:OBW:LIMit:FAIL?

Title: OBW Limit Fail

Description: This command queries the result of a limit check on occupied bandwidth power

:CALCulate:OBW:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:OBW:LIMit:STATe?

Title: OBW Power Limit State

Description: Sets and queries the state of limit on occupied bandwidth power. The set form of this command sets the limit state to be ON or OFF

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CONFigure:ACPower

Title: Configure Adjacent Channel Power Ratio

Description: Configures and enables the default adjacent channel power ratio measurement. Disables channel power and occupied bandwidth measurements. Sets the main channel bandwidth equal to the span. Sets the adjacent channel bandwidth and channel spacing equal to the main channel bandwidth. Sets the detection method to RMS. Sets the instrument to single sweep mode (:INITiate:CONTinuous OFF). Measurement settings can be modified by using the [:SENSe]:ACPower commands before initiating a sweep.

:CONFigure:CHPower

Title: Configure Channel Power

Description: Configures and enables the default channel power measurement. Disables ACPR and occupied bandwidth measurements. Sets the integration bandwidth equal to the span. Sets the detection method to RMS. Sets the instrument to single sweep mode (:INITiate:CONTinuous OFF). Measurement settings can be modified by using the [:SENSe]:CHPower commands before initiating a sweep. Note that this measurement is not valid in zero span.

www.tehencom.com

:CONFigure:CINTerference

Title: Configure CI Measurement

Description: Configures and enables the default Carrier-to-Interference Ratio measurement. Sets the detection method to RMS. Sets the instrument to single sweep mode (:INITiate:CONTinuous OFF). Measurement settings can be modified by using the [:SENSe]:CINTerference commands before initiating a sweep. Note that this measurement is not valid in zero span.

:CONFigure:EIRPower

Title: Configure EIRP

Description: Configures the EIRP measurement. This will disable other Spectrum measurements, configure a normal peak detect trace, and set the instrument in a single sweep mode (:INITiate:CONTinuous: OFF). Measurement settings can be modified by using the [:SENSe]:EIRPower commands before initiating a sweep.

:CONFigure:INTerference

Title: Configure Interference Tone

Description: Configures and enables the default Interference Tone measurement. Disables other measurements. Sets the instrument to single sweep mode (:INITiate:CONTinuous: OFF). Measurement settings can be modified by using the [:SENSe]:INTerfernce commands before initiating a sweep. Note that this measurement is not valid in zero span.

:CONFigure:OBWidth

Title: Configure Occupied Bandwidth

Description: Configures and enables the default occupied bandwidth measurement. Disables channel power and ACPR measurements. Sets the method to %. Sets the % of power to 99%. Sets the instrument to single sweep mode (:INITiate:CONTinuous: OFF). Measurement settings can be modified by using the [:SENSe]:OBWidth commands before initiating a sweep. Note that this measurement is not valid in zero span.

:CONFigure:SEMask

Title: Configure Spectral Emission Mask Measurement

Description: Configures and enables the Spectral Emission Mask measurement. This will disable all other measurements, set the span to mask width, set the detection method to RMS, and set the instrument in a single sweep mode (:INITiate:CONTinuous OFF). Measurement settings can be modified by using the [:SENSe]:SEMask commands before initiating a sweep.

:CONFigure:USER:CARRiers[:STATe] <0 | 1 | ON | OFF>
:CONFigure:USER:CARRiers[:STATe]?

Title: SIB1 Carrier User Configuration State

Description: Enable or disable custom user configuration of mcc, mnc pairs to mobile network names mapping.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:CONFigure:USER:COUNtries[:STATe] <0 | 1 | ON | OFF>
:CONFigure:USER:COUNtries[:STATe]?

Title: SIB1 Country User Configuration State

Description: Enable or disable custom user configuration of mcc codes to country names mapping.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CSCanner:ADD:CUSTom <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},[<numeric_value>],[<string>],[<numeric_value> {PS | NS | US | MS |

www.tehencom.com

S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

Title: Add a Custom Channel

Description: This command adds a new channel to the channel scanner mode list, created from a user specified Center Frequency and Channel Span.

Parameters:

1. Center Freqency: Center fequency of the new channel.

2. Channel Span: The delta between the start frequency and stop frequency of the new channel.

3. Index: Channel scanner list index of the new channel.

(optional)

4. Channel Name: User specified channel name. (optional)

5. Dwell Time: The time duration spent scanning a given channel, specified for all channels copied. A 0 or no value indicates measurement complete fast as possible. (optional)

6. Upper Limit: Channel power upper limit (in dBm), specified for all channels copied. In absence of a user specified limit, infinite power will be used, and the limit will always pass. (optional)

7. Lower Limit: Channel power lower limit (in dBm), specified for all channels copied. In absence of a user specified limit, zero power will be used, and the limit will always pass. (optional)

For example:

CSC:ADD:CUST 890.3 MHz, 200 KHz, 0, "Test", 500 ms, -20dbm, -70dbm

The channel scanner list will be populated with a single new channel, with the user supplied Center Frequency and Channel Span. The new channels is inserted at the user specified Index, 0. The channel will be labled with a name, in this case TEST. Time spent on the new channel will be no less than, and as close as possible to, the user supplied Dwell Time, in this case 500 ms. The channel features an upper limit on its measured channel power of -20 dBm, and a lower limit on its measured channel power of -70 dBm. NOTE:

Channel Creation Limits:

Channels may only be generated within the frequency span of the analyzer. For a given command issuance, if the channel span generated by user supplied Center Freqency and Channel Span results in either: Center Frequency - (1/2 * Channel Span) < Analyzer Min Frequency

Center Frequency + (1/2 * Channel Span) > Analyzer Max Frequency

such a channel will not be generated.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},[<numeric_value>],[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

:CSCanner:ADD:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<numeric_value>],[<string>],[<numeric_value> {PS

www.tehencom.com

| NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

Title: Add Channels from Frequency Range

Description: This command adds new channels to the channel scanner mode's list, created from a user specified frequency range.

Parameters:

1. Start Freqency: Start frequency of the first channel's span.

2. Channel Spacing: The delta between adjacent channel start frequencies.

3. Channel Span: The delta between the start frequency and stop frequency of channels created.

4. Channel Count: Number of channels to be created.

5. Index: Channel scanner list index to be used for the created channel of lowest start frequency, with subsequent (Channel Count - 1) channels enumerated sequentially. (optional)

6. Channel Name: User specified channel name. (optional)

7. Dwell Time: The time duration spent scanning a given channel, specified for all channels copied. A 0 or no value indicates measurement complete fast as possible. (optional)

8. Upper Limit: Channel power upper limit (in dBm), specified for all channels copied. In absence of a user specified limit, infinite power will be used, and the limit will always pass. (optional)

9. Lower Limit: Channel power lower limit (in dBm), specified for all channels copied. In absence of a user specified limit, zero power will be used, and the limit will always pass. (optional)

For example:

CSC:ADD:FREQ 890.2 MHz, 200 KHz, 200 KHz, 5, 0, "Test", 500 ms, -20dBm, -70dBm

The channel scanner list will be populated with channels, starting at the user specified Start Frequency, in this case 890.2 MHz. Channels created will span frequencies equal to the user specified Channel Span, in this case 200 KHz. Subsequent channels generated will have adjacent spans, with the delta between adjacent channel's Start Frequency equal to the specified Channel Spacing, in this case 200 KHz. As Channel Spacing is equal to Channel Span, the channels created by this command invocation will be contiguous. However, users may generate channels with overlapping spans or channels with gaps or guard bands between channels. The number of channels generated will be equal to the user specified Channel Count, in this case 5. Thus channel's will be created with center frequencies: 890.3, 890.5, 890.7, 890.9, 891.1 (MHz) The 5 new channels are inserted at the user specified Index, 0, and are enumerated sequentially through index 4. The channel will be labled with a name, in this case TEST. Time spent on each created channel will be no less than, and as close as possible to, the user supplied Dwell Time, in this case 500 ms. Each new channel features an upper limit on their measured channel power of -20 dBm, and a lower limit on their measured channel power of -70 dBm.

NOTE:

Channel Creation Limits:

Channels may only be generated within the frequency span of the analyzer. For a given command issuance, if the Nth channel to be generated by user supplied Start Frequency, Channel Spacing, and Channel Span results in a channel for which: Start Frequency < Analyzer Min Frequency

Start Frequency + (N * Channel Spacing) > Analyzer Max Frequency

www.tehencom.com

Start Frequency + Channel Span + (N * Channel Spacing) > Analyzer Max Frequency

such channels will not be generated regardless of the user supplied Channel Count. However all created channels with a valid span will be added to the channel scanner list.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<numeric_value>],[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

:CSCanner:ADD:SIGnalstandard <string>,<numeric_value>,<numeric_value>,<numeric_value>,[<numeric_value>],[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS

www.tehencom.com

| US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

Title: Add Channels from a Signal Standard

Description: This command adds new channels to the channel scanner mode's list, copied from a user selected signal standard band.

Parameters:

1. Signal Standard: Name of the signal standard band to copy channel information from.

2. Start Channel: The first channel index to be copied from the named Signal Standard.

3. Channel Step Size: The delta between two channels copied from the named Signal Standard.

4. Channel Count: Number of channels intended to be copied.

5. Index: Channel scanner list insertion index to be used for the copied channel of lowest start frequency, with subsequent (Channel Count - 1) channels enumerated sequentially. (optional)

6. Channel Span: A value to override the signal standard ChannelSpan attribute. No value will use the signal standard's default value. (optional)

7. Dwell Time: The time duration spent scanning a given channel, specified for all channels copied. A 0 or no value indicates measurement complete fast as possible. (optional)

8. Upper Limit: Channel power upper limit (in dBm), specified for all channels copied. In absence of a user specified limit, infinite power will be used, and the limit will always pass. (optional)

9. Lower Limit: Channel power lower limit (in dBm), specified for all channels copied. In absence of a user specified limit, zero power will be used, and the limit will always pass. (optional)

For example:

CSC:ADD:SIG "P-GSM 900 - Uplink", 1, 3, 5, 0, 20 MHz, 500 ms, -20dBm, -70dBm

The channel scanner list will be populated with channels from the named Signal Standard band, in this case P-GSM 900 - Uplink. Channels created will copy selected channel's channel span and center frequency, beginning with the user specified Start Channel, in this case Signal Standard channel 1. As this band's channel step is 1, with the user supplied Channel Step Size, 3, the remaining Signal Standard channels to be copied are 4, 7, 10, and 13. As this band's channels begin with start frequency 890.2 MHz and this band's channel spacing is 200 KHz, channel's will be created with center frequencies: 890.3, 890.9, 891.5, 892.1, 892.7 (MHz) The 5 new channels are inserted at the user specified Index, 0, and are enumerated sequentially through index 4.

The channel's span will be set to the user provided value of 20 MHz. Time spent on each copied channel will be no less than, and as close as possible to, the user supplied Dwell Time, in this case 500 ms. Each new channel features an upper limit on their measured channel power of -20 dBm, and a lower limit on their measured channel power of -70 dBm. NOTE:

Channel Creation Limits:

Channels may only be generated from a Start Channel valid for the named Signal Standard band. For a given command issuance, if the user supplied Start Channel, Channel Step Size, and Channel Count result in channel numbers that either preceed or exceed the named Signal Standard band's channel numbers, then such channels are not created. However all channels valid for the named Signal Standard will be added to the channel scanner list.

www.tehencom.com

See UNIT:POWer to query or set the current amplitude units.

Parameter(s):

<string>,<numeric_value>,<numeric_value>,<numeric_value>,[<numeric_value>],[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

:CSCanner:AVERage:TYPE <LAST|MAX|MIN|AVER|RMAX|RMIN|RAV>
:CSCanner:AVERage:TYPE?

Title: Channel Scanner Averaging Type

Description: Set the channel averaging type to indicate the field for determining the average against.

Channel Parameter:

LAST: Current

MAX: Channel Power Maximum

MIN: Channel Power Minimum

AVER: Channel Power Average

RMAX: Channel Power Rolling Maximum

RMIM: Channel Power Rolling Minimum

RAV: Channel Power Rolling Average

Parameter(s): <LAST | MAX | MIN | AVER | RMAX | RMIN | RAV>

Query Return: LAST | MAX | MIN | AVER | RMAX | RMIN | RAV

Default Value: LAST

:CSCanner:CHANnel?

Title: Channel List

Description: Query the parameters of all channels in Channel Scanner list.

:CSCanner:CHANnel:LIMit?

Title: Channel Member Limit

Description: Query the maximum Channel Scanner list size.

Query Return: Numeric

Default Value: 60

Range: 60 to 60

:CSCanner:CLEar <numeric_value>

Title: Clear Channel

Description: Clear all measurement results of a channel at a given Channel Scanner list index.

Parameter(s): <numeric_value>

:CSCanner:CLEar:ALL

Title: Clear All Channels

Description: Clear all measurement results of all channels in Channel Scanner list.

www.tehencom.com

:CSCanner:DELete <numeric_value>

Title: Delete Channel

Description: Delete a channel at a given Channel Scanner list index

Parameter(s): <numeric_value>

:CSCanner:DELete:ALL

Title: Delete All Channels

Description: Delete all channels in Channel Scanner list.

:CSCanner:EDIT:CUSTom <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

Title: Edit Channel with custom data

Description: This command replaces a member of the channel scanner mode's list, created from user specified Center Frequency and Channel Span.

Parameters:

1. Center Freqency: Center fequency of the new channel.

2. Channel Span: The delta between the start frequency and stop frequency of the new channel.

3. Index: Channel scanner list index of the channel to be replaced.

4. Channel Name: User specified channel name. (optional)

5. Dwell Time: The time duration spent scanning a given channel, specified for all channels copied. A 0 or no value indicates measurement complete fast as possible. (optional)

6. Upper Limit: Channel power upper limit (in dBm), specified for all channels copied. In absence of a user specified limit, infinite power will be used, and the limit will always pass. (optional)

7. Lower Limit: Channel power lower limit (in dBm), specified for all channels copied. In absence of a user specified limit, zero power will be used, and the limit will always pass. (optional)

For an example of this channel creation method, see CSCanner:ADD:CUSTom.

The channel created by this command is done in the same way and with the same restrictions.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

:CSCanner:EDIT:SIGnalstandard <string>,<numeric_value>,<numeric_value>,[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS | US | MS | S | MIN |

www.tehencom.com

HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

Title: Edit Channel with Signal Standard data

Description: This command replaces a member of the channel scanner mode's list, using data copied from a user selected signal standard band.

Parameters:

1. Signal Standard: Name of the signal standard band to copy channel information from.

2. Channel Index: The index of the channel to be copied from the named Signal Standard.

3. Index: Channel scanner list index of the channel to be replaced.

4. Channel Span: A value to override the signal standard ChannelSpan attribute. No value will use the signal standard's default value. (optional)

5. Dwell Time: The time duration spent scanning a given channel, specified for all channels copied. A 0 or no value indicates measurement complete fast as possible. (optional)

6. Upper Limit: Channel power upper limit (in dBm), specified for all channels copied. In absence of a user specified limit, infinite power will be used, and the limit will always pass. (optional)

7. Lower Limit: Channel power lower limit (in dBm), specified for all channels copied. In absence of a user specified limit, zero power will be used, and the limit will always pass. (optional)

For an example of this channel creation method, see CSCanner:ADD:SIGnalstandard.

The channel copied by this command is done in the same way and with the same restrictions.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <string>,<numeric_value>,<numeric_value>,[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}]

:CSCanner:LOG <0 | 1 | ON | OFF>
:CSCanner:LOG?

Title: Channel Scanner Logging Enable

Description: Set or query whether or not Channel Scanner data logging is enabled.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:CSCanner:LOG:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CSCanner:LOG:INTerval?

Title: Channel Scanner Logging Interval Time

Description: Set or query the interval time between logging data point.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1000 ms

Default Unit: ms

Range: 100 ms to 60000 ms

:CSCanner:RESults? [<ALL|STRip|BAR>],[<numeric_value>]

Title: Channel Results

Description: Query channel results with options to filter on result type and channel index.

Parameters:

1. Result Type: Enumerable value specifying the result type to query. ALL or the lack of a result type returns all channel data, which includes: channel creation parameters channel history

channel measurement result data index of the most recently scanned channel current channel list size. STRip returns channel history, channel creation parameters, last scanned channel index, and list size. BAR returns channel measurement results, creation parameters, last scanned channel index, and list size. (optional)

2. Index: Channel scanner list index to query measurement results from. Leaving this field empty returns results from every channel. (optional)

Parameter(s): [<ALL|STRip|BAR>],[<numeric_value>]

:CSCanner:SORT:ASC <CFR|BWID|DTIM|LIMI|LAST|MAX|MIN|AVER|RMAX|RMIN|RAV>

Title: Sort Channels in Ascending Order

Description: Sort the channels in ascending order based on the selected channel parameter or result data.

Channel Parameter/Result:

CFR: Center Frequency

BWID: Integration Bandwidth

DTIM: Dwell Time

LIMI: Limit Pass/Fail

LAST: Channel Power Last Value

MAX: Channel Power Maximum

MIN: Channel Power Minimum

AVER: Channel Power Average

RMAX: Channel Power Rolling Maximum

RMIM: Channel Power Rolling Minimum

RAV: Channel Power Rolling Average

Parameter(s): <CFR|BWID|DTIM|LIMI|LAST|MAX|MIN|AVER|RMAX|RMIN|RAV>

www.tehencom.com

:CSCanner:SORT:DESC
<CFR|BWID|DTIM|ULIM|LLIM|LAST|MAX|MIN|AVER|RMAX|RMIN|RAV>

Title: Sort Channels in Descending Order

Description: Sort the channels in descending order based on the selected channel parameter or result data.

Channel Parameter/Result:

CFR: Center Frequency

BWID: Integration Bandwidth

DTIM: Dwell Time

ULIM: Upper Limit Pass/Fail

LLIM: Lower Limit Pass/Fail

LAST: Channel Power Last Value

MAX: Channel Power Maximum

MIN: Channel Power Minimum

AVER: Channel Power Average

RMAX: Channel Power Rolling Maximum

RMIM: Channel Power Rolling Minimum

RAV: Channel Power Rolling Average

Parameter(s): <CFR | BWID | DTIM | ULIM | LLIM | LAST | MAX | MIN | AVER | RMAX | RMIN | RAV>

:CSCanner:SSTandard:ATTRibutes? <string>

Title: Signal Standard Attributes Query

Description: This command returns the attributes associated with a named signal standard. Such attributes are useful for reference when parameterizing CSCanner:ADD:SIGnalstandard command invocations. Attributes:

ChannelSpan: The span of each channel in the band

Increment: The delta between the bands channel numbers

Spacing: The delta beteween start frequencies

StartChannel: The first channel number in the band

StartFrequency: The start frequency of the first channel in the band

StopChannel: The last channel number in the band

StopFrequency: The stop frequency of the last channel in the band

See CSCanner:SSTandard:CATalog for a list of supported signal standard names.

Parameter(s): <string>

:CSCanner:SSTandard:CATalog?

Title: Signal Standard Catalog Query

Description: This command returns a list of available signal standards as a json array Example return value:

{ "Signal Standards": ["P-GSM 900 - Uplink", "P-GSM 900 - Downlink", "DCS 1800 - Uplink", "DCS 1800 - Downlink", ... (cont.)

www.tehencom.com

:CSCanner:UPDate:STATe <0 | 1 | ON | OFF>
:CSCanner:UPDate:STATe?

Title: Channel Scanner Update

Description: Channel update state determines whether the channel scanner is update in every sweep.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

:DIAGnostic:SWEep:TIME?

Title: Measured Sweep Time

Description: This command queries the measured sweep time, in number of milliseconds. This command will return "nan" if no measured sweep time is available, which happens if the sweep was reset and the instrument has not yet swept enough to measure a full sweep.

:DISPlay:EXTernal:DEVices?

Title: External devices

Description: Gets a json object with the external devices configuration.

:DISPlay:IMPedance:MATCh:DEVice <NONe|M75|OTHer>
:DISPlay:IMPedance:MATCh:DEVice?

Title: Impedance matching device

Description: Sets the impedance matching device.
This can be used to compensate for the insertion loss
of an external impedance matching device such as the
Anritsu 12N50-75B adapter.
NONe: Default 50 Ohm match (no adapter)
M75: Scalar correction for Anritsu 12N50-75B (75 Ohm to 50 Ohm adapter)
OTHer: Alows the user to enter a custom gain value

Parameter(s): <NONe|M75|OTHer>

Query Return: NON|M75|OTH

Default Value: NONe

:DISPlay:IMPedance:MATCh:DEVice:CUSTom:LOSS <numeric_value> {DB}
:DISPlay:IMPedance:MATCh:DEVice:CUSTom:LOSS?

Title:

Description: Sets custom loss value for when the impedance matching device is "OTHer"
See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: -99.9 dB to 99.9 dB

www.tehencom.com

:DISPlay:POINtcount <numeric_value>
:DISPlay:POINtcount?

Title: Display Point Count

Description: Changes the number of display points the instrument currently measures. Increasing the number of display points can improve the resolution of measurements but will also increase sweep time.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 501

Range: 10 to 4001

:DISPlay:VIEW:SPECtrogram:AADJust

Title: Spectrogram Scale Auto Adjust

Description: Automatically adjusts the spectrogram scale reference and bottom amplitude to the max and min amplitudes, respectively, of the most recent trace data collected.

:DISPlay:VIEW:SPECtrogram:BOTTom <numeric_value> {<amplitude_units>}
:DISPlay:VIEW:SPECtrogram:BOTTom?

Title: Spectrogram Scale Bottom

Description: The spectrogram scale bottom indicates the amplitude that corresponds to the least intense color in the spectrogram waterfall display. This is used in conjunction with the spectrogram scale reference command to establish the color gradient scale.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: -90 dBm

Default Unit: dBm

Range: -150 dBm to 30 dBm

www.tehencom.com

:DISPlay:VIEW:SPECtrogram:HISTory[:DATA]? <numeric_value>

Title: Spectrogram History Data

Description: This command transfers the spectrogram history from the instrument to the client.

This command takes an integer parameter specifying the last trace ID received by client and returns all trace data after the received trace ID in a binary block response. The binary block response is formatted as below

History Header: (20 bytes)

Number Of Traces: 4 bytes, unsigned integer

Number Of Trace Points Per Trace : 4 bytes, unsigned integer

Last trace ID in the block: 4 bytes, unsigned integer

Reserved: 8 bytes

History Body:

Block of trace points formatted as a 4 byte, single-precision floating point value for each point. The history body size (in bytes) can be calculated as: <Number Of Traces> * (<Number Of Trace Points Per Trace> * 4).

If no new trace data was found in history, this command will return header only binary block with all zeros except <last trace ID in the block> is set to the last trace ID received by client.

Parameter(s): <numeric_value>

:DISPlay:VIEW:SPECtrogram:HISTory:ELAPsed? <numeric_value>

Title: Spectrogram History Elapsed

Description: Provides the time values for the specified index in spectrogram history. Returns a negative value if the specified index is invalid.

Parameter(s): <numeric_value>

:DISPlay:VIEW:SPECtrogram:HUE <numeric_value>
:DISPlay:VIEW:SPECtrogram:HUE?

Title: Spectrogram Hue

Description: The spectrogram hue command indicates the color that represents the highest amplitude in the spectrogram waterfall display. All of the other amplitudes are represented by colors starting at this hue setting and following a color wheel.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 359

www.tehencom.com

:DISPlay:VIEW:SPECtrogram:REFerence <numeric_value> {<amplitude_units>}
:DISPlay:VIEW:SPECtrogram:REFerence?

Title: Spectrogram Scale Reference

Description: The spectrogram scale reference indicates the amplitude that corresponds to the most intense color in the spectrogram waterfall display. This is used in conjunction with the spectrogram scale bottom command to establish the color gradient scale.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -150 dBm to 30 dBm

:DISPlay:VIEW:SPECtrogram:TRACe:SELection <POSition|TIME>
:DISPlay:VIEW:SPECtrogram:TRACe:SELection?

Title: Cursor Selection

Description: Selects which time cursor setting to use, position or time. For position, the DISP:VIEW:SPEC:POS setting will be used to determine which trace from the spectrogram history to show. For time, the DISP:VIEW:SPEC:TIME setting will be used instead.

Parameter(s): <POSition | TIME>

Query Return: POS | TIME

Default Value: POSition

:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision <numeric_value>
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision?

Title: Scale Per Division

Description: Set or query the scale per division setting of trace graph. This command doesn't change any behavior in the backend, but will be included in save/recall operations.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 10

Range: 1 to 15

:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision <numeric_value>
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision?

Title: Scale Per Division

Description: Set or query the scale per division setting of trace graph. This command doesn't change any behavior in the backend, but will be included in save/recall operations.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 10

Range: 1 to 15

www.tehencom.com

:DISPlay[:WINDow]:TRACe:Y:SCALe:RLEVel <numeric_value> {<amplitude_units>}
:DISPlay[:WINDow]:TRACe:Y:SCALe:RLEVel?

Title: Reference Level

Description: Sets the reference level amplitude value for the y-axis. This value is the display reference level, which means it has the reference level offset applied. It also means that a change to the reference level offset will change this setting (though the actual, unadjusted reference level will stay the same).

Note that this may cause a change in attenuation if the automatic input attenuation coupling is enabled. For the purpose of coupling, the actual reference level (without the offset applied) is used, though this command will always reflect the display value.

For example, suppose a starting reference level offset of 0 dB and a reference level of 10 dBm. If the offset is set to 20 dB, the display reference level will be set to 10 dBm - 20 dB = -10 dBm; no attenuation change will occur. Likewise, if the starting reference level offset is 20 dB and the (display) reference level is set to 0 dBm, the display reference level will remain at 0 dBm, though the (actual) reference level value used in auto attenuation coupling is 0 dBm + 20 dB = 20 dBm.

To obtain the actual reference level, either add in the reference level offset, or temporarily set the offset to 0 (in which case the display reference level will reflect the actual one).

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -150 dBm to 30 dBm

:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:AUTO[:IMMediate] <numeric_value> {DB}

Title: Automatic Reference Level

Description: This command causes the reference level to immediately be set to an automatically computed value that best displays the particular data. The reference level is set to a specified dB above the selected trace max value. This command is semantically equivalent to :DISPlay[:WINDow]:TRACe[:SCALe]:RLEVel <amplitude> with the computed value for amplitude.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

www.tehencom.com

:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet?

Title: Reference Level Offset

Description: Sets the reference level offset value for the y-axis.

This offset is used for display purposes only, and does not affect the actual reference level used for auto attenuation coupling, or any other settings that depend on reference level.

See DISP:WIND:TRAC:Y:SCAL:RLEV for details on the interaction between reference level offset and display reference level.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: -99.9 dB to 99.9 dB

:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet?

Title: Reference Level Offset

Description: Sets the reference level offset value for the y-axis.

This offset is used for display purposes only, and does not affect the actual reference level used for auto attenuation coupling, or any other settings that depend on reference level.

See DISP:WIND:TRAC:Y:SCAL:RLEV for details on the interaction between reference level offset and display reference level.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: -99.9 dB to 99.9 dB

:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision?

Title: Secondary Scale Per Division

Description: Set or query the scale per division setting the secondary axis scale (E.G. For trace math trace).

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 10 dB

Default Unit: dB

Range: 1 dB to 15 dB

www.tehencom.com

:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision?

Title: Secondary Scale Per Division

Description: Set or query the scale per division setting the secondary axis scale (E.G. For trace math trace).

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 10 dB

Default Unit: dB

Range: 1 dB to 15 dB

:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel?

Title: Secondary Reference Level

Description: Sets the reference level amplitude value for the secondary y-axis. (E.G. For trace math trace)

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 10 dB

Default Unit: dB

Range: -100 dB to 100 dB

:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel <numeric_value> {DB}
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel?

Title: Secondary Reference Level

Description: Sets the reference level amplitude value for the secondary y-axis. (E.G. For trace math trace)

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 10 dB

Default Unit: dB

Range: -100 dB to 100 dB

www.tehencom.com

:EMF:STORe:PATH <string>
:EMF:STORe:PATH?

Title: EMF Log Location

Description: This command sets or queries the relative path to the directory wheres EMF result files will be saved. The log location is only used when EMF logging is enabled. The path is relative to the selected EMF storage device specified by the Device setting (:MMEMory:EMF:STORe:LOG).

Parameter(s): <string>

Default Value: EMF

:FETCh:ACPower?

Title: Fetch Adjacent Channel Power Ratio

Description: Returns the most recent adjacent channel power ratio measurement results. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate

Data is returned as 9 comma-separated values: main channel power, absolute lower adjacent channel power, absolute upper adjacent channel power, absolute lower alternate channel power, absolute upper alternate channel power, relative lower adjacent channel power, relative upper adjacent channel power, relative lower alternate channel power, relative upper alternate channel power.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400 and return the string "nan,nan,nan,nan,nan,nan,nan,nan,nan"

:FETCh:AMPLitude? <numeric_value> {HZ | KHZ | MHZ | GHZ}

Title: Fetch Amplitude

Description: Returns the amplitude at the given frequency. The command does not wait for the sweep to complete.

If the trace data at the requested frequency is invalid (or out of span) then NAN is returned and error code -230 is indicated.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

:FETCh:BPOWer?

Title: Fetch Burst Average Power

Description: Returns the most recent burst average power measurement result. If the measurement is not enabled (see [:SENSe]:BPOWer:STATe) then, the instrument will indicate error -400. If a measurement is in progress, it blocks until complete.

www.tehencom.com

:FETCh:CAGGregation?

Title: Fetch Carrier Aggregation Measurements

Description: Returns the Carrier Aggregation measurement results for each carrier in a JSON format. Each carrier measurement result will include the Carrier Id, measurement name, and measurement results. If a measurement is in progress, it blocks until the measurement is completed. Data is available only up to the available number of carriers, the rest will be an empty JSON. See command [:SENSe]:CAGGregation:CARRier:COUNt to set or query the number of carriers. An example of Carrier Aggregation measurement in 5GNR is as follows (Please refer to the individual measurement for further example):

{

"CarrierAggregationResults":

[{"CarrierId":1,

"PciMeasurement":[{...}],

"SsbMeasurement":[{...]},

]},

{},{},{},{},{},{},{}]}

:FETCh:CHPower?

Title: Fetch Channel Power and Density

Description: This command returns the most recent channel power measurement results: channel power and channel power density.

If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate. Data is returned as 2 comma-separated values: channel power, channel power density.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400 and return the string "nan,nan"

:FETCh:CHPower:CHPower?

Title: Fetch Channel Power

Description: Returns the most recent channel power measurement result. It returns only the channel power, not the channel power density. Use :FETCh:CHPower? to get both channel power and channel power density.

If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400 and return the string "nan,nan"

www.tehencom.com

:FETCh:CHPower:DENSity?

Title: Fetch Channel Power Density

Description: Returns the most recent channel power density measurement result. It returns only the channel power density, not the channel power.

Use :FETCh:CHPower? to get both channel power and channel power density.

If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400 and return the string "nan,nan"

:FETCh:CINTerference?

Title: Fetch CI Ratio

Description: Returns the most recent Carrier-to-Interference measurement result. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh?

If the measurement is not enabled (see [:SENSe]:CINTerference:STATe) then, the instrument will indicate error -400.

:FETCh:CINTerference:CIRAtio?

Title: Fetch Carrier to Interference Ratio

Description: Returns the most recent Carrier-to-Interference Ratio measurement result.

Use :FETCh:CINTerference? for complete Carrier-to-Interference Measurement data. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400.

:FETCh:CINTerference:CPOWer?

Title: Fetch C/I Carrier Channel Power

Description: Returns the most recent C/I carrier channel power measurement result. Use :FETCh:CINTerference? for complete Carrier-to-Interference Measurement data. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400.

www.tehencom.com

:FETCh:CINTerference:IPOWer?

Title: Fetch C/I Interference Channel Power

Description: Returns the most recent C/I interference channel power measurement result. Use :FETCh:CINTerference? for complete Carrier-to-Interference Measurement data. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:CHPower:STATe) then, the instrument will indicate error -400.

:FETCh:CONStellation:PBCH?

Title: Fetch PBCH Constellation

Description: Get the latest Physical Broadcast Channel (PBCH) constellation hitmap results for the selected beam after waiting for the current measurement to complete. Beam selection is performed using the [:SENSe]:CONStellation:PBCH:BEAM command. The results are in JSON format with the hitmap represented as an array of arrays [I,Q,C] where I = real coordinate, Q = imaginary coordinate, and C = hit count. An example response looks like this, but real responses will likely have many more values than shown here:

{

"qpsk":[[0.673828,0.697266,1],[-0.732422,-0.720703,1],[0.708984,-0.720703,5]],

"carrierId":1

}

In NRAD mode, there will be an additional key-value pair indicating the selected beam number.

"beam":17

:FETCh:CONStellation:PDSCh?

Title: Fetch Data Channel Constellation

Description: Get the latest Physical Downlink Shared Channel (PDSCH) constellation results after waiting for the current measurement to complete. The results are in JSON format with the hitmap represented as an array of arrays [I,Q,C] where I = real coordinate, Q = imaginary coordinate, and C = hit count. Only constellations that match the selected modulation type (see [:SENSe]:MODulation:TYPE) are returned. An example response looks like this, but real responses will likely have many more values than shown here:

{

"carrierId":1,

"qam64":[[0.779297,-0.427734,1],[0.169922,0.439453,1],[0.169922,-0.181641,1]],

}

www.tehencom.com

:FETCh:CONTrol?

Title: Fetch Control Channel Measurement

Description: Returns the Control Channel measurements in json format. This includes Sync, Reference, Broadcast and Control channel measurements. If a measurement is in progress, it blocks until complete.

{
"antennaOneOn":true,
"antennaThreeOn":true,
"antennaTwoOn":false,
"antennaZeroOn":false,
"carrierId":1,
"cellId":91,
"cellIdGroup":30,
"cfi":2,
"correctedCarrierFrequency":-201,
"detectedAntennaCount":1,
"detectedCpType":1,
"frameStart":123456,
"frequencyError":-200,
"gps":{
"coordinates":"37.146865, -121.656103,112m",
"time":"Sat Aug 31 00:44:13 2020 GMT"
},
"pbch":{
"evm":{
"peakEvm":{
"percent":15,
"subcarrierNumber":3,
"symbolNumber":4
},
"rmsEvm":3
},
"power":{
"perReWatts":1.1939880550926317e-09,
"perReDBM":-59.23000017958162,
"totalWatts":9.885530971587295e-10,
"totalDBM":-60.04999998900905
}
},
"pcfich":{

www.tehencom.com

```
"evm":{
"peakEvm":{
"percent":25,
"subcarrierNumber":10,
"symbolNumber":0
},
"rmsEvm":5
},
"power":{
"perReWatts":3.0902954222256074e-09,
"perReDBM":-55.10000001445821,
"totalWatts":9.549926289764696e-10,
"totalDBM":-60.19999980465677
}
},
"pdcch":{
"evm":{
"peakEvm":{
"percent":35,
"subcarrierNumber":56,
"symbolNumber":1
},
"rmsEvm":7
},
"power":{
"perReWatts":1.4125375855655877e-09,
"perReDBM":-58.499999874118416,
"totalWatts":6.095368689784659e-10,
"totalDBM":-62.15000020136438
}
},
"phich":{
"evm":{
"peakEvm":{
"percent":30,
"subcarrierNumber":20,
"symbolNumber":1
},
"rmsEvm":6
},
```


www.tehencom.com

```
"power":{
"perReWatts":1.892343561848973e-09,
"perReDBM":-57.230000130347314,
"totalWatts":7.533555503869141e-10,
"totalDBM":-61.230000076941664
}
},
"ppmFrequencyError":200000000,
"pss":{
"evm":{
"peakEvm":{
"percent":5,
"subcarrierNumber":1,
"symbolNumber":2
},
"rmsEvm":1
},
"power":{
"perReWatts":7.063175644361763e-10,
"perReDBM":-61.509999937447816,
"totalWatts":2.259435859741644e-09,
"totalDBM":-56.459999827929025
}
},
"rs":{
"evm":{
"peakEvm":{
"percent":20,
"subcarrierNumber":4,
"symbolNumber":0
},
"rmsEvm":4
},
"power":{
"perReWatts":7.277797976712457e-09,
"perReDBM":-51.38000004096958,
"totalWatts":1.224616244144273e-08,
"totalDBM":-49.11999984084157
}
},
```


www.tehencom.com

"sectorId":1,
"sss":{
"evm":{
"peakEvm":{
"percent":10,
"subcarrierNumber":2,
"symbolNumber":3
},
"rmsEvm":2
},
"power":{
"perReWatts":1.2941958402734608e-09,
"perReDBM":-58.880000003948076,
"totalWatts":1.0715192502175336e-09,
"totalDBM":-59.700000223000316
}
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"overallStatusMessage":"statusControlChanMeasDone",
"overallStatusNumber":19
"statusMessage": "statusPciDone",
"statusNumber": 10
},
"timeOffset":1000
"totalNonSharedChannelsPowerWatts":5.260172838461585e-08,
"totalNonSharedChannelsPowerDBM":-42.78999985588293}

www.tehencom.com

}

:FETCh[:DATA]:ALL? [<ASCii|INTeger|REAL>],[<numeric_value>]

Title: Fetch Trace Data All

Description: This command transfers trace data and trace status data from the instrument to the controller for all traces with display state ON (see Trace Display State commands), as well as measurement data for the currently active measurement (see ":DISPlay:MEASurement") in JSON format.

An optional parameter can be given to set the format data output, the parameter follows the same enumerable value as the Trace Data format setting. When using REAL as the output format, the numeric value field is required. See the document on Trace Data Format (:FORMat[:TRACe][:DATA]) for more info.

The returned response is formatted as a list of packets, each of which has a header detailing its contents. A single value (numeric ascii if ascii format is specified, or uint8 otherwise) precedes the packet list that specifies the number of packets contained in the response. Overall format is as follows:

<IEEE definite length arbitrary block header><Number of packets:uint8><Packet #1><Packet #2>...<Packet #N>

The headers of each packet are either in a comma-separated list if the user requests ASCii format, or in binary otherwise. The individual packets are formatted as follows (value order is preserved between binary and ascii):

<Header Length:uint16><Packet Type:uint8><Trace number:uint8><Packet Data Payload Length:uint32><DataFormat:uint8> <Zero Padding:3 Bytes><Data Payload>

Packet type is represented as: 0 -> Trace Data, 1 -> Trace Status, 2 -> JSON Measurement data

Data Format is represented as: 0 -> ASCII, 1 -> Integer32, 2 -> Real32, 3 -> Real64

The measurement data is in a JSON format with an extra item added under the key "measurementName" indicating the active measurement.

Parameter(s): [<ASCii|INTeger|REAL>],[<numeric_value>]

:FETCh:DENSity:DATA? <numeric_value>

Title: RTSA density data

Description: In RTSA modes, returns the density data

Parameter(s): <numeric_value>

:FETCh:EIRPower?

Title: Fetch EIRP

Description: This command returns the current EIRP, Max EIRP, Horizontal EIRP, Vertical and Sum EIRP results in dBm. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate. Data is returned as 2 comma-separated values: EIRP power, Max power. If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan".

www.tehencom.com

:FETCh:EIRPower:DATA?

Title: Fetch Current EIRP

Description: This command returns the current EIRP measurement result in dBm.

If the instrument is sweeping, it will not return until the sweep is complete.

If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate. If the measurement is not active, the instrument will indicate error -400 and return the string "nan".

:FETCh:EIRPower:MAXimum?

Title: Fetch MAXimum EIRP

Description: This command returns the maximum EIRP measurement result in dBm.

If the instrument is sweeping, it will not return until the sweep is complete.

If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate. If the measurement is not active, the instrument will indicate error -400 and return the string "nan".

:FETCh:EMF?

Title: Fetch EMF

Description: Return the current EMF measurement data.

Return value is json format as follows:

{

"CurrentAvg": <average of all isotropic results for current measurement>,

"CurrentMin": <minimum of all isotropic results for current measurement>,

"CurrentMax": <maximum of all isotropic results for current measurement>,

"TotalAvg": <average of all isotropic results across all measurements>,

"TotalMin": <minimum of all isotropic results across all measurements>,

"TotalMax": <maximum of all isotropic results across all measurements>,

"CurrentLimitResult": <pass/fail result of limit check for current measurement>,

"TotalLimitResult": <pass/fail result of limit check across all measurements>,

"CurrentMeasurementCount": <number of the current measurement starting from one>,

"CurrentAxis": <the current antenna axis setting X Y or Z>,

"ElapsedMeasurementTime": <number of milliseconds since start of current measurement>

}

Note that the name-value pairs in the response may be in any order.

If the measurement is not enabled with EMF:STATE then, the instrument will indicate error -400 and return a response with all values as 'nan'.

www.tehencom.com

:FETCh:FRAMe:POWer?

Title: Fetch Frame Power Analysis Measurements

Description: Returns the latest Frame Power Analysis measurements in json format. {

"carrierId":1,

"dwPtsPower":-11.686997248037647,

"framePowerDisplay":{

"displayPoints":4001,

"startTime":0,

"stopTime":0

},

"gps":{

"coordinates":"37.146865, -121.656103,112m",

"time":"Sat Aug 31 00:44:13 2020 GMT"

},

"status":{

"hardwareErrors":{

"ADCOverRange":0,

"DeviceAccess":0,

"EEPROM":0,

"IrregularData":0,

"Limit":0,

"LockLO1":0,

"LockLO2":0,

"NoCal":0,

"Overpower":0,

"SLOLock":0,

"Saturation":0,

"TgLockLo1":0

},

"statusMessage":"statusFramePowerMeasDone",

"statusNumber":27

},

"subframePowers":[-11.689188015956093,-12.716933625147382,-62.51848880635962,-62.53143933862779,-61.67019300047982,

-11.670055450451763,-11.670313553247079,-11.664923673930858,-11.665172925879165,-11.664404801000856],

"slotPower":{

"slotPower":
[-80.54065996005235,-81.64280984558984,-89.53351755973559,-92.06537520209018,-87.16220702208979,-86.59842952593326,-90.09767346186983,-90.4888434578913,-87.21263721353337,-87.07058138343614,-85.63481509445133,-87.44050546781867,-85.9671934

www.tehencom.com

8317012,-85.75635347781137,-88.8697573461123,-90.30780137936135,-87.33643988270461,-87.64654104952463,-87.83688674927848,-89.51407913594818],

}, },

"timingError":null,

"guardPeriodPower": nan,

"txTransmitOffPower": nan,

"totalPower":-13.354569314227396,

"traceMeasurementPower":[-7.5062150955200195,-6.351113319396973,...,-11.05777645111082,-10.479146957397464]},

"upPtsPower":-62.51650224671434,

"possibleSsfConfigsList":[ssf0,ssf3]

}

:FETCh:INTerference:POWer?

Title: Fetch Interference Tone Integrated Power

Description: Returns the most recent Interference Tone measurement result. It returns only the integrated power.

If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

If the measurement is not enabled (see [:SENSe]:INTerference:STATe) then, the instrument will indicate error -400 and return the string "nan,nan"

www.tehencom.com

:FETCh:MIMO:ANTennas?

Title: Fetch MIMO Antennas

Description: Returns the MIMO Antennas measurements in json format. If a measurement is in progress, it blocks until complete.

{
"antennaOneOn":true,
"antennaOnePower":-83.17574100587828,
"antennaThreeOn":true,
"antennaThreePower":-83.66073582353636,
"antennaTwoOn":false,
"antennaTwoPower":null,
"antennaZeroOn":false,
"antennaZeroPower":null,
"carrierId":1,
"detectedAntennaCount":2,
"gps":{
"coordinates":"nan, nan,nanm",
"time":""
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"statusMessage":"statusAntDetectionDone",
"statusNumber":14
}
}

www.tehencom.com

:FETCh:OBWidth<n>?

Title: Fetch Occupied Bandwidth

Description: Returns a different set of measurement information depending on the suffix. The default suffix of 1 will return the most recent occupied bandwidth measurement results: occupied bandwidth, percent of power and dB down. One of either percent of power or dB down is measured and the other is set. That is determined by the value set using [:SENSe]:OBWidth:METHod. If the measurement is not enabled with :SENSe:OBWidth:STATe then, the instrument will indicate error -400 and return the string "nan,nan,nan".

Using suffix 2 will return the most recent channel power, x dB bandwidth, percent bandwidth, and transmit frequency error. The channel power and occupied bandwidth measurements will be calculated regardless of CHP:STAT and OBW:STAT settings.

Using suffix 3 will return the same results as 1, plus the start, center, and end frequencies of the occupied bandwidth.

For all suffixes, if the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will return error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

OBWidth Suffix Range: 1-3, Default = 1

www.tehencom.com

:FETCh:OTA:MAPPing?

Title: Fetch OTA Coverage Mapping

Description: Available in Spectrum Analyzer, LTE, 5GNR, and CSC modes (see [:SENSe]:MODE)

Returns the most recent Coverage Mapping measurement results. The OTA Coverage Mapping measurement must be the active measurement (see [:SENSe][:OTA]:MAPPing:STATe);

otherwise, the instrument will report error -400 and return the string "{}". If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid it will report error -400. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate.

Data is returned in JSON format. Note that the name-value pairs in the response may be in a different order.

For CHP measurement, data is returned as follows:

{"mapValue":"<channel power value>","measurementType":"CHP","power":"<channel power>"}

For PSD measurement, data is returned as follows:

{"mapValue":"<channel power spectral density value>","measurementType":"PSD","density":"<channel power spectral density>"}

For RSSI measurement, data is returned as follows:

{"mapValue":"<rssi value>","measurementType":"RSSI","rssi":"<rssi value>"}

For RSP/RSQ/RSS (LTE) measurements, data is returned as follows:

{"centerFreq":"<center frequency>","ssbOffset":"<ssb offset>","channelBW":"<channel bandwidth>","measurementType":"<type>","values":"<measurement values>"}

For SSP/SSQ/SSS (5G) measurements, data is returned as follows:

{"centerFreq":"<center frequency>","channelBW":"<channel bandwidth>","measurementType":"<type>","values":"<measurement values>"}

www.tehencom.com

:FETCh:PCI?

Title: Fetch PCI Measurements

Description: Returns the PCI measurements. This command returns cell id, group id, corrected carrier frequency, detected beam,

frame start, frequency error, sector id, group id, and time offset(in ns) as output in json format.

If a measurement is in progress, it blocks until complete.

An example is as follows:

{
"carrierId":1,
"cellId": 0,
"cellIdGroup": 0,
"correctedCarrierFrequency": 4499999985.264854,
"detectedBeam": 4,
"frameStart": 233097,
"frequencyError": -14.735145792134368,
"ppmFrequencyError": 0.09346635883256266,
"sectorId": 0,
"status": {
"hardwareErrors": {
"ADCOverRange": 0,
"DeviceAccess": 0,
"EEPROM": 0,
"IrregularData": 0,
"Limit": 0,
"LockLO1": 0,
"LockLO2": 0,
"NoCal": 0,
"Overpower": 0,
"SLOLock": 0,
"Saturation": 0,
"TgLockLo1": 0
},
"statusMessage": "statusPciDone",
"statusNumber": 10
},
"gps":{
"coordinates":"37.14681, -121.65609, 128m",
"time":"Fri Jun 28 19:56:45 2019 GMT"
},

www.tehencom.com

"timeOffset": -634782.9687499882
}

www.tehencom.com

:FETCh:PDSCh?

Title: Fetch Data Channel Measurement

Description: Returns the Data Channel measurements in json format.

If a measurement is in progress, it blocks until complete.

{
"activeRbCount":-1,
"carrierId":1,
"gps":{
"coordinates":"37.146865, -121.656103,112m",
"time":"Sat Aug 31 00:44:13 2019 GMT"
},
"ostp":-27.704519932556128,
"percentUtilization":17.430730819702148,
"qam16":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"percentUtilization":0.89,
"rmsEvm":1.7515575885772705
},
"qam256":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"percentUtilization":1.0,
"rmsEvm":1.7515575885772705
},
"qam64":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"percentUtilization":0,
"rmsEvm":1.7515575885772705
},

www.tehencom.com

"qpsk":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"percentUtilization":95,
"rmsEvm":1.7515575885772705
},
"pdschPeakEvm":8.5812377270588576,
"pdschRmsEvm":1.7515575885772705,
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"statusMessage":"statusDataChanMeasDone",
"statusNumber":20
}
}

:FETCh:PEAK?

Title: Fetch Peak

Description: Returns a pair (frequency in Hz, amplitude) of the peak amplitude in the current sweep. The command does not wait for the sweep to complete. If the trace data is invalid then both numbers in the pair will be NAN and error code -230 will be indicated.

www.tehencom.com

:FETCh:RRM?

Title: Fetch RRM Measurements

Description: Returns the Radio Resource Management(RRM) measurements in json format.

RRM measurements are comprised of RSRP, RSRQ, and SINR which are computed using the Cell Reference Signals (CRS).

If a measurement is in progress, it blocks until complete.

www.tehencom.com

:FETCh:SCANner?

Title: Fetch Cell Scanner

Description: Returns the cell scanner measurements in a json format. If a measurement is in progress, it blocks until completed. Returned data format varies based on whether the current mode is 5GNR or LTE.

5GNR Mode format:

{
"carrierId":1,
"gps":{
"coordinates":"37.14681, -121.65609, 128m",
"time":"Fri Jun 28 19:56:45 2019 GMT"
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"statusMessage":"statusCellScannerDone",
"statusNumber":13
},
"values":[
{
"cellId":1007,
"cellIdGroup":335,
"frameStart":1920521,
"sectorId":0,
"timeOffset":-3490194.091145895,
"values":[
{
"beamIndex":0,

www.tehencom.com

"beamPresent":1,
"beamTimeOffset":-3490196.091145895,
"ssRmsEvm":6.488177299499512,
"ssRsrp":-67.18608535715634,
"ssRsrq":-9.913812153567978,
"ssSinr":23.757546218871823
},
...
{
"beamIndex":7,
"beamPresent":1,
"beamTimeOffset":-3490204.091145895,
"ssRmsEvm":6.488177299499512,
"ssRsrp":-84.22420720274197,
"ssRsrq":null,
"ssSinr":null
}
]
}
]
}

LTE Mode format:

{
"carrierId":1,
"gps":{
"coordinates":"nan, nan,nanm","time":""
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,

www.tehencom.com

```
"TgLockLo1":0
},
"statusMessage":"statusCellScannerDone",
"statusNumber":13
},
"values":[
{
"cellId":2,
"cellIdGroup":0,
"crsRsrp":-68.46522521972656,
"crsRsrq":0.2733601927757263,
"crsSinr":34.74685287475586,
"antPortUsedForMeas":0,
"dominance":null,
"dominantCell":true,
"frameStart":-1,
"frequencyError":227.3341827392578,
"pbch":{
"peakEvm":{
"percent":4.949735641479492,
"subcarrierNumber":-1,
"symbolNumber":-1
},
"rmsEvm":2.2826967239379883
},
"ppmFrequencyError":0.06495262363978795,
"sectorId":2,
"ssRsrp":-68.43709564208984
}
]
}
```


www.tehencom.com

:FETCh:SEMask?

Title: Fetch Spectral Emission Mask

Description: This command returns the current Spectral Emission Mask mesurement result. If the instrument is sweeping, it will not return until the sweep is complete. If the instrument is not sweeping and the current data is not valid, it will return an empty JSON object and error -230. This could occur if there was a *RST immediately before the :FETCh? or if a measurement parameter was changed without an :INITiate. Data is returned as ASCII of JSON object that consists of reference power, reference channel power, and an array of segment information. The following is the format of the response: { "referencePwr": <amplitude value>, "referenceChannelPwr": <amplitude value>, "segments": [{"setup": {"rbw": <frequency value>, "points": [{"x": <frequency value>, "y": <amplitude value>}, {"x": <frequency value>, "y": <amplitude value>}]}, "result": {"peakPwr": <amplitude value>, "peakFreq": <amplitude value>, "pass": <true|false>}}, { ... }]

} If the measurement is not active, the instrument will indicate error -400 and return an empty object.

www.tehencom.com

:FETCh:SSB?

Title: Fetch SSB Measurements

Description: Returns the SSB measurements.

This command returns the beam numbers with the best EVM and power, followed by Power and EVM results

for PSS, SSS, PBCH, PBCH DM-RS and SS Signal Quality Results in a json format.

If a measurement is in progress, it blocks until complete.

eg:

{
"bestEvmBeam":5,
"bestPowerBeam":0,
"carrierId":1,
"status": {
"hardwareErrors": {
"ADCOverRange": 0,
"DeviceAccess": 0,
"EEPROM": 0,
"IrregularData": 0,
"Limit": 0,
"LockLO1": 0,
"LockLO2": 0,
"NoCal": 0,
"Overpower": 0,
"SLOLock": 0,
"Saturation": 0,
"TgLockLo1": 0
},
"statusMessage": "statusPciDone",
"statusNumber": 10
},
"gps":{
"coordinates":"37.14681, -121.65609, 128m",
"time":"Fri Jun 28 19:56:45 2019 GMT"
},
"values":[
{
"dmRsPbch":{
"peakEvm":{
"percent":11.926020622253418,
"subcarrierNumber":1529,

www.tehencom.com

"symbolNumber":3
},
"power":-31.813847928749347,
"rmsEvm":3.813983917236328
},
"pbch":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":1638,
"symbolNumber":5
},
"power":-31.8139914869584,
"rmsEvm":3.736370325088501
},
"pss":{
"peakEvm":{
"percent":12.912864685058594,
"subcarrierNumber":1638,
"symbolNumber":2
},
"power":-31.704519932556128,
"rmsEvm":1.7515575885772705
},
"ssRsrp":-31.750750515723816,
"ssRsrq":-10.728772378478801,
"ssSinr":-13.878087163543444,
"sss":{
"peakEvm":{
"percent":11.369827270507812,
"subcarrierNumber":1638,
"symbolNumber":4
},
"power":-31.750750515723816,
"rmsEvm":2.5253000259399414
}
},
{ ... },
{ ... },
{ ... },
{ ... },

www.tehencom.com

```
{ ... },
{ ... },
{ ... }
]
}
```


www.tehencom.com

:FETCh:SYNC:EVM?

Title: Fetch Sync EVM

Description: Returns the Sync EVM measurements in json format.

If a measurement is in progress, it blocks until complete.

{
"carrierId":1,
"gps":{
"coordinates":"37.146865, -121.656103,112m",
"time":"Sat Aug 31 00:44:13 2019 GMT"
},
"pbch":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"rmsEvm":1.7515575885772705
},
"pss":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"rmsEvm":1.7515575885772705
},
"sss":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":12,
"symbolNumber":5
},
"rmsEvm":1.7515575885772705
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,

www.tehencom.com

"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"statusMessage":"statusSyncSigEvmMeasDone",
"statusNumber":18
}
}

:FETCh:SYNC:POWer?

Title: Fetch Sync Power

Description: Returns the sync power measurements in json format. If a measurement is in progress, it blocks until complete.

{
"carrierId":1,
"gps": {
"coordinates":"37.146865, -121.656103,112m",
"time":"Sat Aug 31 00:44:13 2019 GMT"
},
"pbchPower":-48.73955825818837,
"pssPower":-48.870106550516724,
"sssPower":-48.8758737536726,
"status":{
"hardwareErrors":{
"ADCOverRange":0
},
"statusMessage":"statusSyncandBchPwrDone",
"statusNumber":12
}
}

www.tehencom.com

:FETCh:TAE?

Title: Fetch Time Alignment Error

Description: Returns the Time Alignment Error measurements in json format.

If a measurement is in progress, it blocks until complete.

{
"TimeAlignmentErrors":[
{
"antennaPair":{
"alignmentError":2.6679842335397552e-08,"antennaNumbers":"1,2"
}},
{
"antennaPair":{
"alignmentError":-1.845241115461249e-08,"antennaNumbers":"1,3"
}},
{
"antennaPair":{
"alignmentError":-4.5132253490010044e-08,"antennaNumbers":"2,3"
}}
],
"antennaTimeOffsets":{
"antennaOne":1.6969097771379893e-07
"antennaThree":1.8814338886841142e-07,
"antennaTwo":1.4301113537840138e-07,
"antennaZero":null,
},
"carrierId":1,
"gps":{
"coordinates":"37.146865, -121.656103,112m",
"time":"Sat Aug 31 00:44:13 2019 GMT"
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,

www.tehencom.com

"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},
"statusMessage":"statusAntPortTimeAlignMeasDone",
"statusNumber":22
}
}

:FETCh:TRACe:STAT?

Title: Fetch Trace Power Statistics

Description: Returns the following value a peak amplitude, minimum amplitude, and average amplitude in the current sweep trace data. If a sweep is in progress, it blocks until complete.

www.tehencom.com

:FETCh:WCDMa:SYNC?

Title: Fetch Sync Measurements

Description: Returns the sync measurements. This command returns frequency error stats, carrier id, corrected carrier frequency, frame start, frequency error, gps info, scrambling code, hardware status and time offset(in ns) as output in json format.

If a measurement is in progress, it blocks until complete.

An example is as follows:

{
"FrequencyErrorStats": {
"Count": 185364,
"Deviation": 1.8153972412361203,
"DeviationUnits": "Hz",
"Max": 117.21477065686643,
"Mean": 110.26521356758234,
"Min": 107.69124579804725,
"Units": "Hz"
},
"anritsuHardwareStatus": {
"hardwareErrors": {
"ADCOverRange": 0
},
"statusMessage": "statusSyncDone",
"statusNumber": 10
},
"carrierId": 1,
"correctedCarrierFrequency": 1000000111.0165963,
"frameStart": 39828,
"frequencyError": 111.01659632196692,
"gps": {
"coordinates": "37.146585, -121.656618,128m",
"time": "Tue Jan 1 00:00:00 2024 GMT"
},
"pccpchAbsPower": -48.427171521027155,
"pccpchDeltaPower": -0.3524818420410156,
"pccpchRelPower": -11.313854217529297,
"pcpichEvm": 0.7005375027656555,
"pcpichPower": -48.074689327855744,
"pcpichRelativePower": -10.961372375488281,
"pichAbsPower": -56.04133975526693,
"pichDeltaPower": -7.966650009155273,

www.tehencom.com

"pichRelPower": -18.928022384643555,
"ppmFrequencyError": 0.1110165963219669,
"sccpchAbsPower": -55.5802791084507,
"sccpchDeltaPower": -7.505590438842773,
"sccpchRelPower": -18.466962814331055,
"scramblingCode": 0,
"scramblingCodeGroup": 0,
"timeOffset": 3753108.716643614,
"units": "DBM"
}

:FORMat[:TRACe][:DATA] <ASCii|INTeger|REAL>,[<numeric_value>]
:FORMat[:TRACe][:DATA]?

Title: Trace Data Format

Description: This command specifies the format in which data is returned in TRAC:DATA queries. The optional numeric parameter is needed for REAL format only. It defines the length of the floating point number in bits. Valid values are 32 and 64. If the optional numeric parameter is omitted, the default length of REAL data is set to 64 bits.

ASCii format returns the data in comma-separated ASCII format. The units are the current measurement units.

INTeger,32 values are signed 32-bit integers in little-endian byte order. This format returns the data in 4-byte blocks. The values are scaled by 1000, so if the current measurement units are dBm the integer values would be mdBm. For example, if the measured result was -12.345 dBm, that value would be sent as -12345.

REAL,32 values are 32-bit floating point numbers conforming to the IEEE 754 standard in little-endian byte order. This format returns the data in 4-byte binary format. The units are the current measurement units.

REAL,64 values are 64-bit floating point numbers conforming to the IEEE 754 standard in little-endian byte order. This format returns the data in 8-byte binary format. The units are the current measurement units.

Parameter(s): <ASCii|INTeger|REAL>,[<numeric_value>]

Query Return: ASC|INT|REAL

Default Value: ASCii

:FRAMe:SPECtrum:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF>
:FRAMe:SPECtrum:TRACe:DISPlay[:STATe]?

Title: Trace Display State

Description: The trace visibility state. If it is OFF, the :TRAC:DATA? command will return nan.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

:FRAMe:SPECtrum:TRACe:TYPE
<NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH>
:FRAMe:SPECtrum:TRACe:TYPE?

Title: Trace Type

Description: Specifies how successive sweeps are combined to produce the resulting display value. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.

Parameter(s):

<NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage | MATH>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV | MATH

Default Value: NORMal

:FRAMe:SPECtrum:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF>
:FRAMe:SPECtrum:TRACe:UPDate[:STATe]?

Title: Trace Update State

Description: The trace update state detemine whether the trace is update in every sweep.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

:FRAMe:TDOMain:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF>
:FRAMe:TDOMain:TRACe:DISPlay[:STATe]?

Title: Trace Display State

Description: The trace visibility state. If it is OFF, the :TRAC:DATA? command will return nan.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

:FRAMe:TDOMain:TRACe:TYPE
<NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH>
:FRAMe:TDOMain:TRACe:TYPE?

Title: Trace Type

Description: Specifies how successive sweeps are combined to produce the resulting display value. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.

Parameter(s):

<NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage | MATH>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV | MATH

Default Value: NORMal

:FRAMe:TDOMain:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF>
:FRAMe:TDOMain:TRACe:UPDate[:STATe]?

Title: Trace Update State

Description: The trace update state detemine whether the trace is update in every sweep.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

:INITiate:CONTinuous <0 | 1 | ON | OFF>
:INITiate:CONTinuous?

Title: Sweep Type

Description: Specifies whether the sweep/measurement is triggered continuously. If the value is set to ON or 1, another sweep/measurement is triggered as soon as the current one completes. If continuous is set to OFF or 0, the instrument remains initiated until the current sweep/measurement completes, then enters the 'idle' state and waits for the :INITiate[:IMMediate] command or for :INITiate:CONTinuous ON.

If :INITiate:CONTinuous is changed to ON before the current sweep/measurement completes, a new sweep/measurement will be continuously triggered as soon as the current sweep/measurement completes. If :INITiate[:IMMediate] is received before the current sweep/measurement completes, it will be ignored. Clients must either wait for the current sweep/measurement to complete before triggering a 'single sweep', or :ABORt the sweep/measurement after setting :INITiate:CONTinuous to OFF (which will cause the instrument to immediately enter the idle state where it can accept new triggers).

The default value is ON. That is, sending :INIT:CONT is equivalent to sending :INIT:CONT ON. The query version of the command returns a 1 if the instrument is continuously sweeping/measuring and returns a 0 if the instrument is in single sweep/measurement mode.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

:INITiate[:IMMediate]

Title: Initiate Single Sweep

Description: Initiates a sweep/measurement. If :INITiate:CONTinuous is set to ON, or if :INITiate:CONTinuous is set to OFF but the current sweep has not completed yet,

this command is ignored. Use this command in combination with :STATus:OPERation?

or *OPC? to synchronize the capture of one complete set of data. When this command

is sent, the "sweep complete" bit of :STATus:OPERation? is set to 0, indicating that the measurement has not completed. The data collection is then triggered. The controlling program can poll :STATus:OPERation? to determine the status. When the "sweep complete" bit is set to 1, data is ready to be retrieved.

In the case of demodulation measurements, only the *OPC? query is applicable for purposes of synchronization; the query will only return a value when both the sweep and the demodulation have completed.

This command is also overlapped, so alternatively, *OPC? can be used to wait for completion of the measurement without polling. When this command is received, the pending operation bit is set. The pending operation will finish once the sweep/measurement is done. Clients can use *OPC? to 'block' until the sweep/measurement is completed.

:INITiate[:IMMediate]:ALL

Title: Initiate Average Count Sweep

Description: Initiates sweep until all active traces reach its average count

www.tehencom.com

:INITiate:SPA:SELFtest?

Title: Self Test

Description: Perform a self-test and return the results. The response is formatted as a JSON (http://json.org/) array of name,value pair result objects. Some result objects also include a 'status' property that will be either 'pass' or 'fail' based on whether the criteria for that test was met.

For tests of voltages, generally, the test passes if the measured voltage is within 5% or 10% of the expected voltage. A number of absolute minimum and maximum tolerances have been defined and will override this general behavior for results with a nonsymmetric range about the expected value.

:INPut:OPOWer:RELay[:STATe] <CLOSed>
:INPut:OPOWer:RELay[:STATe]?

Title: Set Relay State

Description: Query the state of the overpower relay, or close it.

During an overpower condition, the relay will open automatically to prevent damage to RF circuitry, and the device dependent error bit in the ESR will be set to indicate that an overpower condition occurred. Additionally the instrument will automatically try to close the relay every hour after it detects that the relay is opened

To recover, remove the offending input source and then issue this command with a parameter of CLOSed to close the relay or wait for an hour from the time when the relay was opened for the instrument to close the relay automatically.

Note that while this command returns the relay state as "CLOSed|OPEN", this command only accepts "CLOSed as a parameter" (that is, the relay cannot be manually opened, only closed).

Recovering from an overpower condition requires user interaction, either manually or via an automated program that can send this SCPI command to the instrument or the instrument can itself try closing the relay every hour after it detects an open state. Additionally, if the relay is CLOSed without removing the source of the overpower, it will immediately revert to OPEN.

Parameter(s): <CLOSed>

Query Return: CLOS|OPEN

Default Value: CLOSed

:INSTrument:ACTive:STATe <0 | 1 | ON | OFF>
:INSTrument:ACTive:STATe?

Title: RemoteSpectrumAnalyzerInUse

Description: The "set" state indicates that the instrument is used by someone.

The "unset" state indicates it is not used by anyone

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:INSTrument:REMote:STATe <0 | 1 | ON | OFF>,<string>
:INSTrument:REMote:STATe?

Title: RemoteSpectrumAnalyzerId

Description: This command can be used to indicate the device is being used by someone. The set command takes two parameters:

- a boolean to indicate whether the device is being used

- a string to indicate the identification of someone currently using the device.

When a value of 1 is passed into the boolean parameter (indicating the device being used), the identification string parameter must be non-empty; otherwise, a scpi error will be generated.

When no longer being used, these settings should be cleared with a boolean parameter of zero. The string paramter does not matter because it will automatically be set to the empty string.

The query command returns the current values of the boolean and the string settings. The remote identification string setting is empty only if it has never been set or has been cleared via this command.

Both settings will be reset after a reboot.

Parameter(s): <0 | 1 | ON | OFF>,<string>

:MEASure:ACPower?

Title: Measure Adjacent Channel Power Ratio

Description: Only available in Spectrum Analyzer mode. ([:SENSe]:MODE SPEC)

Sets the active measurement to adjacent channel power ratio, sets the default measurement parameters, triggers a new measurement and returns the main channel power, lower adjacent, upper adjacent, lower alternate and upper alternate channel power results. It is a combination of the commands :CONFigure:ACPower; :READ:ACPower? For a description of the default adjacent channel power ratio measurement parameters see :CONFigure:ACPower. To make an adjacent channel power ratio measurement with settings other than the default values send: :CONFigure:ACPower

Commands to set desired settings: :READ:ACPower?

Data is returned as 9 comma-separated values: main channel power, absolute lower adjacent channel power, absolute upper adjacent channel power, absolute lower alternate channel power, absolute upper alternate channel power, relative lower adjacent channel power, relative upper adjacent channel power, relative lower alternate channel power, relative upper alternate channel power.

www.tehencom.com

:MEASure:CHPower?

Title: Measure Channel Power And Density

Description: Only available in Spectrum Analyzer mode. ([:SENSe]:MODE SPEC)

Sets the active measurement to channel power, sets the default measurement parameters, triggers a new measurement and returns the channel power and channel power density results. It is a combination of the commands :CONFigure:CHPower; :READ:CHPower?

For a description of the default channel power measurement parameters see :CONFigure:CHPower. To make a channel power measurement with settings other than the default values send: :CONFigure:CHPower Commands to set desired settings :READ:CHPower? Data is returned as 2 comma-separated values: channel power, channel power density.

:MEASure:CHPower:CHPower?

Title: Measure Channel Power

Description: Sets the active measurement to channel power, sets the default measurement parameters, triggers a new measurement and returns channel power as the result. It is a combination of the commands :CONFigure:CHPower; :READ:CHPower:CHPower?

To measure both channel power and channel power density use MEASure:CHPower? For a description of the default channel power measurement parameters see :CONFigure:CHPower. To make a channel power measurement with settings other than the default values send: :CONFigure:CHPower, Commands to set desired settings: :READ:CHPower:CHPower?

:MEASure:CHPower:DENSity?

Title: Measure Channel Power Density

Description: Sets the active measurement to channel power, sets the default measurement parameters, triggers a new measurement and returns channel power density as the result. It is a combination of the commands :CONFigure:CHPower; :READ:CHPower:DENSity?

To measure both channel power and channel power density use MEASure:CHPower? For a description of the default channel power measurement parameters see :CONFigure:CHPower. To make a channel power measurement with settings other than the default values send: :CONFigure:CHPower, Commands to set desired settings: :READ:CHPower:DENSity?

:MEASure:CINTerference:CANCel

Title: Cancel CI Measurement

Description: Reset the state of the current Carrier-to-Interference Ratio measurement.

:MEASure:CINTerference:CONTinue

Title: Continue CI Measurement

Description: Advance the state Inactive/CarrierOn/CarrierOff of the current Carrier-to-Interference Ratio measurement.

www.tehencom.com

:MEASure:INTerference:POWer?

Title: Measure Interference Tone Integrated Power

Description: Sets the active measurement to Interference Tone, sets the default measurement parameters, triggers a new measurement and returns integrated power as the result. It is a combination of the commands :CONFigure:INTerference; :READ:INTerference:POWer?

For a description of the default Interference Tone measurement parameters see :CONFigure:INTerference. Use :CONFigure:INTerference command to replace the default values.

www.tehencom.com

:MEASure:IQ:CAPTure [<PPS>]

Title: StartIQCapture

Description: This set command is used to start the IQ capture measurement.

If IQ:MODE is SINGle, this command will triger a single I/Q block capture. While the capture is in progress the I/Q Capture bit of STATus:OPERation? will be set to 1. Clients can read the captured data with the TRAC:IQ:DATA? query.

If IQ:MODE is STREAM, this command will start streaming capture of I/Q data. The most recently captured block of I/Q data can be read with the TRAC:IQ:DATA? query. In STREAM capture mode, the capture will not complete until aborted. While streaming is going, clients will need to continuously read captured blocks with TRAC:IQ:DATA?.

Regardless of the capture mode, the capture can be aborted. The capture can be aborted with the ABORt command preferably, though most commands which change hardware settings will also abort the capture (clients should assume that any non-query command sent while a capture is in progress will abort the capture). To determine if the capture was aborted, check the output of STATus:OPERation?.

The capture will also be 'paused' if the instrument detects an overpower or overheat condition: in this situation, any pending TRAC:IQ:DATA? query will immediately return #0 and a device-specific error will be added to the SCPI error queue. When the condition is rectified (either by removing the source of the overpower and closing the overpower relay, or waiting for the instrument to cool down), the capture will automatically restart.

Additionally if the instrument detects a change in reference source (either due to a loss/acquisition of GPS or a connection/disconnection of external reference) a device-specific error will be added to the SCPI error queue.

In either capture mode, this command will do nothing if a capture is already in progress.

The device-specific errors this command adds to the SCPI error queue include a description that looks like the following:

Device-specific error;Reference source changed during capture @ Thu Jun 18 17:02:03 2015

Device-specific error;Capture paused due to overheating @ Thu Jun 18 17:02:03 2015

Device-specific error;Capture paused due to RF overpower @ Thu Jun 18 17:02:03 2015

Each description contains the reason for the error and a timestamp when the error occurred.

In products that support SENSe:SWEep:MODE, if the sweep mode (see SENSe:SWEep:MODE) is not currently FFT, this command will set it to FFT prior to starting the capture.

A optional parameter, PPS, can be set if the capture or stream is to start within a ms of the GPS PPS. This can be used to synchronize captures between multiple MS2090As. If there's no GPS, it will be based on an internal PPS counter that might not have an absolute reference.

Parameter(s): [<PPS>]

www.tehencom.com

:MEASure:IQ:CAPTure:FAIL <OFF|FIRSt|REPeat>
:MEASure:IQ:CAPTure:FAIL?

Title: Capture on Failure

Description: Sets or queries whether the instrument will automatically save an IQ capture when losing sync.

When the instrument goes from having good sync to no sync, the IQ data for the failed measurement is saved to the user partition.

"FIRSt" causes a single capture to be performed and then transition to the OFF" state. REPeat" causes saves the IQ data on every loss of sync.

"FIRSt" is recommended to avoid accidentally filling up the user partition.

This command is only available when in 5GNR Analyzer mode ([:SENSe]:MODE NRADio).

Parameter(s): <OFF | FIRSt | REPeat>

Query Return: OFF | FIRS | REP

Default Value: OFF

:MEASure:OTA:MAPPing?

Title: Measure OTA Coverage Mapping

Description: Only available in Spectrum Analyzer mode (see [:SENSe]:MODE).

Supports RSSI, CHP, and PSD map measurements (see [:SENSe][:OTA]:MAPPing:MEASurement).

Sets the active measurement to OTA Coverage Mapping, sets the default measurement parameters, triggers a new measurement, and returns the measured values.

Measurement parameters for the default RSSI include:

Sets the instrument to single sweep mode.

Measurement parameters for CHP and PSD include:

Sets the integration bandwidth equal to span.

Sets the detection method to RMS.

Sets the instrument to single sweep mode.

See :READ:OTA:MAPPing? for details on returned data.

:MEASure:OTA:MAPPing:RUN <0 | 1 | ON | OFF>
:MEASure:OTA:MAPPing:RUN?

Title: OTA Coverage Mapping Data Collection

Description: Turn on/off OTA Coverage Mapping Data Collection. The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Note that before starting/restarting indoor mapping with the time interval, the start position will have to be selected first (see [:SENSe][:OTA]:MAPPing:POSition)

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:MMEMory:COEvent:CLEarall

Title: Clear All IQ Capture On Event

Description: Turns off all IQ Capture on event types that are active.

:MMEMory:COEvent:TIMer:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:MMEMory:COEvent:TIMer:INTerval?

Title: IQ Capture Timer Interval

Description: This command sets or queries the time interval between IQ captures in miliseconds.

Used for Continuous Capture mode only - does not affect Single Capture or Streaming modes.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: 0 ms to 216000000 ms

:MMEMory:EMF:STORe:LOG <string>
:MMEMory:EMF:STORe:LOG?

Title: EMF Log Storage Device

Description: This command sets or queries the storage device where EMF log files will be saved. Use the :MMEMory:CATalog:MSUSs? query to retrieve a list of valid parameters for this setting.

Parameter(s): <string>

Default Value: Internal

:MMEMory:LOAD:LIMit <string>,<string>,<string>

Title: Load Limit From File

Description: This command loads limit data from the specified limit file.

The file location is resolved using the MSUS and file path parameters. Parameters:

1. Label: Used to specify which limit to load. Currently, the label only supports loading all limits. Send an empty string or "ALL" to load all limits.

2. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional.

3. MSUS: Device to load the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:LOAD:LIMit "ALL","/example_limit_file", "USB1-1"

The model of the device that the limit was saved in must match the model of the the device to load in; otherwise, the load will be rejected.

Parameter(s): <string>,<string>,<string>

www.tehencom.com

:MMEMory:LOAD:MAP <string>

:MMEMory:LOAD:MAP?

Title: OTA Indoor Map File Path

Description: Sets/queries the file name with path of the current indoor map. The instrument must be in Coverage Mapping measurement for the set command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Parameter(s): <string>

Default Value: None

:MMEMory:LOAD[:OTA]:MAPPing:KML <string>,<string>,<string>

Title: Load OTA Coverage Mapping Data in KML Format

Description: This command recalls the specified KML Coverage Mapping data. After recall, all Coverage Mapping data from the file will be loaded.

The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Label: This is currently unused when recalling Coverage Mapping data and an empty string should be used.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension is optional.

3. MSUS: Device to recall the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:LOAD:OTA:MAPPing:KML "", "/example_measurement_file", "Internal"

Parameter(s): <string>,<string>,<string>

:MMEMory:LOAD:RAM <numeric_value>,<numeric_value>,<string>

Title: Load RAM

Description: Store data to RAM from a file. This command takes three parameters

1. data block size: that needs to be stored in bytes (must be a word aligned)

2. offset: in bytes from start of RAM address to store data at

3. filename: name of the file without the full path. Contents of this file will be copied over to RAM

Parameter(s): <numeric_value>,<numeric_value>,<string>

:MMEMory:LOAD:RECord <string>,<string>

Title: Load Playback File

Description: This command loads a file made with Trace Recording for playback.

1. File path: The file path (including file name) relative to the MSUS root directory. File extension is optional.

2. MSUS: Device to recall the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

Parameter(s): <string>,<string>

www.tehencom.com

:MMEMory:LOAD:SEMask:CUSTom <string>,<string>

Title: Load Custom SEM From File

Description: This command loads sem mask data from the specified csv file.

The file location is resolved using the MSUS and file path parameters. Parameters:

2. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional.

3. MSUS: Device to load the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:LOAD:SEMask:CUSTom "/example_mask.csv", "USB1-1"

Parameter(s): <string>,<string>

:MMEMory:STOEvent:CLEarall

Title: Clear All Save On Event

Description: Turns off all save on event types that are active.

:MMEMory:STOEvent:EOSWeep:MODE <CONTinuous|SINGle>
:MMEMory:STOEvent:EOSWeep:MODE?

Title: End of Sweep Save On Event Mode

Description: Specifies the stop mode of the end of sweep save on event system. Setting the value to CONTinuous will cause the instrument to keep saving traces at the completion of every valid sweep. Setting the value to SINGle will trigger a save trace on the next complete valid sweep and then automatically turn the end of sweep save on event feature OFF.

Parameter(s): <CONTinuous|SINGle>

Query Return: CONT|SING

Default Value: CONTinuous

:MMEMory:STOEvent:EOSWeep[:STATe] <0 | 1 | ON | OFF>
:MMEMory:STOEvent:EOSWeep[:STATe]?

Title: End of Sweep Save on Event State

Description: Turn the end of sweep save on event ON or OFF. Turning the feature on will cause the instrument to automatically save a trace whenever a sweep completes.

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:MMEMory:STOEvent:LIMit:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:MMEMory:STOEvent:LIMit:INTerval?

Title: Limit Save On Event Interval

Description: Sets the time interval to keep saving after a limit line failure has occured when :MMEMory:STOEvent:LIMit:MODE is set to INTerval.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 60000 ms

Default Unit: ms

Range: 0 ms to 216000000 ms

:MMEMory:STOEvent:LIMit:MODE <CONTinuous|SINGle|INTerval>
:MMEMory:STOEvent:LIMit:MODE?

Title: End of Sweep Save On Event Mode

Description: Specifies the stop mode of the limit save on event system. Setting the value to CONTinuous will cause the instrument to keep saving traces at every limit line failure. Setting the value to SINGle will trigger a save trace on the next limit line failure and then automatically turn the end of sweep save on event feature OFF automatically. Setting the value to INTerval will trigger a save on the next limit line failure and contiue to save at every end of sweep until the set time interval has expired.

Parameter(s): <CONTinuous | SINGle | INTerval>

Query Return: CONT | SING | INT

Default Value: CONTinuous

:MMEMory:STOEvent:LIMit:PTRigger[:STATe] <0 | 1 | ON | OFF>
:MMEMory:STOEvent:LIMit:PTRigger[:STATe]?

Title: Limit Pretrigger Save on Event State

Description: Turn the limit pre-trigger save on event ON or OFF. Turning the feature ON will cause the instrument to automatically save a trace captured prior to the limit line failure trace. The :MMEMory:STOEvent:LIMit[:STATe] and :INITiate:CONTinuous needs to be turned ON for the pre-trigger feature to apply.

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:MMEMory:STOEvent:LIMit[:STATe] <0 | 1 | ON | OFF>
:MMEMory:STOEvent:LIMit[:STATe]?

Title: Limit Save on Event State

Description: Turn the limit save on event ON or OFF. Turning the feature on will cause the instrument to automatically save a trace whenever a limit line failure occurs.

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:MMEMory:STOEvent:TIMer:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:MMEMory:STOEvent:TIMer:INTerval?

Title: Timer Save On Event Interval

Description: Sets the time interval to save when :MMEMory:STOEvent:TIMer[:STATe] is enabled. The queried value is always in milliseconds.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 240000 ms

Default Unit: ms

Range: 0 ms to 3600000 ms

:MMEMory:STOEvent:TIMer[:STATe] <0 | 1 | ON | OFF>
:MMEMory:STOEvent:TIMer[:STATe]?

Title: Limit Save on Event State

Description: Turn the timer save on event ON or OFF. Turning the feature on will cause the instrument to automatically save a trace at the interval specified by :MMEMory:STOEvent:LIMit:INTerval, if space is available. Available memory may be checked using :MMEMory:CATalog:DIRectory query command.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:MMEMory:STORe:CAPTure

Title: Save IQ Capture

Description: This command performs saving the IQ Capture data to file.

www.tehencom.com

:MMEMory:STORe:CAPTure:MODE <AUTomatic|MANual>
:MMEMory:STORe:CAPTure:MODE?

Title: IQ Capture Saving Mode

Description: This command sets or queries the saving mode for IQ Capture.

AUTomatic saves every capture to file.

MANual saves the latest capture to file when user send :MMEMory:STORe:CAPTure command.

Parameter(s): <AUTomatic|MANual>

Query Return: AUT|MAN

Default Value: AUTomatic

:MMEMory:STORe:CAPTure:MSUS <string>
:MMEMory:STORe:CAPTure:MSUS?

Title: IQ Storage Device

Description: This command sets or queries the storage device on which to store IQ capture files. Use the :MMEMory:CATalog:MSUSs? query to retrieve a list of valid parameters for this setting.

Parameter(s): <string>

Default Value: Internal

:MMEMory:STORe:CAPTure:PATH <string>
:MMEMory:STORe:CAPTure:PATH?

Title: IQ File Location

Description: This command sets or queries the relative path to the directory in which IQ capture files will be saved. The path is relative to the selected IQ storage device specified by the IQ Storage Device setting (MMEM:STOR:CAPT:MSUS).

Parameter(s): <string>

Default Value: Captures

:MMEMory:STORe:CAPTure:PREFix <string>
:MMEMory:STORe:CAPTure:PREFix?

Title: IQ File Name Prefix

Description: This command sets or queries the file name prefix for IQ Capture or IQ Streaming.

Parameter(s): <string>

Default Value: Capture

:MMEMory:STORe:CSCanner:CSV:MSUS <string>
:MMEMory:STORe:CSCanner:CSV:MSUS?

Title: Channel Scanner Csv Logging Storage Device

Description: This command sets or queries the storage device where Channel Scanner log files will be saved. Use the :MMEMory:CATalog:MSUSs? query to retrieve a list of valid parameters for this setting.

Parameter(s): <string>

Default Value: Internal

www.tehencom.com

:MMEMory:STORe:CSCanner:CSV:PATH <string>
:MMEMory:STORe:CSCanner:CSV:PATH?

Title: Channel Scanner CSV Logging Location

Description: This command sets or queries the relative path to the directory wheres Channel Scanner result files will be saved. The log location is only used when Channel Scanner logging is enabled. The path is relative to the selected Channel Scanner storage device specified by the Device setting (:MMEMory:STORe:CSCanner:CSV:MSUS).

Parameter(s): <string>

Default Value: ChannelScannerCsv

:MMEMory:STORe:LIMit <string>,<string>,<string>

Title: Store Limit To File

Description: This command stores the limit data into the specified file location. The file location is resolved using the MSUS and file path parameters. Intermediate folders specified by the file path parameter are automatically created. The output file extension is .lim.

The command automatically overwrites the specified file if present. Parameters:

1. Label: Used to specify which limit to store. Currently, the label only supports storing all limits. Send an empty string or "ALL" to store all limits.

2. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional.

3. MSUS: Device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:STORe:LIMit "ALL","/example_limit_file", "USB1-1"

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <string>,<string>,<string>

www.tehencom.com

:MMEMory:STORe[:OTA]:MAPPing:CSV <string>,<string>,<string>

Title: Store OTA Coverage Mapping Data in CSV Format

Description: This command saves the current OTA Coverage Mapping data to a file in CSV format in specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Label: This is currently unused when saving OTA Coverage Mapping data and an empty string should be used.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

3. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:STORe:OTA:MAPPing:CSV "", "/example_measurement_file", "Internal"

A common cause of the command failure is not having enough space available on MSUS to save trace. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS. The CSV file will have the following formats depending on the mapping measurement:

RSSI:

INSTRUMENT_BEGIN
Model,OptionsInstalled,ExternalSerialNumber,FileFormatVersion,Application,Mode,Measurement <Model>,<Installed Options>,<External Serial Number>,<File Format Version>,<Application>,<Mode>,<Measurement> INSTRUMENT_END DATA_BEGIN
Point,GPS Status,Longitude(radians)/X,Latitude(radians)/Y,Altitude(m),UTC Date,UTC Time,Measurement,RSSI(dBm),Center Frequency(Hz),RBW(Hz),VBW(hz),Detection,Excellent(dBm),Very Good(dBm),Good(dBm),Fair(dBm),Poor(dBm) <Point Number>,<Longitude or X Coordinate>,<Latitude or Y Coordinate>,<Altitude>,<UTC Date>,<UTC Time>,<Measurement Type>,<Channel Power>,<Center Frequency>,<RBW>,<VBW>,<Detection>,<Excellent>,<Very Good>,<Good>,<Fair>,<Poor> ... ... DATA_END Channel Power:

INSTRUMENT_BEGIN
Model,OptionsInstalled,ExternalSerialNumber,FileFormatVersion,Application,Mode,Measurement <Model>,<Installed Options>,<External Serial Number>,<File Format Version>,<Application>,<Mode>,<Measurement> INSTRUMENT_END DATA_BEGIN
Point,GPS Status,Longitude(radians)/X,Latitude(radians)/Y,Altitude(m),UTC Date,UTC Time,Measurement,Channel Power(dBm),Center Frequency(Hz),RBW(Hz),VBW(hz),Detection,Excellent(dBm),Very Good(dBm),Good(dBm),Fair(dBm),Poor(dBm) <Point Number>,<Longitude or X Coordinate>,<Latitude or Y Coordinate>,<Altitude>,<UTC Date>,<UTC Time>,<Measurement Type>,<Channel Power>,<Center Frequency>,<RBW>,<VBW>,<Detection>,<Excellent>,<Very Good>,<Good>,<Fair>,<Poor> ... ... DATA_END Channel Power Density:

INSTRUMENT_BEGIN
Model,OptionsInstalled,ExternalSerialNumber,FileFormatVersion,Application,Mode,Measurement <Model>,<Installed Options>,<External Serial Number>,<File Format Version>,<Application>,<Mode>,<Measurement> INSTRUMENT_END DATA_BEGIN
Point,GPS Status,Longitude(radians)/X,Latitude(radians)/Y,Altitude(m),UTC Date,UTC Time,Measurement,Channel Power Density(dBm/Hz),Center Frequency(Hz),RBW(Hz),VBW(hz),Detection,Excellent(dBm/Hz),Very Good(dBm/Hz),Good(dBm/Hz),Fair(dBm/Hz),Poor(dBm/Hz) <Point Number>,<Longitude

www.tehencom.com

or X Coordinate>,<Latitude or Y Coordinate>,<Altitude>,<UTC Date>,<UTC Time>,<Measurement Type>,<Channel Power>,<Center Frequency>,<RBW>,<VBW>,<Detection>,<Excellent>,<Very Good>,<Good>,<Fair>,<Poor> ... ... DATA_END If there is no GPS lock and an indoor map is being used, the longitude becomes the X coordinate, the Latitude becomes the Y coordinate. Altitude, UTC Date, and UTC Time will be N/A.

Parameter(s): <string>,<string>,<string>

:MMEMory:STORe[:OTA]:MAPPing:KML <string>,<string>,<string>

Title: Store OTA Coverage Mapping Data in KML Format

Description: This command saves the current OTA Coverage Mapping data to a file in KML format in specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Label: This is currently unused when saving OTA Coverage Mapping data and an empty string should be used.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

3. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

For example:

MMEMory:STORe:OTA:MAPPing:KML "", "/example_measurement_file", "Internal"

A common cause of the command failure is not having enough space available on MSUS to save trace. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS. If there is no GPS lock and an indoor map is being used, the longitude becomes the X coordinate, the Latitude becomes the Y coordinate. Altitude, UTC Date, and UTC Time will be N/A.

Parameter(s): <string>,<string>,<string>

:MMEMory:STORe:RAM <numeric_value>,<numeric_value>,<string>

Title: Store RAM

Description: Load data from RAM to a file. This command takes three parameters

1. data block size: that needs to be loaded in bytes (must be a word aligned)

2. offset: in bytes from start of RAM address to load from

3. filename: name of the file without the full path. This is the destination file where the contents of RAM are copied over In NRAD and LTE modes, this command saves a IQ capture in 32 bit floating point format

matching the settings. The parameters are ignored (but still need to be passed) and values

are used are based on the capture bandwith. The capture is 60 ms long to cover multiple frames.

This is the command used by the capture buttons in the NRAD and LTE modes in the file menu.

Parameter(s): <numeric_value>,<numeric_value>,<string>

www.tehencom.com

:MMEMory:STORe:RECord:CSV:DISCard

Title: Discard Trace Recording CSV File

Description: This command discards the last file written for Trace Recording in CSV.

:MMEMory:STORe:RECord:CSV:MSUS <string>
:MMEMory:STORe:RECord:CSV:MSUS?

Title: Trace Recording CSV Storage Device

Description: This command sets or queries the MSUS device that Trace Recordings in CSV will be stored in.

Parameter(s): <string>

Default Value: Internal

:MMEMory:STORe:RECord:CSV:PATH <string>
:MMEMory:STORe:RECord:CSV:PATH?

Title: Trace Recording CSV Storage Location

Description: This command sets or queries the directory that Trace Recordings in CSV will be stored in.

Parameter(s): <string>

Default Value: PlaybackCsv

:MMEMory:STORe:RECord:CSV:PREFix <string>
:MMEMory:STORe:RECord:CSV:PREFix?

Title: Trace Recording CSV File Name Prefix

Description: This command sets or queries the file name prefix for Trace Recording in CSV.

Parameter(s): <string>

Default Value: Traces

:MMEMory:STORe:RECord:MSUS <string>
:MMEMory:STORe:RECord:MSUS?

Title: Trace Recording Storage Device

Description: This command sets or queries the MSUS device recorded traces will be stored in.

Parameter(s): <string>

Default Value: Internal

:MMEMory:STORe:RECord:PATH <string>
:MMEMory:STORe:RECord:PATH?

Title: Trace Recording Storage Location

Description: This command sets or queries the path to the directory recorded traces will be stored in.

Parameter(s): <string>

Default Value: Playback

www.tehencom.com

:MMEMory:STORe:RECord:PREFix <string>
:MMEMory:STORe:RECord:PREFix?

Title: Trace Recording File Name Prefix

Description: This command sets or queries the file name prefix for Trace Recording.

Parameter(s): <string>

Default Value: RecordedSession

:MMEMory:STORe:STREam:MSUS <string>
:MMEMory:STORe:STREam:MSUS?

Title: IQ Stream USB Storage

Description: This command sets or queries the USB storage device on which to store IQ stream files. Use the :MMEMory:CATalog:MSUSs? query to retrieve a list of valid USB device for this setting.

Parameter(s): <string>

Default Value: None

:MMEMory:STORe:STREam:PATH <string>
:MMEMory:STORe:STREam:PATH?

Title: IQ Stream File Location

Description: This command sets or queries the relative path to the directory in which IQ stream files will be saved. The path is relative to the USB storage device specified by the IQ Stream USB Storage setting (MMEM:STOR:STRE:MSUS).

Parameter(s): <string>

Default Value: Streams

:MMEMory:STORe:TRACe:CSV <string>,<string>,<string>

Title: Store Trace in CSV

Description: This command saves the current trace to CSV file in specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. Label: Used to specify which trace to save. Currently, the label only supports saving all traces. Send an empty string or "ALL" to store all traces.

2. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

3. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

A common cause of the command failure is not having enough space available on MSUS to save trace. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on MSUS.

Parameter(s): <string>,<string>,<string>

www.tehencom.com

:OUTPut[:STATe] <0 | 1 | ON | OFF>
:OUTPut[:STATe]?

Title: Source Output State

Description: Set or query the source output state: 0/OFF, 1/ON.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:READ:ACPower?

Title: Read Adjacent Channel Power Ratio

Description: Triggers a new adjacent channel power ratio measurement and returns the results: main channel power, lower adjacent and upper adjacent channel power. It is the equivalent of the command sequence :ABORT; :INITiate; :FETCh:ACPower?

The channel power measurement must be the active measurement (specified by the command :CONFigure:ACPower).The instrument should be in the single sweep mode.

The current measurement can be queried using the command :CONFigure? Data is returned as 9 comma-separated values: main channel power, absolute lower adjacent channel power, absolute upper adjacent channel power, absolute lower alternate channel power, absolute upper alternate channel power, relative lower adjacent channel power, relative upper adjacent channel power, relative lower alternate channel power, relative upper alternate channel power.

If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan,nan,nan,nan". If :INITiate command fails or if :INITiate:CONTinuous is set to ON(continuous sweep) it returns a string "nan,nan,nan,nan,nan,nan,nan,nan,nan"

:READ:CHPower?

Title: Read Channel Power And Density

Description: Triggers a new channel power measurement and returns the results: channel power and channel power density. It is the equivalent of the command sequence: ":ABORT; :INITiate; :FETCh:CHPower?"

The channel power measurement must be the active measurement (specified by the command :CONFigure:CHPower).The instrument should be in the single sweep mode. Data is returned as 2 comma-separated values: channel power, channel power density.

If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan". If :INITiate command fails, or if :INITiate:CONTinuous is set to ON(continuous sweep), it returns a string "nan,nan".

www.tehencom.com

:READ:CHPower:CHPower?

Title: Read Channel Power

Description: Triggers a new channel power measurement and returns the channel power result: channel power. It is the equivalent of the command sequence ":ABORT; :INITiate; :FETCh:CHPower:CHPower?"

The channel power measurement must be the active measurement (specified by the command :CONFigure:CHPower).The instrument should be in the single sweep mode. Data returned is: channel power.

If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan". If :INITiate command fails, or if :INITiate:CONTinuous is set to ON(continuous sweep), it returns a string "nan,nan".

:READ:CHPower:DENSity?

Title: Read Channel Power Density

Description: Triggers a new channel power measurement and returns the results: channel power density. It is the equivalent of the command sequence :ABORT; :INITiate; :FETCh:CHPower:DENSity? The channel power measurement must be the active measurement (specified by the command :CONFigure:CHPower).The instrument should be in the single sweep mode. Data returned is: channel power density.

If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan". If :INITiate command fails, or if :INITiate:CONTinuous is set to ON(continuous sweep), it returns a string "nan,nan"

:READ:EIRPower?

Title: Read EIRP

Description: Triggers a new EIRP measurement and returns the current EIRP, Max EIRP, Horizontal EIRP, Vertical and Sum EIRP results in dBm. It is a combination of the commands :ABORT; :INITiate; :FETCh:EIRPower?

The EIRP measurement must be the active measurement (specified by the command :CONFigure:EIRPower). The instrument should be in the single sweep mode. Data is returned as 2 comma-separated values: EIRP, max EIRP. If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan". If :INITiate command fails or if :INITiate:CONTinuous is set to ON(continuous sweep), it returns a string "nan,nan".

:READ:EIRPower:DATA?

Title: Read Current EIRP

Description: Triggers a new EIRP measurement and returns the current EIRP result in dBm. It is a combination of the commands :ABORT; :INITiate; :FETCh:EIRPower:DATA?

The EIRP measurement must be the active measurement (specified by the command :CONFigure:EIRPower).The instrument should be in the single sweep mode. If the measurement is not active, the instrument will indicate error -400 and return the string "nan". If :INITiate command fails or if :INITiate:CONTinuous is set to ON(continuous sweep),it returns a string "nan".

www.tehencom.com

:READ:EIRPower:MAXimum?

Title: Read MAXimum EIRP

Description: Triggers a new EIRP measurement and returns the maximum EIRP results in dBm. It is a combination of the commands :ABORT; :INITiate; :FETCh:EIRPower:MAX?

The EIRP measurement must be the active measurement (specified by the command :CONFigure:EIRPower). The instrument should be in the single sweep mode. If the measurement is not active, the instrument will indicate error -400 and return the string "nan". If :INITiate command fails or if :INITiate:CONTinuous is set to ON(continuous sweep),it returns a string "nan".

:READ:INTerference:POWer?

Title: Read Interference Tone Integrated Power

Description: Triggers a new Interference Tone measurement and returns the integrated power result. It is the equivalent of the command sequence ":ABORT; :INITiate; :FETCh:INTerference:POWer?"

The Interference Tone measurement must be the active measurement (specified by the command :CONFigure:INTerference).The instrument should be in the single sweep mode. Data returned is: integrated power.

If the measurement is not active, the instrument will indicate error -400 and return the string "nan,nan". If :INITiate command fails, or if :INITiate:CONTinuous is set to ON(continuous sweep), it returns a string "nan,nan".

:READ:OTA:MAPPing?

Title: Read OTA Coverage Mapping

Description: Available in Spectrum Analyzer mode only (see [:SENSe]:MODE)

Triggers a new OTA Coverage Mapping measurement and returns the results. It is the equivalent of the command sequence ":ABORT; :INITiate; :FETCh:OTA:MAPPing? The OTA Coverage Mapping measurement must be the active measurement (see [:SENSe][:OTA]:MAPPing:STATe);

otherwise, the instrument will report error -400 and return the string "{}". The instrument must be in the single sweep mode. Data is returned in JSON format. See :FETCh:OTA:MAPPing for more details.

If :INITiate command fails, "nan" will be returned in place of the measurement data in the JSON response. If :INITiate:CONTinuous is set to ON(continuous sweep), the instrument will report error -213 and return "nan" for the measurement data in the JSON response.

:READ:SEMask?

Title: Read Spectral Emission Mask

Description: Triggers a new Spectral Emission Mask measurement and returns the current Spectral Emission Mask mesurement result. It is a combination of the commands :ABORT; :INITiate; :FETCh:SEMask? The Spectracl Emission Mask measurement must be the active measurement (specified by the command :CONFigure:SEMask). Data is returned as ASCII of JSON object. Please refer to :FETCh:SEMask command for sample response.

If the measurement is not active, the instrument will indicate error -400 and return an empty object.

www.tehencom.com

[:SENSe]:ACPower:BANDwidth|BWIDth:ADJacent <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:ACPower:BANDwidth|BWIDth:ADJacent?

Title: Adjacent CHPWR Adjacent Integration Bandwidth

Description: Sets the adjacent channel bandwidth for adjacent channel power measurement. Integration bandwidth must be less than or equal to span

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:ACPower:BANDwidth|BWIDth:ALTernate <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:ACPower:BANDwidth|BWIDth:ALTernate?

Title: Adjacent CHPWR Alternate Integration Bandwidth

Description: Sets the alternate channel bandwidth for adjacent channel power measurement. Integration bandwidth must be less than or equal to span

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:ACPower:BANDwidth|BWIDth:MAIN <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:ACPower:BANDwidth|BWIDth:MAIN?

Title: Adjacent CHPWR Main Integration Bandwidth

Description: Sets the main channel bandwidth for adjacent channel power measurement. Integration bandwidth must be less than or equal to span

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

www.tehencom.com

[:SENSe]:ACPower:BANDwidth|BWIDth:SPACing <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:ACPower:BANDwidth|BWIDth:SPACing?

Title: Adjacent Channel Power Spacing

Description: Controls the channel spacing which is the distance from the modulated carrier signal to the

upper or lower Adjacent Channel.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:ACPower:STATe <0 | 1 | ON | OFF>
[:SENSe]:ACPower:STATe?

Title: Adjacent Channel Power State

Description: Sets the state of the adjacent channel power ratio measurement, ON or OFF. When using :CONFigure:ACPower, the state is automatically set to ON

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:AMFM:AUDio:RECord

Title: AMFM Start Recording

Description: This command starts the recording of the current audio output for the specified duration to a .wav file.

[:SENSe]:AMFM:AUDio:RECord:DURation <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:AMFM:AUDio:RECord:DURation?

Title: AMFM Recording time

Description: This command sets and queries the duration of the audio captures in the AMFM measurement.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 10000 ms

Default Unit: ms

Range: 1000 ms to 100000000 ms

[:SENSe]:AMFM:AUDio:RESults?

Title: AMFM Audio Measurement Results

Description: This command gets the latest AMFM audio measurement results in an unsupported binary format

www.tehencom.com

[:SENSe]:AMFM:AUDio:STATe <0 | 1 | ON | OFF>
[:SENSe]:AMFM:AUDio:STATe?

Title: AMFM Audio State

Description: This command sets and queries whether or not the audio is on in the AMFM measurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:AMFM:DEMod:BWIDth?

Title: AMFM Demod Bandwidth

Description: This command queries the currently-used bandwidth for the AMFM measurement.

Query Return: Numeric (Hz)

Default Value: 3900 Hz

Default Unit: Hz

Range: 1000 Hz to 40000000 Hz

[:SENSe]:AMFM:DEMod:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:AMFM:DEMod:FREQuency?

Title: AMFM Demodulation Frequency

Description: This command sets and queries the current demodulation frequency of the AMFM meausurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1500000000 Hz

Default Unit: Hz

Range: -99999999995 Hz to 5999999995 Hz

[:SENSe]:AMFM:DEMod:MARKer:SELect <numeric_value>
[:SENSe]:AMFM:DEMod:MARKer:SELect?

Title: AMFM Marker Tracking Selected Marker

Description: This command sets and queries which marker the demod frequency will track if [:SENSe]:AMFM:DEMod:MARKer is on.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 1

Range: 1 to 12

www.tehencom.com

[:SENSe]:AMFM:DEMod:MARKer:STATe <0 | 1 | ON | OFF>
[:SENSe]:AMFM:DEMod:MARKer:STATe?

Title: AMFM Marker Tracking State

Description: This command sets and queries whether or not the demod frequency will track a selected marker. See [:SENSe]:AMFM:DEMod:MARKer:SELect

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:AMFM:DEMod:TYPE
<AM|USBand|LSBand|FMWideband|FMNarrowband|FM125|FM625>
[:SENSe]:AMFM:DEMod:TYPE?

Title: AMFM Demodulation Type

Description: This command sets and queries the current demodulation type of the AMFM meausurement.

Parameter(s): <AM | USBand | LSBand | FMWideband | FMNarrowband | FM125 | FM625>

Query Return: AM | USB | LSB | FMW | FMN | FM125 | FM625

Default Value: AM

[:SENSe]:AMFM:SQUelch <numeric_value> {<amplitude_units>}
[:SENSe]:AMFM:SQUelch?

Title: AMFM Squelch Level

Description: This command sets and queries the squelch level, which cuts off audio from signals below its level.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: -120 dBm

Default Unit: dBm

Range: -120 dBm to 30 dBm

[:SENSe]:AMFM:STATe <0 | 1 | ON | OFF>
[:SENSe]:AMFM:STATe?

Title: AMFM Measurement State

Description: This command sets and queries the state of the AMFM meausurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:ARFChannel <numeric_value>
[:SENSe]:ARFChannel?

Title: Absolute RF Channel Number

Description: Sets or queries the Absolute RF Channel Number for the current demod measurement. Accepted values vary based on the current operating band. Inputting invalid values will set the closest valid value possible for the given circumstances.

When the operating band is not being used ([:SENSe]:OBANd is INValid), this value will not be settable. Attempts to set this when the system is in this state will return the error -221.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 3279165

[:SENSe]:AVERage:COUNt <numeric_value>
[:SENSe]:AVERage:COUNt?

Title: Sense Average Count

Description: Sets the effective number of averages and the length of the rolling min and max hold. Due to memory limitations the actual length of buffers for rolling min and max hold are limited to 2,000,000 / number of trace points.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 10

Range: 2 to 1000

[:SENSe]:AVERage:TYPE
<NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH>
[:SENSe]:AVERage:TYPE?

Title: Sense Average Type

Description: Specifies how successive traces are combined to produce the resulting display value. Only applies to trace 1. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.

Parameter(s):

<NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage | MATH>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV | MATH

Default Value: NORMal

www.tehencom.com

[:SENSe]:BANDwidth|BWIDth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:BANDwidth|BWIDth[:RESolution]?

Title: RBW Zero Span

Description: Sets the resolution bandwidth.

Note that using this command turns the automatic resolution bandwidth setting OFF. In Zero Span, the range will change to allow a mininum of 5 KHz to the maximum of 20 MHz.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 3000000 Hz

Default Unit: Hz

Range: 5000 Hz to 20000000 Hz

[:SENSe]:BANDwidth|BWIDth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:BANDwidth|BWIDth[:RESolution]?

Title: RBW

Description: Sets the resolution bandwidth.

Note that using this command turns the automatic resolution bandwidth setting OFF.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 3000000 Hz

Default Unit: Hz

Range: 1 Hz to 50000000 Hz

[:SENSe]:BANDwidth|BWIDth[:RESolution]:RATio <numeric_value>
[:SENSe]:BANDwidth|BWIDth[:RESolution]:RATio?

Title: RBW Span Ratio

Description: Sets the ratio of the resolution bandwidth to the span for use when the resolution bandwidth to span coupling is enabled. Note that the front panel interface sets the inverse ratio: the span to the resolution bandwidth.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0.01

Range: 1e-05 to 1

www.tehencom.com

[:SENSe]:BANDwidth|BWIDth:VIDeo <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:BANDwidth|BWIDth:VIDeo?

Title: VBW

Description: Sets the video bandwidth.

Note that using this command turns the automatic video bandwidth setting OFF.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1000000 Hz

Default Unit: Hz

Range: 1 Hz to 50000000 Hz

[:SENSe]:BANDwidth|BWIDth:VIDeo <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:BANDwidth|BWIDth:VIDeo?

Title: VBW Zero Span

Description: Sets the video bandwidth.

Note that using this command turns the automatic video bandwidth setting OFF. In Zero Span, the range will change to allow a mininum of 5 KHz to the maximum of 20 MHz.

The Default value will also change to 3 MHz.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 3000000 Hz

Default Unit: Hz

Range: 5000 Hz to 20000000 Hz

[:SENSe]:BANDwidth|BWIDth:VIDeo:RATio <numeric_value>
[:SENSe]:BANDwidth|BWIDth:VIDeo:RATio?

Title: VBW RBW Ratio

Description: Sets the ratio of the video bandwidth to the resolution bandwidth for use when the video to resolution bandwidth coupling is enabled. Note that the front panel interface sets the inverse ratio: the resolution bandwidth to the video bandwidth which is an integer, in other words, if you send 0.35, the display will show 2 not 2.857

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0.333333333333333

Range: 1e-05 to 1

[:SENSe]:BANDwidth|BWIDth:VIDeo:TYPE <LINear|LOGarithmic>
[:SENSe]:BANDwidth|BWIDth:VIDeo:TYPE?

Title: VBW Averaging

Description: Changes the VBW/Average type.

Parameter(s): <LINear|LOGarithmic>

Query Return: LIN|LOG

Default Value: LINear

www.tehencom.com

[:SENSe]:BANDwidth[:RESolution]:AUTO <0 | 1 | ON | OFF>
[:SENSe]:BANDwidth[:RESolution]:AUTO?

Title: RBW Auto

Description: Sets the state of the coupling of the resolution bandwidth to the frequency span. Setting the value to ON or 1 will result in the resolution bandwidth being coupled to the span. That is, when the span changes, the resolution bandwidth changes. Setting the value to OFF or 0 will result in the resolution bandwidth being decoupled from the span. That is, changing the span will not change the resolution bandwidth. When this command is issued, the resolution bandwidth setting itself will not change.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:BANDwidth:VIDeo:AUTO <0 | 1 | ON | OFF>
[:SENSe]:BANDwidth:VIDeo:AUTO?

Title: VBW Auto

Description: Sets the state of the coupling of the video bandwidth to the resolution bandwidth. Setting the value to ON or 1 will result in the video bandwidth being coupled to the resolution bandwidth. That is, when the resolution bandwidth changes, the video bandwidth changes. Setting the value to OFF or 0 will result in the video bandwidth being decoupled from the resolution bandwidth. That is, changing the resolution bandwidth will not change the video bandwidth.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:BEAM <numeric_value>
[:SENSe]:BEAM?

Title: Measured Beam

Description: Sets or queries the beam number to measure and display.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 63

[:SENSe]:BEAM:TRACking:STATe <0 | 1 | ON | OFF>
[:SENSe]:BEAM:TRACking:STATe?

Title: Detected Beam Tracking State

Description: Sets or queries the state of the beam tracking functionality.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:BPOWer:END <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:BPOWer:END?

Title: End Time Burst Average Power
Description: Set and queries the end time position marker in burst power measurement.
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
Default Value: 40000 ms
Default Unit: ms
Range: 1e-05 ms to 60000 ms

[:SENSe]:BPOWer:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:BPOWer:STARt?

Title: Start Time Burst Average Power
Description: Set and queries the start time position marker in burst average power measurement.
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
Default Value: 10000 ms
Default Unit: ms
Range: 0 ms to 59999.999 ms

[:SENSe]:BPOWer:STATe <0 | 1 | ON | OFF>
[:SENSe]:BPOWer:STATe?

Title: Burst Average Power State
Description: Sets and queries the state of the burst average power measurement
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: OFF

[:SENSe]:CAGGregation?

Title: Get Carrier Aggregation Measurements
Description: Returns the Carrier Aggregation measurements for each carrier in a JSON format. Unlike [:SENSe]:FETCh:CAGGregation this command does not wait for the current measurement to complete before returning results.

[:SENSe]:CAGGregation:CARRier:ACTive <numeric_value>
[:SENSe]:CAGGregation:CARRier:ACTive?

Title: Active Carrier
Description: Sets and queries the active carrier in the Carrier Aggregation measurement.
Parameter(s): <numeric_value>
Query Return: Numeric
Default Value: 1
Range: 1 to 8

www.tehencom.com

[:SENSe]:CAGGregation:CARRier:COUNt <numeric_value>
[:SENSe]:CAGGregation:CARRier:COUNt?

Title: Number Of Carriers

Description: Sets and queries the number of carriers in the Carrier Aggregation measurement.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 2

Range: 1 to 8

[:SENSe]:CAGGregation:STATe <0 | 1 | ON | OFF>
[:SENSe]:CAGGregation:STATe?

Title: Carrier Aggregation Measurement State

Description: Turns on Carrier Aggregation, disables other measurements. When Carrier Aggregation measurement is on, changing frequencies, band, and antenna configurations will only apply to the active carrier. For instance, if the active carrier is set to 2, changing the center frequency will only change the center frequency for the carrier 2. Use command [:SENSe]:CAGGregation:CARRier:ACTive to set the active carrier.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:CBWidth <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:CBWidth?

Title: Channel Bandwidth

Description: Sets or queries the channel bandwidth for the current demod measurement.

Full set of possible values are 1.4, 3, 5, 10, 15, 20MHz.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 100000000 Hz

Default Unit: Hz

Range: 5000000 Hz to 400000000 Hz

[:SENSe]:CBWidth <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:CBWidth?

Title: Channel Bandwidth

Description: Sets or queries the channel bandwidth for the current demod measurement.

Full set of possible values are 5, 10, 15, 20, 25, 30, 40, 50, 60, 70, 80, 90, 100 MHz, though actual accepted values vary based on the current operating band and purchased options.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 100000000 Hz

Default Unit: Hz

Range: 5000000 Hz to 400000000 Hz

www.tehencom.com

[:SENSe]:CBWidth:CATalog?

Title: Channel Bandwidth Catalog

Description: Queries a list of all valid channel bandwidth values based on current settings.

Data is returned in a comma-separated list of frequencies in Hz, e.g. "5000000,10000000"

[:SENSe]:CCHannel:STATe <0 | 1 | ON | OFF>
[:SENSe]:CCHannel:STATe?

Title: Control Channel Measurement State Command

Description: Turns on control channel measurement, disables other measurements

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:CHANnel:SCSPacing:CATalog?

Title: Channel Subcarrier Spacing Catalog

Description: Queries a list of all valid channel subcarrier spacing values based on current settings.

Data is returned in a comma-separated list of frequencies in Hz, e.g. "15000,30000,120000"

Default Value: 15000,30000,120000

[:SENSe]:CHPower:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:CHPower:BANDwidth|BWIDth:INTegration?

Title: CHPWR Integration Bandwidth

Description: Sets the integration bandwidth for channel power measurement. Integration bandwidth must be less than or equal to span

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:CHPower:STATe <0 | 1 | ON | OFF>
[:SENSe]:CHPower:STATe?

Title: Channel Power State

Description: Sets the state of the channel power measurement, ON or OFF. When using :CONFigure:CHPower,the state is automatically set to ON

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:CINTerference:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:CINTerference:BANDwidth|BWIDth:INTegration?

Title: CI Integration Bandwidth

Description: Sets and queries the integration bandwidth for Carrier to Interference Ratio measurement. Integration bandwidth must be less than or equal to span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 400000000000 Hz

[:SENSe]:CINTerference:CARRier:STATe?

Title: CI Carrier State

Description: Queries the current measuring state for Carrier to Interference Ratio measurement. Values can be INACtive|ONCarrier|OFFCarrier, and are advanced with the MEAS:CINT:CONT command.

Query Return: INAC|ONC|OFFC

Default Value: INACtive

[:SENSe]:CINTerference:STATe <0 | 1 | ON | OFF>
[:SENSe]:CINTerference:STATe?

Title: Carrier-to-Interference Ratio Measurement State

Description: Sets and queries the state of the Carrier-to-Interference Ratio measurement, ON or OFF. When using :CONFigure:CINTerference, the state is automatically set to ON.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:CLOCk:ADJust <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:CLOCk:ADJust?

Title: Time Offset Correction

Description: This command is used to change the time offset correction for the GMC to GNSS calculation.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: -5 ms to 5 ms

www.tehencom.com

[:SENSe]:CONStellation <PBCH|PDSCh>
[:SENSe]:CONStellation?

Title: Constellation Select

Description: Sets or queries the constellation data selection for the current LTE or 5G measurement. Only PBCH is available in 5G measurement.

Valid selections are: PBCH and PDSCH.

Parameter(s): <PBCH | PDSCh>

Query Return: PBCH | PDSC

Default Value: PDSCh

[:SENSe]:CONStellation:PBCH?

Title: PBCH Constellation

Description: Get the Physical Broadcast Channel (PBCH) constellation results immediately from the last complete measurement. See the description for :FETCh:CONStellation:PBCH for the results format.

[:SENSe]:CONStellation:PBCH:BEAM <numeric_value>
[:SENSe]:CONStellation:PBCH:BEAM?

Title: Constellation Measurement State

Description: Sets the beam number to filter for in the PBCH constellation measurement.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 63

[:SENSe]:CONStellation:PDSCh?

Title: Data Channel Constellation

Description: Get the Physical Downlink Shared Channel (PDSCH) constellation results immediately from the last complete measurement. See the description for :FETCh:CONStellation:PDSCh for the results format.

[:SENSe]:CONStellation:REFerence:STATe <0 | 1 | ON | OFF>
[:SENSe]:CONStellation:REFerence:STATe?

Title: Constellation Reference Point State

Description: Turns on/off constellation reference points

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:CONStellation:STATe <0 | 1 | ON | OFF>
[:SENSe]:CONStellation:STATe?

Title: Constellation Measurement State
Description: Turns on/off constellation measurement, disables other measurements
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: OFF

[:SENSe]:CYCLicprefix <NORMal|EXTended|AUTO>
[:SENSe]:CYCLicprefix?

Title: Cyclic Prefix
Description: Sets or queries the cyclic prefix type.
Available parameters are NORMal, EXTended, and AUTO for LTE mode.
Parameter(s): <NORMal | EXTended | AUTO>
Query Return: NORM | EXT | AUTO
Default Value: AUTO

[:SENSe]:CYCLicprefix <NORMal|EXTended|AUTO>
[:SENSe]:CYCLicprefix?

Title: Cyclic Prefix
Description: Sets or queries the cyclic prefix type. Only NORMal is available in 5GNR
Parameter(s): <NORMal | EXTended | AUTO>
Query Return: NORM | EXT | AUTO
Default Value: AUTO

[:SENSe]:DEMod:DISCard:CSV

Title: Discard Demod CSV
Description: This command discards the last file written for Demod CSV Recording.

[:SENSe]:DEMod:GATE:DURation <COUPled|FRAMe>
[:SENSe]:DEMod:GATE:DURation?

Title: Gated Spectrum Duration
Description: Set or query the gated duration in LTE or 5G frame power measurement. Valid selections are: COUPled - only symbols within the analysis view ([:SENSe]:FPAView) will be considered for gated spectrum. FRAMe - all symbols will be considered for gated spectrum.
Parameter(s): <COUPled | FRAMe>
Query Return: COUP | FRAM
Default Value: COUPled

www.tehencom.com

[:SENSe]:DEMod:GATE:SPECtrum:TYPe <UPLink|DWLink|FLEXible|GP|ALL|NONe>
[:SENSe]:DEMod:GATE:SPECtrum:TYPe?

Title: Gated Spectrum Type

Description: Set or query the gated spectrum type in LTE or 5G frame power measurement. Valid selections are: UPLink, DWLink, GP(Guard Period), ALL and NONe in LTE. UPLink, DWLink, FLEXible, ALL and NONe in 5G.

Parameter(s): <UPLink | DWLink | FLEXible | GP | ALL | NONe>

Query Return: UPL | DWL | FLEX | GP | ALL | NON

Default Value: UPLink

[:SENSe]:DEMod:LOG <LOG|PAUSe|STOP>
[:SENSe]:DEMod:LOG?

Title: Demod Logging State

Description: Set or query what state Demod logging is currently in. LOG to collect data, PAUSe to stop taking data but keep the recording open, STOP to end the recording and save the csv file. Note that the resulting file will have some fields left unfilled depending on which measurement is being recorded. Such fields are recorded as nan for floating point numbers and as -1 for integers.

Parameter(s): <LOG | PAUSe | STOP>

Query Return: LOG | PAUS | STOP

Default Value: STOP

[:SENSe]:DEMod:STORe:MSUS <string>
[:SENSe]:DEMod:STORe:MSUS?

Title: Demod Log Storage Device

Description: This command sets or queries the storage device where the Demod CSV log files will be saved. Use the :MMEMory:CATalog:MSUSs? query to retrieve a list of valid parameters for this setting.

Parameter(s): <string>

Default Value: Internal

[:SENSe]:DEMod:STORe:PATH <string>
[:SENSe]:DEMod:STORe:PATH?

Title: Demod Log Location

Description: This command sets or queries the relative path to the directory where the Demod CSV log files will be saved. The log location is only used when Demod logging is enabled. The path is relative to the selected Demod storage device specified by the Device setting (:MMEMory:DEMod:STORe:MSUS).

Parameter(s): <string>

Default Value: Demod

www.tehencom.com

[:SENSe]:DENSity:ACQuisition <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:DENSity:ACQuisition?

Title: Density Acquisition Time
Description: Density acquisition time for RTSA Mode
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
Default Value: 50 ms
Default Unit: ms
Range: 50 ms to 5000 ms

[:SENSe]:DENSity:CSCale:AUTO <0 | 1 | ON | OFF>
[:SENSe]:DENSity:CSCale:AUTO?

Title: RTSA Density Color Scale Auto
Description: In RTSA mode, this toggles the functionality for automatically scaling the color scale for the density spectrum measurement.
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: ON

[:SENSe]:DENSity:CSCale:HIGH <numeric_value>
[:SENSe]:DENSity:CSCale:HIGH?

Title: RTSA Density Color Scale High
Description: In RTSA mode, this indicates the percentage of hits needed at each point to be represented as the highest color of the density measurement's color scale (red).
Parameter(s): <numeric_value>
Query Return: Numeric
Default Value: 100
Range: 0 to 100

[:SENSe]:DENSity:CSCale:LOW <numeric_value>
[:SENSe]:DENSity:CSCale:LOW?

Title: RTSA Density Color Scale Low
Description: In RTSA mode, this indicates the percentage of hits needed at each point to be represented as the lowest color of the density measurement's color scale (blue).
Parameter(s): <numeric_value>
Query Return: Numeric
Default Value: 0
Range: 0 to 100

www.tehencom.com

[:SENSe]:DENSity:DETection:MINimum?

Title: Minimum Detectable Signal Duration

Description: Gets the minimum duration (in ms) of a signal detectable by the system in RTSA mode.

Query Return: Numeric (ms)

Default Value: 5e-06 ms

Default Unit: ms

Range: 1e-06 ms to 5000000 ms

[:SENSe]:DENSity:DISPlay:RESolution <NORMal|HIGH>
[:SENSe]:DENSity:DISPlay:RESolution?

Title: Density Display Resolution

Description: This command sets the display resolution setting for the density measurement in RTSA mode.

Parameter(s): <NORMal|HIGH>

Query Return: NORM|HIGH

Default Value: HIGH

[:SENSe]:DENSity:FFT:COUNt?

Title: FFT Count

Description: Gets the current FFT count.

Query Return: Numeric

Default Value: 25000

Range: 32 to 4294967295

[:SENSe]:DENSity:PERSistence <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:DENSity:PERSistence?

Title: Density Persistence Time

Description: Sets the density persistence time parameter in RTSA mode.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: 0 ms to 10000 ms

[:SENSe]:DENSity:PERSistence:CLEar

Title: Density Persistence Clear

Description: Clears the persistent data for the denisty measurement in RTSA mode.

www.tehencom.com

[:SENSe]:DENSity:PERSistence:STATe <VARiable|INFinite>
[:SENSe]:DENSity:PERSistence:STATe?

Title: Density Persistence State

Description: This command toggle the persistence setting for the density measurement in RTSA mode.

Parameter(s): <VARiable|INFinite>

Query Return: VAR|INF

Default Value: VARiable

[:SENSe]:DENSity:POI?

Title: Probability of Intercept

Description: Gets the current POI value.

Query Return: Numeric (ms)

Default Value: 0.004 ms

Default Unit: ms

Range: 1e-06 ms to 5000000 ms

[:SENSe]:DENSity:STATe <0 | 1 | ON | OFF>
[:SENSe]:DENSity:STATe?

Title: Density Spectrum State

Description: Sets the state of the density spectrum measurement display.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal>
[:SENSe]:DETector[:FUNCtion]?

Title: Detection Mode

Description: Sets the detection method for calculating each display point. This command changes the detection method for the currently selected trace (see Select Trace command). To set the detection mode for any trace use the Trace Detector Type command. Each display point represents several measurements. The detection type determines how the display point is derived from its associated measurements. POSitive Peak detection displays the maximum value of the associated measurements. RMS detection displays the average power of the associated measurement. NEGative Peak detection displays the minimum value of the associated measurements. SAMPle detection selects one of the associated measurement points to display. In zero span and RTSA mode the SAMPle detection replaces RMS detection. NORMal detection displays the maximum value, POSitive Peak, when the point is odd and minimum value, NEGative Peak, when the point is even.

Parameter(s): <POSitive|RMS|NEGative|SAMPle|NORMal>

www.tehencom.com

[:SENSe]:DF:INFormation?

Title: Directional Antenna Information

Description: Requests combined data from the GPS module, the compass, and the status of the trigger switch, RF amp and the overload detector.

Response:
llll.lll,ns,nnnn.nnn,ew,q,s,aa.a,st,ss.ss,ttt.tt,ddd.d,dew,bbb.b,pp.p,rr.r,ol,trg,rfa

llll.lll: Latitude in degrees and decimal minutes, e.g. 3708.806 is 37 degrees and 8.806 minutes or 8 minutes and 48.36 seconds.

ns: Latitude N (North) or S (South).

nnnn.nnn: Longitude in degrees and decimal minutes.

ew: East or West

q: GPS quality: 0 = no GPS, 1 = GPS, 2 = DGPS/SBAS.

s: satellites

aa.a: Altitude in meters.

st = RMC Status: A = valid, V = navigation receiver warning.

ss.ss: Speed over ground in knots.

tt.tt: Track made good in degrees true (true bearing).

ddd.d : Magnetic declination in degrees.

dew: Magnetic declination E (east) or W (West).

bbb.b: Compass bearing in degrees 0.0 to 359.9.

pp.p: Pitch in degrees 0.0 to +/- 90.0.

rr.r: Roll in degrees 0.0 to +/- 90.0.

ol: Overload detector status, 0 = no overload, 1 = overload.

trg: Trigger switch status, 0 = switch open, 1 = switch closed.

rfa: RF preamp status, 0 = RF preamp off, 1 = RF preamp on.

[:SENSe]:DUPLex <FDD|TDD>
[:SENSe]:DUPLex?

Title: Duplex Type

Description: Sets or queries the duplex type. TDD is available for 5GNR and LTE. FDD is availiable for LTE.

Parameter(s): <FDD|TDD>

Query Return: FDD|TDD

Default Value: TDD

www.tehencom.com

[:SENSe]:EARFchannel <numeric_value>
[:SENSe]:EARFchannel?

Title: E-UTRA Absolute RF Channel Number

Description: Sets or queries the E-UTRA Absolute RF Channel Number for the current demod measurement. Accepted values vary based on the current operating band. Inputting invalid values will set the closest valid value possible for the given circumstances.

When the operating band is not being used ([:SENSe]:OBANd is INValid), this value will not be settable. Attempts to set this when the system is in this state will return the error -221.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 3279165

[:SENSe]:EIRPower:CLOSs <numeric_value> {DB}
[:SENSe]:EIRPower:CLOSs?

Title: EIRP Test Port Cable Loss

Description: This command sets or queries the test port cable loss for EIRP measurement.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 999 dB

[:SENSe]:EIRPower:DISTance <numeric_value>
[:SENSe]:EIRPower:DISTance?

Title: EIRP Measurement's Distance

Description: This command sets or queries the EIRP measurement's distance. Allowed unit types include m (meters) or ft (feet).

Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the [:SENSe]:EIRPower:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

Default Value: 0.01 m

Default Unit: m

Range: 0.01 m to 50000 m

www.tehencom.com

[:SENSe]:EIRPower:DISTance:UNIT <METers|FEET>
[:SENSe]:EIRPower:DISTance:UNIT?

Title: EIRP Distance Units

Description: This command sets or queries the EIRP distance units. The query returns:

MET - Meters

FEET - Feet

Parameter(s): <METers | FEET>

Query Return: MET | FEET

Default Value: METers

[:SENSe]:EIRPower:MAXimum:COUNt?

Title: Maximum EIRP Count

Description: This command returns the current maximum EIRP count.

[:SENSe]:EIRPower:MAXimum:RESet

Title: Reset Maximum EIRP Count

Description: This command resets the maximum EIRP count.

[:SENSe]:EIRPower:PLOSs?

Title: EIRP Path Loss

Description: This command queries the EIRP total path loss between the base station gNB and test antenna.

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 999 dB

[:SENSe]:EIRPower:RAGain <numeric_value> {DB}
[:SENSe]:EIRPower:RAGain?

Title: EIRP Rx Antenna Gain

Description: This command sets or queries the EIRP Rx Antenna Gain in dBi.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 999 dB

www.tehencom.com

[:SENSe]:EIRPower:STATe <0 | 1 | ON | OFF>
[:SENSe]:EIRPower:STATe?

Title: EIRP State

Description: Sets the state of the EIRP measurement, ON or OFF. When using :CONFigure:EIRPower,the state is automatically set to ON

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:EIRPower:SUM:RESet

Title: EIRP Sum Reset

Description: Resets the Horizontal and Vertical EIRP values.

[:SENSe]:EIRPower:TAGain <numeric_value> {DB}
[:SENSe]:EIRPower:TAGain?

Title: EIRP Tx Antenna Gain

Description: This command sets or queries the EIRP Tx Antenna Gain in dBi.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 999 dB

[:SENSe]:EMF:AXIS <X|Y|Z>
[:SENSe]:EMF:AXIS?

Title: EMF Axis

Description: Set or query the current axis: X, Y, or Z.

Parameter(s): <X|Y|Z>

Query Return: X|Y|Z

Default Value: X

www.tehencom.com

[:SENSe]:EMF:AXIS:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:EMF:AXIS:TIME?

Title: EMF Axis Dwell Time

Description: Set or query the duration for which each axis will be measured before switching axes during a measurement. Note that this is the minimum time to spend on each axis, more may be spent in order to ensure each axis gets an equal number of complete sweeps. This, in addition to variable sweep times, means that the number of ISO_RESULTS in the log may vary somewhat (though they will contain roughly the same amount of data in total).

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1000 ms

Default Unit: ms

Range: 10 ms to 120000 ms

[:SENSe]:EMF:ICNirp?

Title: EMF ICNIRP Limit

Description: Get the ICNIRP limit points that correspond to each display point for the current span.

[:SENSe]:EMF:ICNirp:STATe <0 | 1 | ON | OFF>
[:SENSe]:EMF:ICNirp:STATe?

Title: EMF ICNIRP Limit State

Description: Set or query whether or not the limit is set to the ICNIRP standard. The ICNIRP limit will take precedence over any normal limit for EMF measurements. To set a custom limit for EMF measurements, use the regular limit commands and set this to OFF. When ICNIRP limit is OFF, the limit #1 upper data is used to evaluate pass/fail results for EMF measurements. Both ICNIRP and custom limits are evaluated by checking trace #2 which is the isotropic result.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:EMF:LOG <0 | 1 | ON | OFF>
[:SENSe]:EMF:LOG?

Title: EMF Logging Enable

Description: Set or query whether or not EMF data logging is enabled.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:EMF:MEASurement:COUNt <numeric_value>
[:SENSe]:EMF:MEASurement:COUNt?

Title: EMF Measurement Count

Description: Set or query the number of measurements to take.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 5

Range: 1 to 10000

[:SENSe]:EMF:MEASurement:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:EMF:MEASurement:TIME?

Title: EMF Measurement Time

Description: Set or query the duration of each complete measurement. Queries return the value in milliseconds. Note that like dwell time, this is a minimum. More time may be added if any axes have not been measured.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 360000 ms

Default Unit: ms

Range: 60000 ms to 1800000 ms

[:SENSe]:EMF:RUN <0 | 1 | ON | OFF>
[:SENSe]:EMF:RUN?

Title: EMF Run State

Description: Start/stop the EMF measurement or query its state. While running, other commands are disabled.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:EMF:STATe <0 | 1 | ON | OFF>
[:SENSe]:EMF:STATe?

Title: EMF Measurement State

Description: Enter/exit the EMF measurement or query its state.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:FETch:THD?

Title: Get THD Measurement

Description: Returns the THD measurements result. This command returns the fundamental frequency, harmonics and total harmonics distortion info in json format. If a measurement is in progress, it blocks until complete. An example is as follows:

{

"Fundamental":{"Frequency":751137724.5508982, "Index":6,"Level":-71.11, "Level dBc":null},

"Harmonics":[{"Frequency":752275449.1017964,"Index":12, "Level":-60.63000000000001, "Level dBc":-0.0500},

{"Frequency":753413173.6526946,"Index":18,"Level":-64.86, "Level dBc":-0.0670},

{"Frequency":754550898.2035928,"Index":24,"Level":-74.82, "Level dBc":-0.0710},

{"Frequency":755688622.754491,"Index":30,"Level":-63.31 ,"Level dBc":-0.0520},

{"Frequency":756826347.3053892,"Index":36,"Level":-64.23, "Level dBc":-0.0550},

{"Frequency":757964071.8562875,"Index":42,"Level":-65.29, "Level dBc":-0.0600}],

"THD":[{"Name":"THD","Units":"dB","Value":-0.1842652869500627},

{"Name":"THD","Units":"%","Value":97.90091158122401}]

}

[:SENSe]:FPAView <FRAMe|SUBFrame|SLOT>
[:SENSe]:FPAView?

Title: Frame Power Analysis View

Description: Sets or queries the Frame Power Analysis view mode for the current LTE measurement.

Valid selections are: FRAME, SUBFRAME or SLOT.

Parameter(s): <FRAMe | SUBFrame | SLOT>

Query Return: FRAM | SUBF | SLOT

Default Value: FRAMe

[:SENSe]:FRAMe:POWer:STATe <0 | 1 | ON | OFF>
[:SENSe]:FRAMe:POWer:STATe?

Title: Frame Power Analysis State Command

Description: Turns on frame power analysis measurement, disables other measurements

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:CENTer?

Title: Center Frequency

Description: Sets the center frequency. Note that changing the value of the center frequency will change the value of the coupled parameters Start Frequency and Stop Frequency. It may also change the value of the span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1500000000 Hz

Default Unit: Hz

Range: -99999999995 Hz to 5999999995 Hz

[:SENSe]:FREQuency:CENTer:SHARe <0 | 1 | ON | OFF>
[:SENSe]:FREQuency:CENTer:SHARe?

Title: Share Center Frequency

Description: Enables "sharing" of the instrument center frequency.

When ON, changing any center frequency setting attempts

to change every other instance.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:FREQuency:LIMit?

Title: Device Frequency Limit

Description: Query the devices maximum stop frequency.

Query Return: Numeric (Hz)

Default Value: 300000000000 Hz

Default Unit: Hz

Range: 0 Hz to 300000000000 Hz

[:SENSe]:FREQuency:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:OFFSet?

Title: Frequency Offset

Description: Set a frequency offset, which will be added to the start, stop, and center frequencies. This offset is for display purposes only and does not affect the frequency range being measured.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 0 Hz

Default Unit: Hz

Range: -10000000000 Hz to 10000000000 Hz

www.tehencom.com

[:SENSe]:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:SPAN?

Title: Span

Description: Sets the frequency span. Setting the value of <freq> to 0 Hz is the equivalent of setting the span mode to zero span. Note that changing the value of the frequency span will change the value of the coupled parameters Start Frequency and Stop Frequency and may change the Center Frequency.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 106000000000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:FREQuency:SPAN:FULL

Title: Set to Full Span

Description: Sets the frequency span to full span. Note that changing the value of the frequency span will change the value of the coupled parameters, Start Frequency and Stop Frequency and may change the Center Frequency.

[:SENSe]:FREQuency:SPAN:LAST

Title: Set to Last Span

Description: Sets the frequency span to the previous span value. Note that changing the value of the frequency span will change the value of the coupled parameters, Start Frequency and Stop Frequency and may change the Center Frequency.

[:SENSe]:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:STARt?

Title: Start Frequency

Description: Sets the start frequency. Note that in the spectrum analyzer, changing the value of the start frequency will change the value of the coupled parameters, Center Frequency and Span.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 0 Hz

Default Unit: Hz

Range: -100000000000 Hz to 5999999990 Hz

www.tehencom.com

[:SENSe]:FREQuency:STEP[:INCRement] <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:STEP[:INCRement]?

Title: Frequency Step

Description: Set or query the step size to gradually increase or decrease frequency value. This command doesn't change any behavior in the backend but will be included in save/recall operations.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1000000 Hz

Default Unit: Hz

Range: 0.1 Hz to 1000000000 Hz

[:SENSe]:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:FREQuency:STOP?

Title: Stop Frequency

Description: Sets the stop frequency. Note that in the spectrum analyzer, changing the value of the stop frequency will change the value of the coupled parameters, Center Frequency and Span.

Note that this command is not available for Spectral Emission Mask measurement.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 3000000000 Hz

Default Unit: Hz

Range: -99999999990 Hz to 6000000000 Hz

[:SENSe]:FREQuency:SWEep:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:FREQuency:SWEep:TIME?

Title: Frequency Sweep Time

Description: Sets the value of the minimum frequency sweep time parameter. The sweep will complete in the shortest time possible greater than the specified time. This value is ignored when Frequency Sweep Time Auto is set to TRUE. See command :FREQuency: SWEep:TIMe:AUTO. Any changes to this setting would automatically set Frequency Sweep Time Auto to false.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 5000 ms

Default Unit: ms

Range: 0.001 ms to 3600000 ms

www.tehencom.com

[:SENSe]:FREQuency:SWEep:TIMe:AUTO <0 | 1 | ON | OFF>
[:SENSe]:FREQuency:SWEep:TIMe:AUTO?

Title: Frequency Sweep Time Auto

Description: Specifies Sweep Time State as it applies to the Frequency Sweep Time. The default state is set to be TRUE and does not use the Frequency Sweep Time to determine the sweep speed.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:FSTRength:ANTenna <string>
[:SENSe]:FSTRength:ANTenna?

Title: Field Strength Antenna

Description: Select or query the current antenna set for Field Strength.

Parameter(s): <string>

Default Value: None

[:SENSe]:FSTRength:ANTenna:FACTor?

Title: Field Strength Antenna Factor

Description: Returns an interpolated list of antenna factors as a json array where the size of the array corresponds to the number of display points currently selected.

For example: [2.0, 3.4, 5.3]

[:SENSe]:FSTRength:ANTenna:FILE <block data>
[:SENSe]:FSTRength:ANTenna:FILE?

Title: User Antenna List File Import and Export

Description: This command imports/exports a file to/from the instrument. Data is transferred to/from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

Block Data: The data to be written to the instrument in block data format

Please note that the maximum file transfer size to the instrument is 25 MB.

The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

The file is returned in block data format with an ASCII header The query command will return a #10 if the file cannot be found.

Parameter(s): <block data>

www.tehencom.com

[:SENSe]:FSTRength:ANTenna:LIST?

Title: Field Strength Antenna List

Description: Returns the list of available antennas. Return value is json array containing the Antenna name, its Start Frequency and its Stop Frequency.

For example:

[{

"name": "Anritsu_Antenna_1",

"startFreq":1710000000,

"stopFreq":1880000000

},

{

"name": "Anritsu_Antenna_2",

"startFreq":1850000000,

"stopFreq":1990000000

}]

[:SENSe]:FSTRength:ANTenna:LIST:USER?

Title: Field Strength User Antenna List

Description: Returns the list of available user antennas. Return value is json array containing the Antenna name, its Start Frequency and its Stop Frequency.

For example:

[{

"name": "User_Antenna_1",

"startFreq":1950000000,

"stopFreq":2500000000

},

{

"name": "User_Antenna_2",

"startFreq":1650000000,

"stopFreq":1850000000

}]

www.tehencom.com

[:SENSe]:FSTRength:STATe <0 | 1 | ON | OFF>
[:SENSe]:FSTRength:STATe?

Title: Field Strength State

Description: Sets the state of the field strength measurement ON or OFF.

If this command is set to ON, the amplitude measurement units on the instrument will be converted to its Field Strength value.

To query the amplitude measurement units, use the :UNIT:POWer? query command.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:FSTRength:STATe <0 | 1 | ON | OFF>
[:SENSe]:FSTRength:STATe?

Title: Field Strength State

Description: Sets the state of the field strength measurement ON or OFF.

If this command is set to ON, the amplitude measurement units on the instrument will be converted to its Field Strength value.

To query the amplitude measurement units, use the :UNIT:POWer? query command.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:GATE:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:GATE:DELay?

Title: Gate Delay

Description: Sets or queries the gate delay time. Available values are limited based on current mode.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: 0 ms to 199.999 ms

www.tehencom.com

[:SENSe]:GATE:DLSLots[:ONE] <numeric_value>
[:SENSe]:GATE:DLSLots[:ONE]?

Title: P1 Downlink Slots

Description: Sets or queries the number of Downlink slots for P1 (the first section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofDownlinkSlots" designates the number of downlink slots - slots composed of only downlink symbols - at the start of a given period, in the range (0..MaxNrofSlots).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 3

Range: 0 to 160

[:SENSe]:GATE:DLSLots:TWO <numeric_value>
[:SENSe]:GATE:DLSLots:TWO?

Title: P2 Downlink Slots

Description: Sets or queries the number of Downlink slots for P2 (the optional second section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofDownlinkSlots" designates the number of downlink slots - slots composed of only downlink symbols - at the start of a given period, in the range (0..MaxNrofSlots).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 4

Range: 0 to 160

[:SENSe]:GATE:DLSYmbols[:ONE] <numeric_value>
[:SENSe]:GATE:DLSYmbols[:ONE]?

Title: P1 Downlink Symbols

Description: Sets or queries the number of Downlink symbols for P1 (the first section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofDownlinkSymbols" defines the number of downlink symbols within the slot following the downlink slots of a given period, in the range (0..MaxNrofSymbols-1).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 6

Range: 0 to 13

www.tehencom.com

[:SENSe]:GATE:DLSYmbols:TWO <numeric_value>
[:SENSe]:GATE:DLSYmbols:TWO?

Title: P2 Downlink Symbols

Description: Sets or queries the number of Downlink symbols for P2 (the optional second section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofDownlinkSymbols" defines the number of downlink symbols within the slot following the downlink slots of a given period, in the range (0..MaxNrofSymbols-1).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 13

[:SENSe]:GATE:FRAMe:OFFSet <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:GATE:FRAMe:OFFSet?

Title: Frame Time Offset

Description: Specify a Custom Frame Time Offset to be used when the Frame Start Time is set to Custom

ex: sense:gate:frame:starttime custom

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: -4.999999 ms to 5 ms

www.tehencom.com

[:SENSe]:GATE:FRAMe:STARttime <AUTO|SYNO|UTC|UTC3pos|UTC2neg|CUSTom>
[:SENSe]:GATE:FRAMe:STARttime?

Title: Frame Start Time

Description: UTC = Coordinated Universal Time in accordance with Recommendation ITU-R TF.460. The typical measuring signal is 1 pps (pulse-per-second) signal from the clock device with the rising-edge materializing the exact second epoch. The start of frame defined as the beginning of the first slot in the UL/DL pattern has to be phase-synchronised with the frame start time. The start of the radio frame on the output shall be synchronous with the input time reference, i.e., when an UTC traceable reference is required, the start of the radio frame shall be aligned with the start time of the UTC second epoch. A configurable time-offset of start frame shall be supported by all base stations in synchronized TDD-unicast areas in order to achieve interoperability in coexistence scenarios.

AUTO, indicates use of automatic synchronization for all TDD frame start times.

SYNO, or Synchronize Once, indicates use of automatic synchronization once to obtain a TDD frame start time, to be used for successive frames. Setup parameter changes will automatically force a re-synchronization. You can also send [:SENSe]:GATE:FRAMe:STARttime:FORCe to force a re-synchronization.

UTC, represents a TDD frame start time which corresponds with the Coordinated Universal Time.

UTC3pos, represents a frame start time of UTC +3 ms. (5G only)

UTC2neg, represents a frame start time of UTC -2 ms. (5G only)

CUSTom, represents a custom frame start time in the range (-5, 5] ms. To specify this value, see the "Frame Time Offset" command. (sense:gate:frame:offset)

Parameter(s): <AUTO | SYNO | UTC | UTC3pos | UTC2neg | CUSTom>

Query Return: AUTO | SYNO | UTC | UTC3 | UTC2 | CUST

Default Value: SYNO

[:SENSe]:GATE:FRAMe:STARttime:FORCe

Title: Frame Force synchronization

Description: When SYNO is set with this command [:SENSe]:GATE:FRAMe:STARttime, synchronization will be attempted until it is successful. The frame timing obtained from the successful synchronization is used for subsequent UL/DL Interference measurements. Sending this command will force a re-synchronization so an updated frame timing can be used for the same. This could be used if the signal condition changes or we need to re-establish sync with another base station.

[:SENSe]:GATE:FRAMestructure <A|B1|B2|CUSTom>
[:SENSe]:GATE:FRAMestructure?

Title: TDD MFCN Frame Structure

Description: Sets or queries use of either a Custom Frame Structure or one of two recommended by the Electronic Communications Committee (ECC), for time division duplexing (TDD) of mobile/fixed communications network (MFCN) operation to facilitate cross-border coordination of TDD MFCN in the 3400-3800 MHz frequency band.

Parameter(s): <A | B1 | B2 | CUSTom>

Query Return: A | B1 | B2 | CUST

Default Value: B1

www.tehencom.com

[:SENSe]:GATE:FRAMestructure:SSTYpe <TYP1|TYP2>
[:SENSe]:GATE:FRAMestructure:SSTYpe?

Title: TDD MFCN Frame B Special Slot Type

Description: Sets or queries special slot configuration type for Frame B1 and B2 structures of [:SENSe]:GATE:FRAMestructure selections. Valid selections are: TYP1 for D:G:U 6:4:4, or TYP2 for D:G:U 4:6:4. \

Parameter(s): <TYP1|TYP2>

Query Return: TYP1|TYP2

Default Value: TYP1

[:SENSe]:GATE:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:GATE:LENGth?

Title: Gate Delay Length

Description: Sets or queries the length of the gate delay. Avalailable values are limited based on current mode.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1 ms

Default Unit: ms

Range: 0.001 ms to 200 ms

[:SENSe]:GATE:PERiod <P1s|P20ms|P10ms>
[:SENSe]:GATE:PERiod?

Title: Gated Sweep Period Length

Description: Sets or queries the time period used for the Gated Sweep functionality. Available settings are: "P10ms" (10ms) and "P20ms" (20ms).

Parameter(s): <P1s|P20ms|P10ms>

Query Return: P1|P20|P10

Default Value: P20ms

[:SENSe]:GATE:PERIodicity[:ONE]
<M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE>
[:SENSe]:GATE:PERIodicity[:ONE]?

Title: P1 Transmission Periodicity

Description: Sets or queries the Transmission Periodicity for P1 (the first section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "dl-UL-TransmissionPeriodicity" defines the slot configuration period of a given length in msec.

The designations are split into a whole msec component preceeded by M and a fractional msec component preceeded by P. Alternatively, set NONE to set the length of P1 to zero.

Resulting Time Durations(ms): 0.5 0.625, 1, 1.25, 2, 2.5, 5, 10

Parameter(s): <M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE>

Query Return: M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE

Default Value: M3P0

www.tehencom.com

[:SENSe]:GATE:PERIodicity:TWO
<M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE>
[:SENSe]:GATE:PERIodicity:TWO?

Title: P2 Transmission Periodicity

Description: Sets or queries the Transmission Periodicity for P2 (the optional second section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "dl-UL-TransmissionPeriodicity" defines the slot configuration period of a given length in msec.

The designations are split into a whole msec component preceeded by M and a fractional msec component preceeded by P. Alternatively, set NONE to set the length of P2 to zero.

Resulting Time Durations(ms): 0.5 0.625, 1, 1.25, 2, 2.5, 5, 10

Parameter(s): <M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE>

Query Return: M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE

Default Value: M2P0

[:SENSe]:GATE:STATe <0 | 1 | ON | OFF>
[:SENSe]:GATE:STATe?

Title: Gated Sweep State

Description: Sets or queries the status of the Gated Sweep functionality. Usage requires Option 0090.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:GATE:TRIGger <GPS|EXT>
[:SENSe]:GATE:TRIGger?

Title: Gated Sweep Trigger Source

Description: Sets or queries the trigger source used for the Gated Sweep functionality.

Parameter(s): <GPS|EXT>

Query Return: GPS|EXT

Default Value: GPS

[:SENSe]:GATE:ULSLots[:ONE] <numeric_value>
[:SENSe]:GATE:ULSLots[:ONE]?

Title: P1 Uplink Slots

Description: Sets or queries the number of Uplink slots for P1 (the first section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofUplinkSlots" defines the number of uplink slots - slots composed of only uplink symbols - at the end of a given period, in the range (0..MaxNrofSlots).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 2

Range: 0 to 160

www.tehencom.com

[:SENSe]:GATE:ULSLots:TWO <numeric_value>
[:SENSe]:GATE:ULSLots:TWO?

Title: P2 Uplink Slots

Description: Sets or queries the number of Uplink slots for P2 (the optional second section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofUplinkSlots" defines the number of uplink slots - slots composed of only uplink symbols - at the end of a given period, in the range (0..MaxNrofSlots).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 160

[:SENSe]:GATE:ULSYmbols[:ONE] <numeric_value>
[:SENSe]:GATE:ULSYmbols[:ONE]?

Title: P1 Uplink Symbols

Description: Sets or queries the number of Uplink symbols for P1 (the first section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofUplinkSymbols" defines the number of uplink symbols within the slot preceding the uplink slots in a given period, in the range (0..MaxNrofSymbols-1).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 4

Range: 0 to 13

[:SENSe]:GATE:ULSYmbols:TWO <numeric_value>
[:SENSe]:GATE:ULSYmbols:TWO?

Title: P2 Uplink Symbols

Description: Sets or queries the number of Uplink symbols for P2 (the optional second section of the pattern). Per 3GPP TS 38.213 (11.1 Slot configuration), within the standard defined structure IE tdd-UL-DL-ConfigurationCommon, "nrofUplinkSymbols" defines the number of uplink symbols within the slot preceding the uplink slots in a given period, in the range (0..MaxNrofSymbols-1).

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 13

www.tehencom.com

[:SENSe]:GSCNumber <numeric_value>
[:SENSe]:GSCNumber?

Title: Global Sync Channel Number

Description: Sets or queries the Global Sync Channel Number for the current demod measurement. Accepted values vary based on the current operating band and absolute RF channel number. Inputting invalid values will set the closest valid value possible for the given circumstances.

When the operating band is not being used ([:SENSe]:OBANd is INValid), this value will not be settable. Attempts to set this when the system is in this state will return the error -221.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 2

Range: 2 to 26639

[:SENSe]:INTerference:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:INTerference:BANDwidth|BWIDth:INTegration?

Title: Interference Tone Integration Bandwidth

Description: Sets the integration bandwidth for the Interference Tone or Triangulation measurement. Integration bandwidth must be less than or equal to span

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 10350000 Hz

Default Unit: Hz

Range: 10 Hz to 106000000000 Hz

[:SENSe]:INTerference:MAX <numeric_value> {<amplitude_units>}
[:SENSe]:INTerference:MAX?

Title: Interference Tone Max Level

Description: Sets the level beyond which the tone will not rise in the Interference Tone or Triangulation measurement. The max level must be greater than the min level.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 10 dBm

Default Unit: dBm

Range: -149.9 dBm to 30 dBm

www.tehencom.com

[:SENSe]:INTerference:MIN <numeric_value> {<amplitude_units>}
[:SENSe]:INTerference:MIN?

Title: Interference Tone Min Level

Description: Sets the level below which the tone will not play in the Interference Tone or Triangulation measurement. The min level must be less than the max level.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: -50 dBm

Default Unit: dBm

Range: -150 dBm to 29.9 dBm

[:SENSe]:INTerference:STATe <0 | 1 | ON | OFF>
[:SENSe]:INTerference:STATe?

Title: Interference Tone Measurement State

Description: Sets the state of the Interference Tone measurement, ON or OFF. When using :CONFigure:INTerference,the state is automatically set to ON

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:IQ:BITS <F32|I32|I16|A16|I10|I8>
[:SENSe]:IQ:BITS?

Title: IQ Sample Format

Description: The number of IQ bits per sample. Lower values enable higher throughput (continuous IQ capture) or longer maximum capture length (block IQ capture). The number of samples per frame increases as the bits per sample decreases:

Value Bits per sample Samples per frame Type

F32 32 1 (IQ) floating point

I32 32 1 (IQ) integer

I16 16 2 (IIQQ) integer

A16 16 2 (IQIQ) integer

I10 10 3 (III_QQQ_) integer

I8 8 4 (IIIIQQQQ) integer

Parameter(s): <F32|I32|I16|A16|I10|I8>

Query Return: F32|I32|I16|A16|I10|I8

Default Value: F32

www.tehencom.com

[:SENSe]:IQ:CONCatenate[:STATe] <0 | 1 | ON | OFF>
[:SENSe]:IQ:CONCatenate[:STATe]?

Title: IQ Stream Concatenate State

Description: Determines whether IQ data files produced during streaming are combined into one file when streaming ends. If set to ON, IQ streams will result in one data file. If set to OFF, IQ streams will result in many individual files with indices in the file names to indicate order. The many individual files will be grouped into a folder named with the datetime of the start of the stream. Setting this to OFF can significantly improve file saving times.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:IQ:DISCard

Title: IQ Discard

Description: Stops any IQ capture or stream in progress and discards all data.

[:SENSe]:IQ:FPGA:SWITch <PCIe|IQC>

Title: Swtich FPGA Image to Configure Data Out Port

Description: This command switchs the FPGA image to configure Data Out port for IQ data streaming.

Options:

PCIe: Streaming IQ data though Data Out port without data conversion.

IQC: Streaming IQ data to data converter device though Data Out port.

Parameter(s): <PCIe|IQC>

[:SENSe]:IQ:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:IQ:LENGth?

Title: Capture Length

Description: The set form of this command sets the iq length in milliseconds and query form returns the iq length in milliseconds

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 10000 ms

Default Unit: ms

Range: 0.001 ms to 100000000 ms

www.tehencom.com

[:SENSe]:IQ:LENGth:MAX?

Title: IQ Capture Max Length

Description: This command returns max IQ Capture length due to available memory space in the selected storage device.

Query Return: Numeric (ms)

Default Value: 0.001 ms

Default Unit: ms

Range: 0 ms to 90000000 ms

[:SENSe]:IQ:MEMory?

Title: IQ Available Memory

Description: This command returns available memory size for IQ Capture in the selected storage device. The value may be less than the free space on the selected storage device because it's limited to the size of the IQ data buffer.

Query Return: Numeric

Default Value: 0

Range: 0 to INFINITY

[:SENSe]:IQ:MEMory:STREam?

Title: IQ Stream Available Memory

Description: This command returns available memory size for IQ Stream in the selected storage device.

Query Return: Numeric

Default Value: 0

Range: 0 to INFINITY

www.tehencom.com

[:SENSe]:IQ:METadata?

Title: Query IQ Data

Description: Queries the current Metadata of ongoing or previosuly completed capture/stream.

If no capture/stream has been initiated since instrument has been powered on, a data out of range error will be added to the SCPI error queue. If the command is sent before some data has been populated, some fields will show as "nan" or "Unknown".

An example of returned IQ capture/stream data is as follows: <?xml version="1.0" encoding="UTF-8"?>

<metadata>

<DataFile Value="Capture_20200731T114504.278_225381550ns_37850040000_1e+8.dgz"/>

<Vendor Value="Anritsu"/>

<Model Value="MS2090A"/>

<CenterFrequency Value="37850040000" Units="Hz"/>

<CaptureBandwidth Value="1.1e+8" Units="Hz"/>

<SampleRate Value="2e+8" Units="Hz"/>

<Span Value="1e+8" Units="Hz"/>

<ReferenceLevel Value="-40" Units="dBm"/>

<Attenuation Value="0" Units="dB"/>

<PreampState Value="1"/>

<IFFilterBandwidth Value="750e+3" Units="Hz"/>

<TriggerType Value="SING"/>

<TriggerSource Value="IMM"/>

<TriggerTime Value="0"/>

<TriggerOffset Value="0"/>

<TriggerDelay Value="0" Units="μs"/>

<Latitude Value="32.7712"/>

<Longitude Value="-117.146"/>

<GpsFix Value="1"/>

<CaptureStart Value="2020-07-31T11:45:04"/>

<ClockOffset Value="2.25382e+8"/>

<ScaleFactor Value="0.316228"/>

<BytesPerFrame Value="8"/>

<BitsPerSample Value="32"/>

<EmbeddedTimestamp Value="1"/>

<LittleEndian Value="1"/>

<IQInterleave Value="1"/>

<SignedValues Value="1"/>

<DataEncoding Value="F32"/>

<IQReversed Value="0"/>

<SampleCount Value="8000000"/>

www.tehencom.com

<HardwareErrors ADCOverRange="0" DeviceAccess="0" EEPROM="0"
IrregularData="0" Limit="0" LockLO1="0" LockLO2="0"

NoCal="0" Overpower="0" SLOLock="0" Saturation="0" TgLockLo1="0"/>

</metadata>

[:SENSe]:IQ:MODE <SINGle|STREam|CONTinuous>
[:SENSe]:IQ:MODE?

Title: Capture Mode

Description: Specifies the type of capture mode

1.Single mode does a single block capture

2.Streaming mode does real time streaming capture

3.Continuous mode takes consecutive single block captures

Parameter(s): <SINGle | STREam | CONTinuous>

Query Return: SING | STRE | CONT

Default Value: SINGle

[:SENSe]:IQ:PORT <DATaout|USB|ETHernet>
[:SENSe]:IQ:PORT?

Title: IQ Streaming Output Port Type

Description: This command sets or queries the IQ Streaming output port type.

DATaout will stream IQ data to the Data Out port.

USB will stream IQ data to the USB device.

ETHernet will stream IQ data throgh TCP/IP.

Parameter(s): <DATaout | USB | ETHernet>

Query Return: DAT | USB | ETH

Default Value: ETHernet

[:SENSe]:IQ:PORT:DATAout?

Title: IQ DataOut Type

Description: This command queries the Data Out port type.

IQC will stream IQ data to a data converter device using the Data Out port.

PCIe will stream IQ data though the Data Out port without conversion.

The data out port can be enabled using IQ:PORT command.

Query Return: IQC | PCI

Default Value: IQC

www.tehencom.com

[:SENSe]:IQ:SAMPle
<SB6|SB7|SB8|SB9|SB10|SB11|SB12|SB13|SB14|SB15|SB16|SB17|SB18|SB19|SB20>
[:SENSe]:IQ:SAMPle?

Title: IQ Sample Rate and Bandwidth

Description: This command sets or queries the sample rate and bandwidth value pair for IQ Capture or IQ Streaming. For model MS2090A the IF filter has a nominal pass band of 120 MHz. SB0 is only available with option 0105.

For model MS2080A the IF filter has a nominal pass band of 40 MHz so the usable bandwidth for SB5 is nominally 40Mhz and SB1-4 are not present. For lower rates the usable bandwith listed is the nominal bandwith of the DDC anti aliasing filters.

Value Sample Rate(MHz) Bandwidth(MHz)

SB0 200 150

SB1 200 120

SB2 122.88 100

SB3 100 80

SB4 92.16 74

SB5 61.44 50

SB6 50 40

SB7 46.08 36

SB8 30.72 25

SB9 25 20

SB10 23.04 18

SB11 15.36 12

SB12 12.5 10

SB13 7.68 6

SB14 6.25 5

SB15 3.84 3

SB16 3.125 2.5

SB17 1.92 1.5

SB18 1.5625 1.25

SB19 0.36 0.28

SB20 0.045 0.036

Parameter(s):

<SB6|SB7|SB8|SB9|SB10|SB11|SB12|SB13|SB14|SB15|SB16|SB17|SB18|SB19|SB20>

Query Return:

SB6|SB7|SB8|SB9|SB10|SB11|SB12|SB13|SB14|SB15|SB16|SB17|SB18|SB19|SB20

Default Value: SB6

www.tehencom.com

[:SENSe]:IQ:SAMPle:CALibration:CONFiguration?

Title: IQ Sample Calibration Configuration

Description: In order to get the valid IQ correction factor, user should issue MEAS:IQ:CAPT command first. (Command only available in Spectrum and RTSA)

Returns a comma delimited list of I/Q measurement configuration and calibration coefficients information with 7 fields:

Center frequency,

Preamp state,

Input attenuation,

IQ base sample rate,

Decimation factor,

IQ capture bandwidth,

IQ correction factor in dB,

An invalid value of -20000 is returned if any of Center frequency, Preamp state, Input attenuation, IQ capture bandwidth settings is modified after issuing MEAS:IQ:CAPT command

To apply the IQ correction factor, please refer to the Remote Spectrum Monitoring System Help Introduction. Information is available in I/Q Capture Block Mode section of the manual (full path: Remote Spectrum Monitor/Programming with SCPI/I/Q Capture Block Mode)

[:SENSe]:IQ:SAMPle:CONFiguration?

Title: IQ Configuration

Description: Returns a comma delimited list of I/Q measurement configuration information with 5 fields: Base sample rate, Number of bytes per frame, Effective bits per sample (see SENSE:IQ:BITS), Decimation factor, Timestamp (see SENSE:IQ:TIMESTAMP).

The base sample rate is generally fixed in a specific hardware revision; its value is provided here to enable calculation of the data rate, or time between samples, which is equal to the base sample rate divided by the decimation factor. The data rate is used when extrapolating embedded timestamps to other samples. For example, assuming a data rate of 1 MHz, if the nth sample contains an embedded timestamp of 1444753342s + 37531655ns, the n+1th sample would have an effective timestamp of 1444753342s + 37531655ns + (1/1MHz) = 1444753342s + 37531655ns + 1ms = 1444753342s + 37532655ns.

The number of samples per frame is calculated by: floor(bitsPerFrame / bitsPerSample), where bitsPerFrame = 8 * bytesPerFrame

Decimation factor is read only, and its value is derived from the current capture bandwith setting. There is a 1-to-1 correspondence between an IQ:BAND value and a decimation factor.

Number of bytes per sample is 8 for I/Q and 2 for raw ADC capture. The raw ADC capture must be parsed differently. See TRAC:IQ:DATA? for the data format.

This command provides the information necessary for clients to reconstruct I/Q data samples and timestamps from the raw data returned by TRAC:IQ:DATA?.

www.tehencom.com

[:SENSe]:IQ:SAVE:PROGress?

Title: IQ Saving Progress

Description: This command returns a number between 0-100 that represents the percent completion of the task of saving the IQ data to a file.

Query Return: Percent

Default Value: 100

Range: 0% to 100%

[:SENSe]:IQ:SIGNing <0 | 1 | ON | OFF>
[:SENSe]:IQ:SIGNing?

Title: IQ Signing Status

Description: Toggle IQ signing On or Off. This command only is valid when option 0128 is installed and either IQ option 0124 or 0126.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:IQ:STATus?

Title: IQ Capture Status

Description: This command returns current IQ Capture or IQ Streaming status.

Status description:

CONTinuous indicates continuous IQ capture is in progress.

SINGle indicates single IQ capture is in progress.

STREaming indicates IQ streaming is in progress.

READy indicates the instrument is ready for new IQ capture.

SAVing indicates that we are saving capture data into a file.

Query Return: CONT | SING | STRE | READ | SAV | WFIN | WFTR

Default Value: READy

www.tehencom.com

[:SENSe]:IQ:TIMEstamps <0 | 1 | ON | OFF>
[:SENSe]:IQ:TIMEstamps?

Title: IQ Timestamps

Description: Enables or disables IQ timestamps.

When I/Q timestamps are enabled, timestamps will be embedded in the binary response data returned by TRACe:IQ:DATA?.

==========

MS2710xa:

The first 256 frames of each 1024 frame chunk use the least-significant bit of each I and Q sample in each frame for timestamping.

If SENS:IQ:BITS is 24 or 10, the timestamp does not reduce resolution.

If SENS:IQ:BITS is 16 or 8, the timestamp reduces the resolution by one bit for 256/1024 frames.

In the 16 bit case, 256/2048 samples are 15 bits. In the 8 bit case, 256/4096 samples are 7 bits.

If SENS:IQ:TIMESTAMPS is OFF, then the IQ data cannot be absolutely positioned in time, but all samples have full resolution.

This setting is ignored if SENSE:IQ:BITS is 24 or 10 bits because there are extra, otherwise unused bits.

The timestamps are shift-encoded in groups of 64 in bit 0, and there is a shift-encoded mark in bit 32.

==========

MS209xx:

Default is set to ON.

Frame chunks are composed of 64 frames of 64-bits in length. Each frame uses the least-significant bit of each I and Q sample for timestamping.

If SENS:IQ:BITS is I10, the timestamp does not reduce resolution.

If SENS:IQ:BITS is F32, I32, I16, A16, or I8, the timestamp reduces the resolution by one bit.

In the F32, I32 cases, each sample is 31 bits. In the I16 and A16 cases, 1/2 samples are 15 bits. In the I8 case, 1/4 samples are 7 bits. If SENS:IQ:TIMESTAMPS is OFF, then the IQ data cannot be absolutely positioned in time, but all samples have full resolution.

This setting is ignored if SENSE:IQ:BITS is 10 bits because there are extra, otherwise unused bits.

The timestamps are shift-encoded in groups of 64 in bit 64, and there is a shift-encoded mark in bit 32.

If GPS is not enabled, timestamps will use Internal PPS time. Enabling timestamps does not automatically enable GPS.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:ISOTropic:AXIS <X|Y|Z|NONE>

Title: Isotropic Antenna Axis

Description: Sets the axis of the isotropic antenna. If the antenna is not present an error is put in the error queue.

Parameter(s): <X|Y|Z|NONE>

[:SENSe]:ISOTropic:FACTors?

Title: Isotropic Antenna Factors

Description: Gets the antenna factors and other antenna metadata. If the antenna is not present an error is put in the error queue.

Example format:

#44624<ANRITSU>

<HEADER>

Rev-1

Isotropic H-Field Antenna

9 kHz - 300 MHz

2000-1800-R

1430101

07/22/2014

07/22/2014

</HEADER>

<ANTENNA_FACTORS>

0.009 70.18 70.18 70.18

0.010 68.36 68.36 68.36

0.011 66.61 66.61 66.61

0.012 65.34 65.34 65.34

...

280.000 51.81 51.81 51.81

290.000 52.87 52.87 52.87

300.000 53.13 53.13 53.13

</ANTENNA_FACTORS>

</ANRITSU>

www.tehencom.com

[:SENSe]:ISOTropic:INFOrmation?

Title: Isotropic Antenna Information

Description: Gets the antenna metadata. The antenna information is same as the header section of :ISOTropic:FACTors.

Returns the information in json format.

{

"hardwareRevision":"Rev-1",

"antennaName":"Isotropic E-Field Antenna",

"frequencyRange":"700 MHz - 6 GHz",

"partNumber":"2000-1791-R",

"serialNumber":"14-17/116",

"manufacturingDate":"06/19/2014",

"lastCalibrationDate":"06/23/2014"

}

[:SENSe]:LTE:CFI <AUTO|CFI1|CFI2|CFI3>
[:SENSe]:LTE:CFI?

Title: CFI Selection

Description: Sets or queries the Control Format Indicator for the current LTE measurement.

Valid selections are: AUTO, 1, 2, or 3.

Parameter(s): <AUTO | CFI1 | CFI2 | CFI3>

Query Return: AUTO | CFI1 | CFI2 | CFI3

Default Value: AUTO

[:SENSe]:LTE:OBANd
<INValid|UL1|DL1|UL2|DL2|UL3|DL3|UL4|DL4|UL5|DL5|UL6|DL6|UL7|DL7|UL8|D
L8|UL9|DL9|UL10|DL10|UL11|DL11|UL12|DL12|UL13|DL13|UL14|DL14|UL17|DL17
|UL18|DL18|UL19|DL19|UL20|DL20|UL21|DL21|UL22|DL22|UL23|DL23|UL24|DL24
|UL25|DL25|UL26|DL26|UL27|DL27|UL28|DL28|DL29|UL30|DL30|UL31|DL31|DL32
|UL33|DL33|UL34|DL34|UL35|DL35|UL36|DL36|UL37|DL37|UL38|DL38|UL39|DL39
|UL40|DL40|UL41|DL41|UL42|DL42|UL43|DL43|UL44|DL44|UL45|DL45|UL46|DL46
|UL47|DL47|UL48|DL48|UL49|DL49|UL50|DL50|UL51|DL51|UL52|DL52|UL53|DL53
|UL54|DL54|UL65|DL65|UL66|DL66|DL67|UL68|DL68|DL69|UL70|DL70|UL71|DL71

www.tehencom.com

|UL72|DL72|UL73|DL73|UL74|DL74|DL75|DL76|UL85|DL85|UL87|DL87|UL88|DL88|U103|D103|U106|D106>

[:SENSe]:LTE:OBANd?

Title: Operating Band Number

Description: Sets or queries the operating band number for the current demod measurement. Note that bands above 99 are written without the L to avoid truncation. For example, U103 instead of UL103.

Parameter(s):

<INValid|UL1|DL1|UL2|DL2|UL3|DL3|UL4|DL4|UL5|DL5|UL6|DL6|UL7|DL7|UL8|DL8|UL9|DL9|UL10|DL10|UL11|DL11|UL12|DL12|UL13|DL13|UL14|DL14|UL17|DL17|UL18|DL18|UL19|DL19|UL20|DL20|UL21|DL21|UL22|DL22|UL23|DL23|UL24|DL24|UL25|DL25|UL26|DL26|UL27|DL27|UL28|DL28|DL29|UL30|DL30|UL31|DL31|DL32|UL33|DL33|UL34|DL34|UL35|DL35|UL36|DL36|UL37|DL37|UL38|DL38|UL39|DL39|UL40|DL40|UL41|DL41|UL42|DL42|UL43|DL43|UL44|DL44|UL45|DL45|UL46|DL46|UL47|DL47|UL48|DL48|UL49|DL49|UL50|DL50|UL51|DL51|UL52|DL52|UL53|DL53|UL54|DL54|UL65|DL65|UL66|DL66|DL67|UL68|DL68|DL69|UL70|DL70|UL71|DL71|UL72|DL72|UL73|DL73|UL74|DL74|DL75|DL76|UL85|DL85|UL87|DL87|UL88|DL88|U103|D103|U106|D106>

Query Return:

INV|UL1|DL1|UL2|DL2|UL3|DL3|UL4|DL4|UL5|DL5|UL6|DL6|UL7|DL7|UL8|DL8|UL9|DL9|UL10|DL10|UL11|DL11|UL12|DL12|UL13|DL13|UL14|DL14|UL17|DL17|UL18|DL18|UL19|DL19|UL20|DL20|UL21|DL21|UL22|DL22|UL23|DL23|UL24|DL24|UL25|DL25|UL26|DL26|UL27|DL27|UL28|DL28|DL29|UL30|DL30|UL31|DL31|DL32|UL33|DL33|UL34|DL34|UL35|DL35|UL36|DL36|UL37|DL37|UL38|DL38|UL39|DL39|UL40|DL40|UL41|DL41|UL42|DL42|UL43|DL43|UL44|DL44|UL45|DL45|UL46|DL46|UL47|DL47|UL48|DL48|UL49|DL49|UL50|DL50|UL51|DL51|UL52|DL52|UL53|DL53|UL54|DL54|UL65|DL65|UL66|DL66|DL67|UL68|DL68|DL69|UL70|DL70|UL71|DL71|UL72|DL72|UL73|DL73|UL74|DL74|DL75|DL76|UL85|DL85|UL87|DL87|UL88|DL88|U103|D103|U106|D106

Default Value: INValid

[:SENSe]:MIMO:ANTenna:PORT <AUTO|ANT0|ANT1|ANT2|ANT3>

[:SENSe]:MIMO:ANTenna:PORT?

Title: Antenna Port

Description: Sets or queries the antenna port for the MIMO measurement.

Valid selections are: Auto (for autodetect), ANT0, ANT1, ANT2, and ANT3.

Parameter(s): <AUTO|ANT0|ANT1|ANT2|ANT3>

Query Return: AUTO|ANT0|ANT1|ANT2|ANT3

Default Value: AUTO

www.tehencom.com

[:SENSe]:MODE <SPECtrum|NRADio|RTSA|LTE|IASPectrum|IARTsa>
[:SENSe]:MODE?

Title: Spa mode

Description: Set the operational mode of the Spa app.

Note that not all modes are available on all models.

SPECtrum for the default spectrum mode.

NRADio for 5G measurement mode.

RTSA for real time spectrum analysis mode.

LTE for 4G measurement mode.

EMFMeter for EMF meter measurement mode.

PANalyzer for Pulse Analyzer mode.

IASPectrum for Interference Analyzer Spectrum mode.

IARTsa for Interference Analyzer RTSA mode.

CS for Channel Scanner mode.

Parameter(s): <SPECtrum | NRADio | RTSA | LTE | IASPectrum | IARTsa>

Query Return: SPEC | NRAD | RTSA | LTE | IASP | IART

Default Value: SPECtrum

[:SENSe]:MODE:CATalog?

Title: Spa Mode Catalog

Description: Returns a list of available modes for the Spa application. The response is a comma-separated list of mode names. See command [:SENSe]:MODE for the mode name specification.

[:SENSe]:MODulation:REFerence?

Title: Modulation Reference Point

Description: Queries the reference points for the current modulation type.

[:SENSe]:MODulation:TYPE <ALL|QPSK|Q16|Q64|Q256>
[:SENSe]:MODulation:TYPE?

Title: Modulation Type

Description: Sets or queries the modulation type for the current LTE or 5G measurement. Only QPSK is available in 5G measurement.

Valid selections are: ALL, QPSK, Q16 (16-QAM), Q64 (64-QAM), and Q256 (256-QAM).

Parameter(s): <ALL | QPSK | Q16 | Q64 | Q256>

Query Return: ALL | QPSK | Q16 | Q64 | Q256

Default Value: ALL

www.tehencom.com

[:SENSe]:NGFactor <ONESixth|HALF|ONE|TWO>
[:SENSe]:NGFactor?

Title: Ng Factor

Description: Sets or queries the Ng factor for the number of PHICH groups calculation.

Apply to TDD duplex type only.

Valid selections are: ONESixth (1/6), HALF (1/2), ONE (1), and TWO (2).

Parameter(s): <ONESixth | HALF | ONE | TWO>

Query Return: ONES | HALF | ONE | TWO

Default Value: ONESixth

[:SENSe]:NRADio:MAPPing:PATTern <P1|P2|AUTO>
[:SENSe]:NRADio:MAPPing:PATTern?

Title: Mapping Pattern

Description: Sets or queries the Mapping Pattern used in the New Radio mode.

Available selections are: P1 (Mapping Pattern 1), or P2 (Mapping Pattern 2)

Parameter(s): <P1 | P2 | AUTO>

Query Return: P1 | P2 | AUTO

Default Value: AUTO

[:SENSe]:OBANd
<INValid|GLOBal|N1|N2|N3|N5|N7|N8|N12|N13|N14|N18|N20|N24|N25|N26|N28|N29|N30|N34|N38|N39|N40|N41|N46|N48|N50|N51|N53|N54|N65|N66|N67|N70|N71|N74|N75|N76|N77|N78|N79|N85|N90|N91|N92|N93|N94|N96|N100|N101|N102|N104|N105|N257|N258|N259|N260|N261|N262|N263>
[:SENSe]:OBANd?

Title: Operating Band Number

Description: Sets or queries the operating band number for the current demod measurement. Sets via this command will also restrict available ARF and GS Channel numbers.

Band availability may be limited by options purchased.

When GLOBal is selected, applies the global ARFCN to GSCN calculation only.

When Nx is selected, applies any band restrictions over the global ARFCN to GSCN calculation.

Parameter(s):

<INValid | GLOBal | N1 | N2 | N3 | N5 | N7 | N8 | N12 | N13 | N14 | N18 | N20 | N24 | N25 | N26 | N28 | N29 | N30 | N34 | N38 | N39 | N40 | N41 | N46 | N48 | N50 | N51 | N53 | N54 | N65 | N66 | N67 | N70 | N71 | N74 | N75 | N76 | N77 | N78 | N79 | N85 | N90 | N91 | N92 | N93 | N94 | N96 | N100 | N101 | N102 | N104 | N105 | N257 | N258 | N259 | N260 | N261 | N262 | N263>

Query Return:

INV | GLOB | N1 | N2 | N3 | N5 | N7 | N8 | N12 | N13 | N14 | N18 | N20 | N24 | N25 | N26 | N28 | N29 | N30 | N34 | N38 | N39 | N40 | N41 | N46 | N48 | N50 | N51 | N53 | N54 | N65 | N66 | N67 | N70 | N71 | N74 | N75 | N76 | N77 | N78 | N79 | N85 | N90 | N91 | N92 | N93 | N94 | N96 | N100 | N101 | N102 | N104 | N105 | N257 | N258 | N259 | N260 | N261 | N262 | N263

Default Value: INValid

www.tehencom.com

[:SENSe]:OBWidth:METHod <XDB|PERCent>
[:SENSe]:OBWidth:METHod?

Title: Occupied Bandwidth Method

Description: Sets the method for calculating occupied bandwidth. XDB calculates the occupied bandwidth based on points a specified number of dB below the carrier. Issue command [:SENSe]:OBWidth:XDB to set the number of dB to be used. PERCent calculates the occupied bandwidth based on points a specified percentage of the carrier power below the carrier. Issue command [:SENSe]:OBWidth:PERCent to set the percentage to be used.

The measurement always gives a result, even if there is no signal. For example, the 100 dBc Occupied Bandwidth is the current full span.

Parameter(s): <XDB|PERCent>

Query Return: XDB|PERC

Default Value: PERCent

[:SENSe]:OBWidth:PERCent <numeric_value>
[:SENSe]:OBWidth:PERCent?

Title: Occupied Bandwidth Percent

Description: This command sets the percentage of carrier power used to measure the occupied bandwidth. This value is used in the measurement if :SENSe:OBWidth:METHod is set to PERCent.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 99

Range: 1e-06 to 99.999999

[:SENSe]:OBWidth:STATe <0 | 1 | ON | OFF>
[:SENSe]:OBWidth:STATe?

Title: Occupied Bandwidth State

Description: Sets the state of the occupied bandwidth measurement, ON or OFF. When using :CONFigure:OBWidth, the state is automaticaly set to ON

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:OBWidth:XDB <numeric_value> {DB}
[:SENSe]:OBWidth:XDB?

Title: Occupied Bandwidth XDB

Description: This command sets the number of dB below the carrier used to measure the occupied bandwidth. This value is used in the measurement if :SENSe:OBWidth:METHod is set to XDB.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 3 dB

Default Unit: dB

Range: 0.001 dB to 100 dB

[:SENSe][:OTA]:MAPPing:CHP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:CHP:THReshold[:DATA]?

Title: CHP Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Very Good, Good, Fair All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of power values in order from Excellent to Fair. This command takes a list of exactly 4 amplitude values as parameters. For example, SENS:OTA:MAPP:CHP:THR 0 dBm, -40 dBm, -60 dBm, -80 dBm For backward compatibility, the command will accept the 5th amplitude value as the poor value, but it won't be used. A poor measurement quality is anything less than the fair setting value.

Threshold values will be offset by the Reference Level Offset, if one exists. e.g. Reference Level Offset : 10 db SENS:OTA:MAPP:CHP:THR 0 dBm, -40 dBm, -60 dBm, -80 dBm Offset adjusted list will be : -10 dbm, -50 dbm, -70 dbm, -90 dbm Input values must be between -150 dbm and 30 dbm, the adjusted offset values exceed these but the input values must be between these base values. \

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: 0.0,-20.0,-40.0,-100.0

[:SENSe][:OTA]:MAPPing:CSCanner:BESt <0 | 1 | ON | OFF>
[:SENSe][:OTA]:MAPPing:CSCanner:BESt?

Title: OTA Coverage Mapping Channel Scanner Index

Description: When set to true, coverage mapping points use the highest value of all channels at that point to determine value and color.

When set to false, only the channel indicated by the OTA Coverage Mapping Channel Scanner Index setting is considered.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe][:OTA]:MAPPing:CSCanner:INDex <numeric_value>
[:SENSe][:OTA]:MAPPing:CSCanner:INDex?

Title: OTA Coverage Mapping Channel Scanner Index

Description: This command sets or queries the index of the channel that is used for the value and color of coverage mapping points.

This only has an effect if the OTA Coverage Mapping Channel Scanner Use Best setting is set to false.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 59

[:SENSe][:OTA]:MAPPing:DEFaults <0 | 1 | ON | OFF>
[:SENSe][:OTA]:MAPPing:DEFaults?

Title: OTA Coverage Mapping Default Thresholds

Description: In LTE and 5G modes, determines whether to use default thresholds for signal quality or user-defined ones. NOTE: the default values change at different center frequencies. Manually setting the value of a threshold will automatically change this setting to OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe][:OTA]:MAPPing:DISTance:UNIT <METers|FEET>
[:SENSe][:OTA]:MAPPing:DISTance:UNIT?

Title: OTA Mapping Distance Units

Description: This command sets or queries the OTA Mapping distance units. The query returns:

MET - Meters

FEET - Feet

Parameter(s): <METers|FEET>

Query Return: MET|FEET

Default Value: METers

www.tehencom.com

[:SENSe][:OTA]:MAPPing:MEASurement <CHPower|PSDensity|RSSI>
[:SENSe][:OTA]:MAPPing:MEASurement?

Title: OTA Coverage Mapping Measurement Type

Description: Select OTA Coverage Mapping measurement type.

The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Available parameters are mode specific.

When selecting a new mapping measurement type, all existing collected data will be cleared. It is recommended to save the existing data before selecting a new mapping measurement type.

Parameter(s): <CHPower | PSDensity | RSSI>

Query Return: CHP | PSD | RSSI

Default Value: RSSI

[:SENSe][:OTA]:MAPPing:POINts?

Title: OTA Coverage Mapping Total Collected Points

Description: Queries the total collected points for the coverage map.

Query Return: Numeric

Default Value: 0

Range: 0 to INFINITY

[:SENSe][:OTA]:MAPPing:POINts:DELete

Title: Clear OTA Coverage Mapping Measurement

Description: Clears all data points collected for the coverage map.

The instrument must be in Coverage Mapping measurement and the mapping data collection must not be running (see :MEASure:OTA:MAPPing:RUN) for the command to be effective.

[:SENSe][:OTA]:MAPPing:POINts:STAT?

Title: OTA Total Points Collected Statistics

Description: Query total collected points statistics for the current OTA measurement type see [:SENSe][:OTA]:MAPPing:MEASurement The result data will return in a json format :

{

"CoverageMapStatistics":

{

"max Amplitude":"-76.6342","mean Amplitude":"-87.4354","min Amplitude": "-95.7143",

"quality metrics":
{"Bad":"0.96%","Excellent":"31.56%","Good":"32.41%","NoSync":"10.84%","Poor":"24.23%"
},

"total Points":"941"

}

}

www.tehencom.com

[:SENSe][:OTA]:MAPPing:POSition <string>
[:SENSe][:OTA]:MAPPing:POSition?

Title: OTA Coverage Mapping Indoor Position

Description: Sets the x,y coordinates of the current position on an indoor map. The set command accepts a comma delimited string of x,y coordinates. The valid ranges for x,y coordinates are from 0.0 to 1.0. The coordinates are relative to the image region: the upper left corner is 0,0,

and the lower right corner is 1,1. See :MMEMory:LOAD:MAP on how to load an indoor map. The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Parameter(s): <string>

Default Value: 0.5,0.5

[:SENSe][:OTA]:MAPPing:PSD:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:PSD:THReshold[:DATA]?

Title: PSD Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Very Good, Good, Fair All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of power values in order from Excellent to Fair. This command takes a list of exactly 4 amplitude values as parameters. For example, SENS:OTA:MAPP:PSD:THR 0 dBm, -40 dBm, -60 dBm, -80 dBm For backward compatibility, the command will accept the 5th amplitude value as the poor value, but it won't be used. A poor measurement quality is anything less than the fair setting value.

Threshold values will be offset by the Reference Level Offset, if one exists.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: -60.0,-80.0,-100.0,-120.0

[:SENSe][:OTA]:MAPPing:REPeat:DISTance <numeric_value>
[:SENSe][:OTA]:MAPPing:REPeat:DISTance?

Title: OTA Coverage Mapping Repeat Distance Interval

Description: Sets and queries the distance interval for data collection. The instrument must be in Coverage Mapping measurement for the set command to be effective (see [:SENSe][:OTA]:MAPPing:STATe). If the current data collection trigger is Distance, the current data collection will be stopped (see :MEASure:OTA:MAPPing:RUN).

Parameter(s): <numeric_value>

Default Value: 100 m

Default Unit: m

Range: 1 m to 10000 m

www.tehencom.com

[:SENSe][:OTA]:MAPPing:REPeat:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe][:OTA]:MAPPing:REPeat:TIME?

Title: OTA Coverage Mapping Repeat Time Interval

Description: Sets and queries the time interval for data collection. The instrument must be in Coverage Mapping measurement for the set command to be effective (see [:SENSe][:OTA]:MAPPing:STATe). If the current data collection trigger is Time, the current data collection will be stopped (see :MEASure:OTA:MAPPing:RUN).

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1000 ms

Default Unit: ms

Range: 1000 ms to 60000 ms

[:SENSe][:OTA]:MAPPing:REPeat:TYPE <TIME|DISTance>
[:SENSe][:OTA]:MAPPing:REPeat:TYPE?

Title: OTA Coverage Mapping Repeat Type

Description: Sets and queries the mode for determining data collection trigger. Setting is either Time or Distance. In Time mode, data is collected at fixed intervals in time. In Distance mode, data is collected at fixed intervals in distance.

The instrument must be in Coverage Mapping measurement for the set command to be effective (see [:SENSe][:OTA]:MAPPing:STATe). The current data collection will be stopped when the data collection trigger type is changed (see :MEASure:OTA:MAPPing:RUN).

Parameter(s): <TIME | DISTance>

Query Return: TIME | DIST

Default Value: TIME

[:SENSe][:OTA]:MAPPing:RSP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:RSP:THReshold[:DATA]?

Title: RSP Power Threshold

Description: Sets and returns thresholds for signal recieved power qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of power values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:RSP:THR -80 dBm, -95 dBm, -115 dBm A Bad measurement quality is anything less than the poor setting value.

Threshold values will be offset by the Reference Level Offset, if one exists.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: -80.0,-90.0,-100.0

www.tehencom.com

[:SENSe][:OTA]:MAPPing:RSQ:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:RSQ:THReshold[:DATA]?

Title: RSQ Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of decibel values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:RSQ:THR -10 dB, -15 dB, -20 dB A Bad measurement quality is anything less than the poor setting value.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: -10.0,-15.0,-20.0

[:SENSe][:OTA]:MAPPing:RSSI:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:RSSI:THReshold[:DATA]?

Title: RSSI Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Very Good, Good, Fair All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of power values in order from Excellent to Fair. This command takes a list of exactly 4 amplitude values as parameters. For example, SENS:OTA:MAPP:RSSI:THR 0 dBm, -40 dBm, -60 dBm, -80 dBm For backward compatibility, the command will accept the 5th amplitude value as the poor value, but it won't be used. A poor measurement quality is anything less than the fair setting value.

Threshold values will be offset by the Reference Level Offset, if one exists. e.g. Reference Level Offset : 10 db SENS:OTA:MAPP:RSSI:THR 0 dBm, -40 dBm, -60 dBm, -80 dBm Offset adjusted list will be : -10 dbm, -50 dbm, -70 dbm, -90 dbm Input values must be between -150 dbm and 30 dbm, the adjusted offset values exceed these but the input values must be between these base values. \

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: 0.0,-20.0,-40.0,-100.0

[:SENSe][:OTA]:MAPPing:RSS:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:RSS:THReshold[:DATA]?

Title: RS SINR Power Threshold

Description: Sets and returns thresholds for signal to noise ratio qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of decibel values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:RSS:THR 20 dB, 13 dB, 0 dB A Bad measurement quality is anything less than the poor setting value.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: 20.0,13.0,0.0

www.tehencom.com

[:SENSe][:OTA]:MAPPing:SOURce <ANY|DEFined>
[:SENSe][:OTA]:MAPPing:SOURce?

Title: OTA Coverage Mapping Source

Description: Select OTA Coverage Mapping source type.

The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Automate visible OTA value to Maximum or choose the source with single.

Parameter(s): <ANY|DEFined>

Query Return: ANY|DEF

Default Value: ANY

[:SENSe][:OTA]:MAPPing:SOURce:VALue <numeric_value>
[:SENSe][:OTA]:MAPPing:SOURce:VALue?

Title: OTA Coverage Mapping Source PCI Value

Description: Select OTA Coverage Mapping measurement type.

The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

PCI used when source is set to single.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 1007

[:SENSe][:OTA]:MAPPing:SSP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:SSP:THReshold[:DATA]?

Title: SSP Power Threshold

Description: Sets and returns thresholds for signal recieved power qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of power values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:SSP:THR -80 dBm, -95 dBm, -115 dBm A Bad measurement quality is anything less than the poor setting value.

Threshold values will be offset by the Reference Level Offset, if one exists.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: -80.0,-90.0,-100.0

www.tehencom.com

[:SENSe][:OTA]:MAPPing:SSQ:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:SSQ:THReshold[:DATA]?

Title: SSQ Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of decibel values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:SSQ:THR -10 dB, -15 dB, -20 dB A Bad measurement quality is anything less than the poor setting value.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: -10.0,-15.0,-20.0

[:SENSe][:OTA]:MAPPing:SSS:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...
[:SENSe][:OTA]:MAPPing:SSS:THReshold[:DATA]?

Title: SS SINR Power Threshold

Description: Sets and returns thresholds for signal qualities. Threshold values are (in this order): Excellent, Good, Poor All Threshold values must not overlap, and must be valid decimal numbers. Thresholds are set as a list of decibel values in order from Excellent to Poor. This command takes a list of exactly 3 amplitude values as parameters. For example, SENS:OTA:MAPP:SSS:THR 20 dB, 13 dB, 0 dB A Bad measurement quality is anything less than the poor setting value.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ...

Default Value: 20.0,13.0,0.0

[:SENSe][:OTA]:MAPPing:STATe <0 | 1 | ON | OFF>
[:SENSe][:OTA]:MAPPing:STATe?

Title: OTA Coverage Mapping State

Description: Enable or disable OTA Coverage Mapping measurement

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe][:OTA]:MAPPing:TYPE <INDoor|OUTDoor>
[:SENSe][:OTA]:MAPPing:TYPE?

Title: OTA Coverage Mapping Type

Description: Select OTA Coverage Mapping type.

The instrument must be in Coverage Mapping measurement for the command to be effective (see [:SENSe][:OTA]:MAPPing:STATe).

Note that GPS/GNSS is required for outdoor mapping.

Note that when switching the mapping type, the existing mapping points will be deleted and the measurement will be stopped. It's recommended to save the existing mapping points before switching the mapping type.

Parameter(s): <INDoor|OUTDoor>

Query Return: IND|OUTD

Default Value: OUTDoor

www.tehencom.com

[:SENSe]:PCI?

Title: Get PCI Measurements

Description: Returns the last stored PCI measurement results. This command returns cell id, group id, corrected carrier frequency, detected beam,

frame start, frequency error, sector id, group id, and time offset(in ns) as output in json format.

This command does not wait for the current measurement to complete before returning results.

An example is as follows:

{
"carrierId":1,
"cellId": 0,
"cellIdGroup": 0,
"correctedCarrierFrequency": 4499999985.264854,
"detectedBeam": 4,
"frameStart": 233097,
"frequencyError": -14.735145792134368,
"ppmFrequencyError": 0.09346635883256266,
"sectorId": 0,
"status": {
"hardwareErrors": {
"ADCOverRange": 0,
"DeviceAccess": 0,
"EEPROM": 0,
"IrregularData": 0,
"Limit": 0,
"LockLO1": 0,
"LockLO2": 0,
"NoCal": 0,
"Overpower": 0,
"SLOLock": 0,
"Saturation": 0,
"TgLockLo1": 0
},
"statusMessage": "statusPciDone",
"statusNumber": 10
},
"gps":{
"coordinates":"37.14681, -121.65609, 128m",
"time":"Fri Jun 28 19:56:45 2019 GMT"
},

www.tehencom.com

"timeOffset": -634782.9687499882

}

[:SENSe]:POLar:CLEar

Title: Clear Polar Data

Description: Clears Measurement Results and deletes all current lines.

[:SENSe]:POLar:DATA?

Title: Polar Data

Description: Contains the max and powers per 2 degrees produced by the Polar measurement as a JSON. powerAtDegree is ["nan"] unless data has been acquired. ie: "powerAtDegree":["nan"] Example: {"GPS":{"Latitude":-121.656,"Longitude":37.146,},"max": "-40.18" ,"powerAtDegree":["-49.5", "nan", "nan", "nan", …, "nan"]}

Default Value:

{"GPS":{"Latitude":"nan","Longitude":"nan"},"bearing":"nan","roll":"nan","pitch":"nan","max":"nan","powerAtDegree":["nan"]}

[:SENSe]:POLar:DCOLlect <0 | 1 | ON | OFF>
[:SENSe]:POLar:DCOLlect?

Title: Polar Data Collection State

Description: The Polar measurement will only log new data if this is set on. Turn this off to stop updating the plot.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:POLar:STATe <0 | 1 | ON | OFF>
[:SENSe]:POLar:STATe?

Title: Interference Polar Measurement State

Description: This command sets and queries the state of the Interference Polar meausurement.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:POWer:RF:ATTenuation <numeric_value> {DB}
[:SENSe]:POWer:RF:ATTenuation?

Title: Input Attenuation

Description: Sets the input attenuation. Note that issuing this command will set the automatic input attenuation OFF. Actual minimum and maximum values vary, depending on model and options.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 30 dB

Default Unit: dB

Range: 0 dB to 50 dB

[:SENSe]:POWer:RF:ATTenuation <numeric_value> {DB}
[:SENSe]:POWer:RF:ATTenuation?

Title: Input Attenuation

Description: Sets the input attenuation. Note that issuing this command will set the automatic input attenuation OFF. Actual minimum and maximum values vary, depending on model and options.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 30 dB

Default Unit: dB

Range: 0 dB to 50 dB

[:SENSe]:POWer:RF:ATTenuation:AUTO <0 | 1 | ON | OFF>
[:SENSe]:POWer:RF:ATTenuation:AUTO?

Title: RF Attenuation Auto

Description: Sets the input attenuation coupling. Setting the value to ON or 1 will result in the input attenuation being coupled to the reference level. Setting the value to OFF or 0 will result in the input attenuation being uncoupled from the reference level. That is, changing the reference level will not change the input attenuation. When this command is issued, the input attenuator setting itself will not change. The default value is ON. That is, sending :SENS:POW:ATT:AUTO is equivalent to sending :SENS:POW:ATT:AUTO ON.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:POWer:RF:ATTenuation:AUTO <0 | 1 | ON | OFF>
[:SENSe]:POWer:RF:ATTenuation:AUTO?

Title: RF Attenuation Auto

Description: Sets the input attenuation coupling. Setting the value to ON or 1 will result in the input attenuation being coupled to the reference level. Setting the value to OFF or 0 will result in the input attenuation being uncoupled from the reference level. That is, changing the reference level will not change the input attenuation. When this command is issued, the input attenuator setting itself will not change. The default value is ON. That is, sending :SENS:POW:ATT:AUTO is equivalent to sending :SENS:POW:ATT:AUTO ON.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:POWer:RF:GAIN:AUTO <0 | 1 | ON | OFF>
[:SENSe]:POWer:RF:GAIN:AUTO?

Title: Auto Gain Ranging

Description: Sets the state of the auto gain-ranging functionality.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:POWer:RF:GAIN:STATe <0 | 1 | ON | OFF>
[:SENSe]:POWer:RF:GAIN:STATe?

Title: Preamp

Description: Sets the state of the preamp. Note that this may cause a change in the reference level and/or attenuation.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:POWer:RF:GAIN:STATe <0 | 1 | ON | OFF>
[:SENSe]:POWer:RF:GAIN:STATe?

Title: Preamp

Description: Sets the state of the preamp. Note that this may cause a change in the reference level and/or attenuation.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:SCANner?

Title: Get Cell Scanner

Description: Returns the cell scanner measurements in a json format. unlike [:SENSe]:FETCH:SCANner this command does not block and will return the previous result. Returned data format varies based on whether the current mode is 5GNR or LTE.

5GNR Mode format:

{

"carrierId":1,

"gps":{

"coordinates":"37.14681, -121.65609, 128m",

"time":"Fri Jun 28 19:56:45 2019 GMT"

},

"status":{

"hardwareErrors":{

"ADCOverRange":0,

"DeviceAccess":0,

"EEPROM":0,

"IrregularData":0,

"Limit":0,

"LockLO1":0,

"LockLO2":0,

"NoCal":0,

"Overpower":0,

"SLOLock":0,

"Saturation":0,

"TgLockLo1":0

},

"statusMessage":"statusCellScannerDone",

"statusNumber":13

},

"values":[

{

"cellId":1007,

"cellIdGroup":335,

"frameStart":1920521,

"sectorId":0,

"timeOffset":-3490194.091145895,

"values":[

{

"beamIndex":0,

www.tehencom.com

"beamPresent":1,
"ssRmsEvm":6.488177299499512,
"ssRsrp":-67.18608535715634,
"ssRsrq":-9.913812153567978,
"ssSinr":23.757546218871823
},
...
{
"beamIndex":7,
"beamPresent":1,
"ssRmsEvm":6.488177299499512,
"ssRsrp":-84.22420720274197,
"ssRsrq":null,
"ssSinr":null
}
]
}
]
}

LTE Mode format:

{
"carrierId":1,
"gps":{
"coordinates":"nan, nan,nanm","time":""
},
"status":{
"hardwareErrors":{
"ADCOverRange":0,
"DeviceAccess":0,
"EEPROM":0,
"IrregularData":0,
"Limit":0,
"LockLO1":0,
"LockLO2":0,
"NoCal":0,
"Overpower":0,
"SLOLock":0,
"Saturation":0,
"TgLockLo1":0
},

www.tehencom.com

"statusMessage":"statusCellScannerDone",
"statusNumber":13
},
"values":[
{
"cellId":2,
"cellIdGroup":0,
"crsRsrp":-68.46522521972656,
"crsRsrq":0.2733601927757263,
"crsSinr":34.74685287475586,
"dominance":null,
"dominantCell":true,
"frameStart":-1,
"frequencyError":227.3341827392578,
"pbch":{
"peakEvm":{
"percent":4.949735641479492,
"subcarrierNumber":-1,
"symbolNumber":-1
},
"rmsEvm":2.2826967239379883
},
"ppmFrequencyError":0.06495262363978795,
"sectorId":2,
"ssRsrp":-68.43709564208984
}
]
}

[:SENSe]:SCANner:STATe <0 | 1 | ON | OFF>
[:SENSe]:SCANner:STATe?

Title: Demod Scanner State Command
Description: Turns on cell scanner, disables other measurements
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: OFF

www.tehencom.com

[:SENSe]:SEMask:CENTer:BWIDth <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:SEMask:CENTer:BWIDth?

Title: Center Channel Bandwidth

Description: Set or query the bandwidth of the central channel of the Spectral Emission Mask measurement. The center channel is used to calculate the reference power when reference power calculation is set to AUTO.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 100000000 Hz

Default Unit: Hz

Range: 10000 Hz to 1000000000 Hz

[:SENSe]:SEMask:MASK
<GT38|LT38|W43|W41|W35|W31|WK43|WK41|WK35|WK31|LK24|LK22|LK20|NK38|NK35|NK28|NK24|CUSTom>
[:SENSe]:SEMask:MASK?

Title: Spectral Mask

Description: Sets the preprogrammed spectral mask to be use for the Spectral Emission Mask measurement. Available selections are specified in the following table: Spectral Mask Description GT38 5G NR P > 38 dBm LT38 5G NR P < 38 dBm W43 WCDMA P >= 43 dBm W41 WCDMA 39 <= P < 43 dBm W35 WCDMA 31 <= P < 39 dBm W31 WCDMA P < 31 dBm WK43 WCDMA KR P >= 43 dBm WK41 WCDMA KR 39 <= P < 43 dBm WK35 WCDMA KR 31 <= P < 39 dBm WK31 WCDMA KR P < 31 dBm LK24 LTE KR P >= 24 dBm LK22 LTE KR 20 <= P < 24 dBm LK20 LTE KR P < 20 dBm NK38 5G NR KR P >= 38 dBm NK35 5G NR KR 31 <= P < 38 dBm NK28 5G NR KR 24 <= P < 31 dBm NK24 5G NR KR P < 24 dBm CUSTom User Defined Mask from [:SENSe]:SEMask:MASK:CUSTom\

Parameter(s):

<GT38|LT38|W43|W41|W35|W31|WK43|WK41|WK35|WK31|LK24|LK22|LK20|NK38|NK35|NK28|NK24|CUSTom>

Query Return:

GT38|LT38|W43|W41|W35|W31|WK43|WK41|WK35|WK31|LK24|LK22|LK20|NK38|NK35|NK28|NK24|CUST

Default Value: GT38

www.tehencom.com

[:SENSe]:SEMask:MASK:CUSTom <string>,<block data>
[:SENSe]:SEMask:MASK:CUSTom?

Title: Custom Spectral Emission Mask Segment Data

Description: This command takes String as a name and imports file contents to the instrument. Data is transferred to the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

Sting Value: The name value sent

Block Data: The data to be written to the instrument in block data format

Please note that the maximum file transfer size to the instrument is 25 MB. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

The contents of the block data should format to csv with each line being a segment in the custom SEM.

Needed values for a segment are: startFrequency, stopFrequency, rbw, vbw, isStartAmpRelative, isStopAmpRelative, startAmplitude, stopAmplitude Start and Stop Frequencies are relative to the center frequency.

Example of a properly formatted mask: -4.00e7,-1.01e7,1.00e6,1.00e5,0,0,-15,-15 1.01e7,4.00e7,1.00e6,1.00e5,0,0,-15,-15

Query returns a String formatted as Json with name: and mask: as the keys

example:

{ name: maskname, mask: -4.00e7,-1.01e7,1.00e6,1.00e5,0,0,-15,-15

1.01e7,4.00e7,1.00e6,1.00e5,0,0,-15,-15 }\

Parameter(s): <string>,<block data>

Default Value: {"name":"example.csv"}

[:SENSe]:SEMask:MASK:TYPe?

Title:

Description: Query the Spectral Emission Mask offest type of [:SENSe]:SEMask:MASK selection. Type Description CHANnel Mask segments offset from the edges of channel bandwidth. CENTer Mask segments offset from the center frequency.\

Query Return: CHAN | CENT

Default Value: CHANnel

www.tehencom.com

[:SENSe]:SEMask:RPOWer <numeric_value> {<amplitude_units>}
[:SENSe]:SEMask:RPOWer?

Title: Manual Reference Power

Description: Set or query the manual reference power value used in the Spectral Emission Mask measurement when reference power calculation method ([SENSe]:SEMask:RPOWer:STATe) is set to OFF or 0. When the reference power calculation method is set to ON or 1, this manual reference power value will be unused.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -200 dBm to 200 dBm

[:SENSe]:SEMask:RPOWer:STATe <0 | 1 | ON | OFF>
[:SENSe]:SEMask:RPOWer:STATe?

Title: Reference Power Calculation

Description: Set or query the method for how the reference power is calculated in the Spectral Emission Mask measurement. Setting the value to ON or 1, the reference power will be obtained automatically by measuring the channel power of the center channel bandwidth. Setting the value to OFF or 0, the reference power will be the value set using the manual reference power command ([:SENSe]:SEMask:RPOWer).

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:SEMask:STATe <0 | 1 | ON | OFF>
[:SENSe]:SEMask:STATe?

Title: Spectral Emission Mask State

Description: Sets the state of the Spectral Emission Mask measurement, ON or OFF. When using :CONFigure:SEMask,the state is automatically set to ON.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:SIB:STATe <0 | 1 | ON | OFF>
[:SENSe]:SIB:STATe?

Title: SIB1 Measurement State Command

Description: Sets or queries SIB1 measurement state

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

[:SENSe]:SSB?

Title: Get SSB Measurements

Description: Returns the last stored SSB measurement results.

This command returns the beam numbers with the best EVM and power, followed by Power and EVM results

for PSS, SSS, PBCH, PBCH DM-RS and SS Signal Quality Results in a json format.

This command does not wait for the current measurement to complete before returning results.

eg:

{
"bestEvmBeam":5,
"bestPowerBeam":0,
"status": {
"hardwareErrors": {
"ADCOverRange": 0,
"DeviceAccess": 0,
"EEPROM": 0,
"IrregularData": 0,
"Limit": 0,
"LockLO1": 0,
"LockLO2": 0,
"NoCal": 0,
"Overpower": 0,
"SLOLock": 0,
"Saturation": 0,
"TgLockLo1": 0
},
"statusMessage": "statusPciDone",
"statusNumber": 10
},
"gps":{
"coordinates":"37.14681, -121.65609, 128m",
"time":"Fri Jun 28 19:56:45 2019 GMT"
},
"values":[
{
"dmRsPbch":{
"peakEvm":{
"percent":11.926020622253418,
"subcarrierNumber":1529,

www.tehencom.com

"symbolNumber":3
},
"power":-31.813847928749347,
"rmsEvm":3.813983917236328
},
"pbch":{
"peakEvm":{
"percent":13.430730819702148,
"subcarrierNumber":1638,
"symbolNumber":5
},
"power":-31.8139914869584,
"rmsEvm":3.736370325088501
},
"pss":{
"peakEvm":{
"percent":12.912864685058594,
"subcarrierNumber":1638,
"symbolNumber":2
},
"power":-31.704519932556128,
"rmsEvm":1.7515575885772705
},
"ssRsrp":-31.750750515723816,
"ssRsrq":-10.728772378478801,
"ssSinr":-13.878087163543444,
"sss":{
"peakEvm":{
"percent":11.369827270507812,
"subcarrierNumber":1638,
"symbolNumber":4
},
"power":-31.750750515723816,
"rmsEvm":2.5253000259399414
}
},
{ ... },
{ ... },
{ ... },
{ ... },

www.tehencom.com

{ ... },
{ ... },
{ ... }
]
}

[:SENSe]:SSB:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:SSB:FREQuency?

Title: SSB Frequency
Description: Sets or queries the SS Block center frequency in Hz.
Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}
Query Return: Numeric (Hz)
Default Value: 0 Hz
Default Unit: Hz
Range: -100000000000 Hz to 300000000000 Hz

[:SENSe]:SSB:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:SSB:OFFSet?

Title: SSB Frequency Offset
Description: Sets or queries the SS Block frequency offset from the current center frequency in Hz.
Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}
Query Return: Numeric (Hz)
Default Value: 0 Hz
Default Unit: Hz
Range: -53000000000 Hz to 53000000000 Hz

[:SENSe]:SSB:OFFSet:AUTO:ABORt

Title: SSB Autodetection Abort
Description: Aborts the current SSB Autodetection operation. System may take several seconds before the current operation terminates completely. The [:SENSe]:SSB:OFFSet:AUTO:STATus query

will return "ABOR" when complete.

[:SENSe]:SSB:OFFSet:AUTO:STARt

Title: SSB Autodetection Start
Description: Starts the SSB Autodetection operation.

www.tehencom.com

[:SENSe]:SSB:OFFSet:AUTO:STATus?

Title: SSB Autodetection Status

Description: Queries the current status of the SSB Autodetection operation. Valid values are:

INACtive: Operation has not been performed with the current set of parameters. ACTive: Operation is in progress. EXTended: Extensive search is in progress. PASS: Operation has completed successfully, and the new SSB Offset has been applied. FAIL: Operation has completed, but did not find a valid SSB. ABORted: Operation was aborted before completion.

Query Return: INAC | ACT | EXT | PASS | FAIL | ABOR

Default Value: INACtive

[:SENSe][:SSB]:SCSPacing <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe][:SSB]:SCSPacing?

Title: SSB Subcarrier Spacing

Description: Sets or queries the SS Block subcarrier spacing for the current demod measurement.

Full set of possible values are 15, 30, 120, 240 kHz.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 30000 Hz

Default Unit: Hz

Range: 15000 Hz to 240000 Hz

[:SENSe][:SSB]:SCSPacing:CATalog?

Title: SSB Subcarrier Spacing Catalog

Description: Queries a list of all valid SS block subcarrier spacing values based on current settings.

Data is returned in a comma-separated list of frequencies in Hz, e.g. "15000,30000,120000,240000"

Default Value: 15000,30000,120000,240000

[:SENSe]:STATistics:CLEar

Title: Clear measurement statistics

Description: Clears measurement statistics, (E.G. mean frequency error)

[:SENSe]:SUBFrame <numeric_value>
[:SENSe]:SUBFrame?

Title: Subframe Number

Description: Sets or queries the subframe number for the current LTE or 5G measurement.

Values range from 0-9.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 9

www.tehencom.com

[:SENSe]:SUBFrame:CONFiguration
<AUTO|SSF0|SSF1|SSF2|SSF3|SSF4|SSF5|SSF6|SSF7|SSF8|SSF9|INValid>
[:SENSe]:SUBFrame:CONFiguration?

Title: Special Subframe Configuration

Description: Sets or queries the special subframe configuration for the current LTE measurement.

Parameter(s): <AUTO | SSF0 | SSF1 | SSF2 | SSF3 | SSF4 | SSF5 | SSF6 | SSF7 | SSF8 | SSF9 | INValid>

Query Return: AUTO | SSF0 | SSF1 | SSF2 | SSF3 | SSF4 | SSF5 | SSF6 | SSF7 | SSF8 | SSF9 | INV

Default Value: SSF0

[:SENSe]:SUBFrame:SLOT <numeric_value>
[:SENSe]:SUBFrame:SLOT?

Title: Slot Number

Description: Sets or queries the slot number of the current selected subframe in the LTE or 5G frame power measurement.

Allowed values depend on Subcarrier Spacing and Periodicity.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 1

[:SENSe]:SWEep:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:SWEep:TIME?

Title: Sweep Time

Description: Sets the value of the minimum sweep time parameter. The sweep will complete in the shortest time possible greater than the specified time. To sweep as fast as possible, enter the minimum value allowed for the sweep time. Applies to zero span sweeps only.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 30000 ms

Default Unit: ms

Range: 0.02 ms to 60000 ms

[:SENSe]:SWEep:TIME:AUTO <0 | 1 | ON | OFF>
[:SENSe]:SWEep:TIME:AUTO?

Title: OTA Mapping Sweep Time Auto Mode

Description: Setting the value to On will adjust the zero span sweep time to (1/RBW * ZeroSpanDisplayPointCount). Applies to coverage mapping RSSI measurement only. Manually setting the sweep time value in coverage mapping will turn this setting Off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:SYNCtype <SS>
[:SENSe]:SYNCtype?

Title: Sync Type
Description: Sets or queries the sync type, currently only SS is available for 5GNR
Parameter(s): <SS>
Query Return: SS
Default Value: SS

[:SENSe]:TDOMain:DISPlay:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:TDOMain:DISPlay:LENGth?

Title: Time Domain Display Length
Description: Sets or queries the duration of the Time Domain measurements display's measurement. Available values are limited to 100us - 200ms.
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
Default Value: 20 ms
Default Unit: ms
Range: 0.1 ms to 200 ms

[:SENSe]:TDOMain:DISPlay:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR}
[:SENSe]:TDOMain:DISPlay:STARt?

Title: Time Domain Display Start Time
Description: Sets or queries the start time of the display for the Time Domain measurement. Available values are limited to 0 - 199.9ms.
Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}
Query Return: Numeric (ms)
Default Value: 0 ms
Default Unit: ms
Range: 0 ms to 199.9 ms

[:SENSe]:TDOMain:STATe <0 | 1 | ON | OFF>
[:SENSe]:TDOMain:STATe?

Title: Time Domain State
Description: Enables and disables time domain mode
Parameter(s): <0 | 1 | ON | OFF>
Query Return: 0 | 1
Default Value: OFF

www.tehencom.com

[:SENSe]:TDOMain:TRACe[:DATa]? [<ASCii|INTeger|REAL>],[<numeric_value>]

Title: Time Domain Trace

Description: This command transfers the time domain trace data from the unit to the controller. The data format and optional parameters are identical to the TRACE[:DTATA]:ALL and the :FETCh[:DATA]:ALL command. See the document on those commands for more info.

Parameter(s): [<ASCii | INTeger | REAL>],[<numeric_value>]

[:SENSe]:TDOMain:TRACe:DETector[:FUNCtion]
<POSitive|RMS|NEGative|SAMPle|NORMal>
[:SENSe]:TDOMain:TRACe:DETector[:FUNCtion]?

Title: TDomain Detector Type

Description: Query and Set the time domain detector type. The detection type determines how the display point is derived from its associated measurements. POSitive Peak detection displays the maximum value of the associated measurements. RMS detection displays the average power of the associated measurements. NEGative Peak detection displays the minimum value of the associated measurements. NORMal detection displays the maximum value, POSitive Peak, when the point is odd and minimum value, NEGative Peak, when the point is even. SAMPle detection selects one of the associated measurement points to display.

Parameter(s): <POSitive | RMS | NEGative | SAMPle | NORMal>

Query Return: POS | RMS | NEG | SAMP | NORM

Default Value: POSitive

[:SENSe]:TDOMain:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF>
[:SENSe]:TDOMain:TRACe:DISPlay[:STATe]?

Title: TDomain Display State

Description: The trace visibility state. If it is OFF, the [:SENSe]:TDOMain:TRACe[:DATa]? command will return nan.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:TDOMain:TRACe:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH>
[:SENSe]:TDOMain:TRACe:TYPE?

Title: TDOMain Trace Type

Description: Specifies how successive sweeps are combined to produce the resulting display value. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.

Parameter(s):

<NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage | MATH>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV | MATH

Default Value: NORMal

[:SENSe]:TDOMain:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF>
[:SENSe]:TDOMain:TRACe:UPDate[:STATe]?

Title: TDomain Update State

Description: The trace update state determine whether the time domain trace is update in every sweep.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:THD:FREQuency:FUNDamental <numeric_value> {HZ | KHZ | MHZ | GHZ}
[:SENSe]:THD:FREQuency:FUNDamental?

Title: THD Fundamental Frequency

Description: Sets and queries the THD Fundamental Frequency for use in the measurement. When the fundamental auto is enabled then this value is not used, see setting THD:FREQ:FUND:AUTO.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 3000000000 Hz

Default Unit: Hz

Range: 1 Hz to 400000000000 Hz

www.tehencom.com

[:SENSe]:THD:FREQuency:FUNDamental:AUTO <0 | 1 | ON | OFF>
[:SENSe]:THD:FREQuency:FUNDamental:AUTO?

Title: THD Fundamental Frequency Auto

Description: This command can switches between automatic or manual selection of the THD fundamental frequency used. When automatic selection then the peak in the spectrum is used as the fundamental frequency. When switching the auto state off, the current modulation frequency result is used see :THD:FREQ:FUND

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:THD:STATe <0 | 1 | ON | OFF>
[:SENSe]:THD:STATe?

Title: THD Measurement State

Description: Sets and queries the state of THD Measurement

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:TRANsmission:STATe <0 | 1 | ON | OFF>
[:SENSe]:TRANsmission:STATe?

Title: Transmission Measurement State

Description: Toggles the Transmission measurement on or off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:TRIangulation:BEARing:SOURce <ANTenna|MANual>
[:SENSe]:TRIangulation:BEARing:SOURce?

Title: Triangulation Bearing Source

Description: Set the bearing for Triangulation using an MS2700A antenna with ANTenna or to a manual value with MANual. To enter the manual value, see [:SENSe]:TRIangulation:BEARing:VALue.

Parameter(s): <ANTenna|MANual>

Query Return: ANT|MAN

Default Value: ANTenna

www.tehencom.com

[:SENSe]:TRIangulation:BEARing:VALue <numeric_value>
[:SENSe]:TRIangulation:BEARing:VALue?

Title: Triangulation Manual Bearing Value

Description: Sets the bearing value while in manual mode (see [:SENSe]:IANalyzer:BEARing:SOURce). The value is in degrees from True North.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 359.9

[:SENSe]:TRIangulation:CLEar

Title: Clear Triangulation Data

Description: Deletes all current lines.

[:SENSe]:TRIangulation:DATA?

Title: Triangulation Data

Description: Holds the lines produced by the Triangulation measurement as a JSON array. Example: "lines":[{"latitude":"0.0", "longitude":"0.0", "bearing":"0.0"}]

Default Value: {"intersection":{"error":null,"latitude":"nan","longitude":"nan"},"lines":[]}

[:SENSe]:TRIangulation:REMove [<numeric_value>]

Title: Remove Triangulation Line

Description: Deletes one of the current lines. The optional parameter is the index of the line to delete. For example, 0 deletes the first line in the list returned by [:SENSe]:TRIangulation:DATA, 1 deletes the second line, etc. Negative indices can be used to delete from the end of the list. For example -1 will delete the final line. If no index is entered, the final line will be deleted by default.

Parameter(s): [<numeric_value>]

[:SENSe]:TRIangulation:STATe <0 | 1 | ON | OFF>
[:SENSe]:TRIangulation:STATe?

Title: Triangulation Measurement State

Description: Toggles the IA Triangulation measurement on or off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:TRIangulation:TRIGger

Title: Manual Triangulation Trigger

Description: Places a line based on the current GPS location and manual bearing setting ([:SENSe]:TRIangulation:BEARing:VALue). Requires a GPS fix and that the bearing source be set to MANual ([:SENSe]:TRIangulation:BEARing:SOURce).

www.tehencom.com

[:SENSe]:UPDown:CONFig <numeric_value>
[:SENSe]:UPDown:CONFig?

Title: Up/Down Link Config

Description: Sets or queries the current up/down link config setting. This setting is only available when duplex type is set to TDD

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 6

[:SENSe]:WCDMa:DEMod:CPICh <numeric_value> {<amplitude_units>}
[:SENSe]:WCDMa:DEMod:CPICh?

Title: CPICH Power

Description: Set or query the power of the Common Pilot Channel for W-CDMA code domain demodulation measurements.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 30 dBm

Default Unit: dBm

Range: -300 dBm to 100 dBm

[:SENSe]:WCDMa:DEMod:CPICh:STATe <0 | 1 | ON | OFF>
[:SENSe]:WCDMa:DEMod:CPICh:STATe?

Title: CPICH Sync State

Description: Set or query whether the CPICH is used for synchronization during W-CDMA code domain demodulation measurements. Setting the value to ON or 1 enables use of the CPICH for synchronization. Setting the value to OFF or 0 disables use of the CPICH for synchronization.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:WCDMa:DEMod:PICH:CODE <numeric_value>
[:SENSe]:WCDMa:DEMod:PICH:CODE?

Title: PICH Code Number

Description: Set or query the channelization code number of the PICH channel for W-CDMA code domain demodulation measurements.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 16

Range: 0 to 255

www.tehencom.com

[:SENSe]:WCDMa:DEMod:SCCPch:CODE <numeric_value>
[:SENSe]:WCDMa:DEMod:SCCPch:CODE?

Title: S-CCPCH Code Number

Description: Set or query the channelization code number of the S-CCPCH channel for W-CDMA code domain demodulation measurements.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 3

Range: 1 to 255

[:SENSe]:WCDMa:DEMod:SCCPch:SFACtor <string>
[:SENSe]:WCDMa:DEMod:SCCPch:SFACtor?

Title: S-CCPCH Spreading Factor

Description: Set or query the spreading factor of the S-CCPCH channel for W-CDMA code domain demodulation measurements.

Parameter(s): <string>

Default Value: 256

[:SENSe]:WCDMa:DEMod:SCODe <numeric_value>
[:SENSe]:WCDMa:DEMod:SCODe?

Title: Scrambling Code

Description: Set or query the primary scrambling code used for W-CDMA code domain demodulation measurements. When the auto scrambling code feature is turned on, see [:SENSe]:WCDMa:DEMod:SCODe:AUTO, this setting is overwritten by the automatically detected value.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: -1 to 511

[:SENSe]:WCDMa:DEMod:SCODe:AUTO <0 | 1 | ON | OFF>
[:SENSe]:WCDMa:DEMod:SCODe:AUTO?

Title: Automatic Scrambling Code Detection

Description: Set or query the state of the automatic scrambling code detection feature. Setting the value to ON or 1 results in the instrument detecting the strongest signal present and using the scrambling code of that signal for demodulation. Setting the value to OFF or 0 applies the user-selected scrambling code value, see [:SENSe]:WCDMa:DEMod:SCODe.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

www.tehencom.com

[:SENSe]:WCDMa:DEMod:SFACtor <string>
[:SENSe]:WCDMa:DEMod:SFACtor?

Title: Maximum Spreading Factor

Description: Set or query the maximum spreading factor used when demodulating a W-CDMA signal.

Parameter(s): <string>

Default Value: 512

[:SENSe]:WCDMa:DEMod:THRShold <numeric_value> {DB}
[:SENSe]:WCDMa:DEMod:THRShold?

Title: Active Code Threshold

Description: Set or query the threshold used for detecting active traffic channels in W-CDMA code domain demodulation measurements. If the automatic threshold feature is enabled, see [:SENSe]:DEMod:THRShold:AUTO, this setting is overwritten by the automatically detected threshold.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: -30 dB

Default Unit: dB

Range: -50 dB to -10 dB

[:SENSe]:WCDMa:DEMod:THRShold:AUTO <0 | 1 | ON | OFF>
[:SENSe]:WCDMa:DEMod:THRShold:AUTO?

Title: Automatic Threshold

Description: Set or query the state of the Automatic Threshold feature when demodulating a W-CDMA signal. Setting the value to ON or 1 enables the automatic threshold feature. Setting the value to OFF or 0 disables the automatic threshold feature and applies the user-selected threshold, see [:SENSe]:WCDMa:DEMod:THRShold.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: ON

[:SENSe]:WCDMa:DEMod:TXPower <numeric_value> {<amplitude_units>}
[:SENSe]:WCDMa:DEMod:TXPower?

Title: Maximum Transmit Power

Description: Set or query the maximum transmit power of the base station for W-CDMA code domain demodulation measurements.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 43 dBm

Default Unit: dBm

Range: -300 dBm to 100 dBm

www.tehencom.com

[:SENSe]:WCDMa:SYNC?

Title: Get Sync Measurements

Description: Returns the last stored sync measurement results.

This command returns frequency error stats, carrier id, corrected carrier frequency, frame start, frequency error, gps info, scrambling code, hardware status and time offset(in ns) as output in json format.

This command does not wait for the current measurement to complete before returning results.

An example is as follows:

{
"FrequencyErrorStats": {
"Count": 185364,
"Deviation": 1.8153972412361203,
"DeviationUnits": "Hz",
"Max": 117.21477065686643,
"Mean": 110.26521356758234,
"Min": 107.69124579804725,
"Units": "Hz"
},
"anritsuHardwareStatus": {
"hardwareErrors": {
"ADCOverRange": 0
},
"statusMessage": "statusSyncDone",
"statusNumber": 10
},
"carrierId": 1,
"correctedCarrierFrequency": 1000000111.0165963,
"frameStart": 39828,
"frequencyError": 111.01659632196692,
"gps": {
"coordinates": "37.146585, -121.656618,128m",
"time": "Tue Jan 1 00:00:00 2024 GMT"
},
"pccpchAbsPower": -48.427171521027155,
"pccpchDeltaPower": -0.3524818420410156,
"pccpchRelPower": -11.313854217529297,
"pcpichEvm": 0.7005375027656555,
"pcpichPower": -48.074689327855744,
"pcpichRelativePower": -10.961372375488281,
"pichAbsPower": -56.04133975526693,

www.tehencom.com

"pichDeltaPower": -7.966650009155273,
"pichRelPower": -18.928022384643555,
"ppmFrequencyError": 0.1110165963219669,
"sccpchAbsPower": -55.5802791084507,
"sccpchDeltaPower": -7.505590438842773,
"sccpchRelPower": -18.466962814331055,
"scramblingCode": 0,
"scramblingCodeGroup": 0,
"timeOffset": 3753108.716643614,
"units": "DBM"
}

:SOURce:FREQuency[:CW|FIXed] <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SOURce:FREQuency[:CW|FIXed]?

Title: Source Continuous Wave Frequency

Description: Set or query Source output frequency in Fixed CW mode (in Hz).
Note: To enable CW output at a fixed frequency, send:
:OUTPut[:STATe] ON
:SOURce:MODe FIX

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1000000000 Hz

Default Unit: Hz

Range: 5000 Hz to 400000000000 Hz

:SOURce:FREQuency:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SOURce:FREQuency:OFFSet?

Title: Source Output Frequency Offset

Description: Set or query Source frequency offset in Offset Sweep mode. (in Hz)
Note: To enable offset output, send:
OUTPut[:STATe] ON
[:SOURce]:MODe OFFSet

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 0 Hz

Default Unit: Hz

Range: -400000000000 Hz to 400000000000 Hz

www.tehencom.com

:SOURce:MODe <SWEEp|OFFSet|FIXed|COUPled>
:SOURce:MODe?

Title: Source Output Mode

Description: Set or query source output mode:

Sweep (SWEE): generates a swept signal with an output frequency equal to the tuning frequency of the spectrum analyzer.

Offset (OFFS): generates a swept signal with an output frequency modified by a selected offset, relative to the tuning frequency of the spectrum analyzer.

Fixed (FIX): generates a CW signal with a fixed output frequency.

Coupled (COUP): generates a CW signal with an output frequency equal to the center frequency of the spectrum analyzer.

Note: This command does not enable source output. Refer to :OUTPut[:STATe]

Parameter(s): <SWEEp | OFFSet | FIXed | COUPled>

Query Return: SWEE | OFFS | FIX | COUP

Default Value: SWEEp

:SOURce:POWer:DISPlay:OFFSet <numeric_value> {DB}
:SOURce:POWer:DISPlay:OFFSet?

Title: Source Output Power Offset

Description: Set or query the Source Output Offset value or external gain/loss (in dB). Note that changing this value also causes the displayed output power to adjust with the new offset. For example, if the output power is set to –25 dBm, and if the External Gain/Loss is then set to 10 dB external gain, then the power limits will be adjusted by 10 dB, and the value of the output power that is displayed on the instrument will be adjusted to –15 dBm. The query returns a value from –100 to +100. A negative sign indicates external loss, and no sign indicates external gain.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: -100 dB to 100 dB

www.tehencom.com

:SOURce:POWer[:PORT][:LEVel][:IMMediate][:AMPLitude] <numeric_value> {<amplitude_units>}
:SOURce:POWer[:PORT][:LEVel][:IMMediate][:AMPLitude]?

Title: Source Output Power Level

Description: Set or query the Source Output Power Level (in dBm)
Query returns actual output power setting without regards to any external gain or loss setting.
Note: Returned value will not match displayed output power on the instrument if the source output offset external gain/loss setting is not 0 dB
See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -45 dBm to 10 dBm

www.tehencom.com

:STATus:OPERation[:EVENt]?

Title: Get Operation Status

Description: This command requests information about the current status of the instrument. Each bit of the return value represents some operation. Only a subset of the bits are implemented for each application. The number returned is the decimal representation of the bit-wise OR of the enabled bits:

Bit Decimal Value_Description

0 1 Not implemented

1 2 Not implemented

2 4 Not implemented

3 8 Not implemented

4 16 Not implemented

5 32 Not implemented

6 64 Not implemented

7 128 Not implemented

8 256 Sweep Complete

This bit is set to 0 when the command :INITiate[:IMMediate] is sent to trigger a sweep. It will have a value of 1 when the sweep has completed.

9 512 I/Q Capture

This bit indicates whether the instrument is currently capturing I/Q data. It is set to 1 when the MEAS:IQ:CAPT command is issued. This bit will be set to 0 when the capture is completed normally (in block mode), or is aborted, either due to the ABORt command or some other command which invalidates the capture.

10 1024 Not implemented

11 2048 Not implemented

12 4096 Not implemented

13 8192 Not implemented

14 16384 Not implemented

15 0 Will always be 0

:THReshold:SINR <numeric_value> {DB}
:THReshold:SINR?

Title: Sinr threshold

Description: Sets or queries SINR threshold for display. Values below the threshold will not be shown. This only affects the display and does not change the contents of any other measurement data SCPI queries.

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 6 dB

Default Unit: dB

Range: -50 dB to 50 dB

www.tehencom.com

:TRACe<n>:IQ:DATA? [<numeric_value>]

Title: IQ Data

Description: This command transfers IQ data from the instrument to the controller. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

For a detailed description of the response format, see TRACe:IQ:DATA:FORMat?.

If IQ:MODE? is STREAM, this command will block until the next block of streaming data is available, then return it.

If IQ:MODE? is SINGle, this command will return data immediately if a capture has been already completed, or it will wait for an in-progress capture to complete before returning data, or it will return #0 if a capture has never been started.

Regardless of capture mode, this command will return #0 if an error condition is encountered during an in-progress capture (see MEAS:IQ:CAPT). Clients should check the SCPI error queue with SYST:ERR:NEXT? to determine what action to take.

In streaming mode there is an optional numeric parameter for the max chunks of data to return for cases where the read can't keep up.

Note that once data is requested, all of it must be read on the controller side. The instrument will block further SCPI processing until each data transfer is complete. If a data transfer remains incomplete for long enough it could cause error messages to be displayed until either all of the data is read or the connection where the transfer is taking place is closed.

Parameter(s): [<numeric_value>]

TRACe Suffix Range: 0, Default = 0

:TRACe<n>:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal>
:TRACe<n>:DETector[:FUNCtion]?

Title: Trace Detector Type

Description: Sets the detection method for the specific trace. The detection type determines how the display point is derived from its associated measurements. POSitive Peak detection displays the maximum value of the associated measurements. RMS detection displays the average power of the associated measurements. NEGative Peak detection displays the minimum value of the associated measurements. SAMPle detection selects one of the associated measurement points to display. NORMal detection displays the maximum value, POSitive Peak, when the point is odd and minimum value, NEGative Peak, when the point is even. This command will be ignored when spectrogram is enabled by DISPlay:VIEW. In zero span and RTSA mode the SAMPle detection replaces RMS detection.

Parameter(s): <POSitive | RMS | NEGative | SAMPle | NORMal>

Query Return: POS | RMS | NEG | SAMP | NORM

TRACe Suffix Range: 1-6, Default = 1

Default Value: POSitive

www.tehencom.com

:TRACe<n>:DISPlay[:STATe] <0 | 1 | ON | OFF>
:TRACe<n>:DISPlay[:STATe]?

Title: Trace Display State

Description: The trace visibility state. If it is OFF, the :TRAC:DATA? command will return nan.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

TRACe Suffix Range: 1-6, Default = 1

Default Value: ON

:TRACe<n>:DISPlay:VIEW:SPECtrogram:ELAPsed?

Title: Spectrogram Elapsed

Description: Provides the index and time values for the specified trace based on which trace from the spectrogram history it represents.

TRACe Suffix Range: 1-6, Default = 1

:TRACe<n>:DISPlay:VIEW:SPECtrogram:POSition <numeric_value>
:TRACe<n>:DISPlay:VIEW:SPECtrogram:POSition?

Title: Spectrogram Trace Position

Description: The command sets the spectrogram history index that specific trace referencing to.

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-6, Default = 1

Default Value: 0

Range: 0 to 600

:TRACe<n>:DISPlay:VIEW:SPECtrogram:TIME <numeric_value>
:TRACe<n>:DISPlay:VIEW:SPECtrogram:TIME?

Title: Spectrogram Trace Time

Description: The command select the spectrogram history trace base on elapsed time from the newest trace.

Parameter(s): <numeric_value>

Query Return: Numeric (ms)

TRACe Suffix Range: 1-6, Default = 1

Default Value: 0 ms

Default Unit: ms

Range: 0 ms to 100000000 ms

www.tehencom.com

:TRACe<n>:NORMalize <0 | 1 | ON | OFF>
:TRACe<n>:NORMalize?

Title: Trace Normalization State

Description: Turns normalization on or off for the specified trace. When normalization is turned on, the last completed sweep will be stored and subtracted from the live data until normalization is turned off. This will cancel out whatever was on the trace at that time and result in the trace flattening and moving to 0 dBm.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

TRACe Suffix Range: 1-6, Default = 1

Default Value: OFF

:TRACe<n>:SWEep:COUNt[:CURRent]?

Title: Trace Sweep Count

Description: The trace sweep count returns current sweep count which can be useful for multiple-sweep measurements like average and min/max hold.

Query Return: Numeric

TRACe Suffix Range: 1-6, Default = 1

Default Value: 0

Range: 0 to 4000000000

www.tehencom.com

:TRACe<n>:TYPE
<NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH>
:TRACe<n>:TYPE?

Title: Trace Type

Description: Specifies how successive sweeps are combined to produce the resulting display value. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the type to MATH only applies to traces 5 and 6 The math operation performed is always a division of the linear powers (subtraction of the log values) of the traces no matter what units selected. For trace 5 the operation is trace1/trace2 (trace1 -trace2 in log units) For trace 6 the operation is trace2/trace1 (trace2 - trace1 in log units) This command will be ignored when spectrogram is enabled by DISPlay:VIEW.

Parameter(s):

<NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage | MATH>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV | MATH

TRACe Suffix Range: 1-6, Default = 1

Default Value: NORMal

:TRACe<n>:UPDate[:STATe] <0 | 1 | ON | OFF>
:TRACe<n>:UPDate[:STATe]?

Title: Trace Update State

Description: The trace update state detemine whether the trace is update in every sweep.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

TRACe Suffix Range: 1-6, Default = 1

Default Value: ON

:TRACe:CLEar <numeric_value>

Title: Trace Clear

Description: This command clears the trace's history and current sweep data. Trace history refers to the previous trace data used to calculate trace types such as min/max hold and averaging.

Parameter(s): <numeric_value>

www.tehencom.com

:TRACe:CLEar:ALL

Title: All Traces Clear

Description: This command clears the trace history and current sweep data for all traces. Trace history refers to the previous data used to calculate trace types such as min/max hold and averaging.

:TRACe[:DATA]? <numeric_value>

Title: Trace Data

Description: This command transfers trace data from the instrument to the controller. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

This command takes a single integer parameter specifying the trace number to transfer. If the parameter value is out of the range of valid trace numbers, the first trace (1) will be transferred. The binary block header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>.

The first character is the literal ascii hash '#' 043.

The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength.

The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

The format of the block data depends on the current data format setting (FORMat[:TRACe][:DATA]). The number of amplitudes returned is equal to the current number of display points (DISPlay:POINtcount).

The query command will return a #0 if data is invalid for the active trace.

Parameter(s): <numeric_value>

www.tehencom.com

:TRACe[:DATA]:ALL? [<ASCii|INTeger|REAL>],[<numeric_value>]

Title: Trace Data All

Description: This command transfers trace data from the instrument to the controller for all traces with display state ON (see Trace Display State commands).

The traces are returned back to back with no delimiter between traces using the the same IEEE definite length arbitrary block response of the Trace Data command.

However, after the usual header this command includes additional header information to support parsing the following data. This additional header consists of a two byte integer indicating the number of display points per trace as well as a two byte trace flags value.

The bits in the two byte trace flags value are mapped to a trace number and indicate whether that trace is included in the following data. Bit 0 is the least significant bit and is unused. Bits 1 through N are mapped to traces 1 through N. If the bit value is 1, the trace data for that trace is included in the following data. If the bit value is 0, the trace data for that trace is not included in the following data.

For example, a trace flags value of 0x4C indicates that trace data for traces 2, 3, and 6 are included in the following data. The traces are returned in increasing order. The format of the data follows the Trace Data Format setting.

An optional parameter can be given to set the format data output, the parameter follows the same enumerable value as the Trace Data format setting. When using REAL as the output format, the numeric value field is required. See the document on Trace Data Format (:FORMat[:TRACe][:DATA]) for more info.

Parameter(s): [<ASCii|INTeger|REAL>],[<numeric_value>]

www.tehencom.com

:TRACe:IQ:DATA:FORMat <PACKed>
:TRACe:IQ:DATA:FORMat?

Title: IQ Data Format

Description: This command selects the data format for transferring I/Q data via the TRACe:IQ:DATA? query.

Supported data formats include PACKed, which is a binary format that includes embedded timestamps, and ASCii, which is a human-readable, comma-delimited list of samples. The PACKed format is recommended for applications that require precision timestamps, high data throughput, and processing in real time, such as TDOA. The ASCii format can be much slower to transfer, but it has the advantage of being human readable.

When the data format is PACKed, TRAC:IQ:DATA? query uses SCPI standard (IEEE 488.2) definite length block data format for responses. The data format is '#AXD', where X is one or more ASCII digits specifying the number of bytes in D, and A is a single ASCII digit specifying the number of digits in X. D contains binary data. The whole 'D' part looks like 'L\nB', where L is an ASCII string of the form 'latitude, longitude' in decimal degrees, '\n' is a single byte newline delimiter marking the end of the GPS location component, and B is the I/Q data taken from the instrument's RAM. The binary structure of B includes timestamps embedded within the samples and is described in detail in the user guide of the instrument. For MS2090A, the format information can be found in chapter 7, section 3 (7-3 IQ Data Format) of the user guide. For MS2710XA, the format information can be found in Chapter 5, section 9 (5-9 I/Q Capture Block Mode) of the user guide. For MS2720XA, the format information can be found in chapter 6, section 3 (6-3 IQ Data Format) of the user guide. The values of the GPS latitude and longitude in the header are undefined if the GPS is not actually fixed (i.e. FETCH:GPS? returns "NO FIX").

<MS2710xA>

When the data format is ASCii, TRAC:IQ:DATA? query returns an definite length block data response in Comma Separated Values (CSV) Standard File Format, which is easily imported into popular spreadsheet programs:

* Each record is on one line

* Lines are separated by carriage return and line feed (CRLF)

* Fields are separated by commas

* Trailing and leading whitespace is insignificant

* No quotes, embedded commas, or embedded newlines in this output

The data format is '#AXD' where X is one or more ASCII digits specifying the number of bytes in D, and A is the number of digits in X. D contains a list of I/Q samples. Each of I and Q are formatted as signed decimal integers. Each I is separated from its corresponding Q by a comma. Adjacent samples are separated by newlines. So, the data (excluding the '#AX' header) looks like:

I1,Q1

I2,Q2

I3,Q3

...

The ASCii format response contains neither time stamp nor header. To get the GPS location, see the FETCh:GPS? query.

Parameter(s): <PACKed>

Query Return: PACK

www.tehencom.com

Default Value: PACKed

:TRACe:PLAYback <PLAY|STOP|PAUSe>
:TRACe:PLAYback?

Title: Trace Playback State

Description: This command sets or queries the Trace Playback state, which can be STARt, STOP, or PAUSe.

Parameter(s): <PLAY|STOP|PAUSe>

Query Return: PLAY|STOP|PAUS

Default Value: STOP

:TRACe:PLAYback:FILE?

Title: Current Playback File

Description: This command queries the currently loaded Trace Recording file's name used for trace playback, e.g. "RecordedSession_20210901T143210.786.fmrec"

Default Value: None

:TRACe:PLAYback:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRACe:PLAYback:INTerval?

Title: Trace Playback Interval

Description: This command sets or queries the playback interval rate at which trace recording are being played.

The interval rate can be set from 20 milliseconds up to 5 seconds.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1000 ms

Default Unit: ms

Range: 20 ms to 5000 ms

:TRACe:PLAYback:LOOP <0 | 1 | ON | OFF>
:TRACe:PLAYback:LOOP?

Title: Loop Playback

Description: This command sets or queries whether playback will restart at the beginning when it reaches the end of the playback file.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:TRACe:PLAYback:POSition?

Title: Playback Position

Description: This command supplies information related to the current position of a playback session. It returns the total number of traces in the session in addition to the index of the last played trace along with the timestamp value as the number of milliseconds since 1970-01-01T00:00:00.000 Coordinated Universal Time(UTC) describing when the trace was recorded. The geographical position properties hold the latitude and longitude in decimal degrees. A response might look like the following:

{

"traceCount":1500,

"trace":

{

"index":123,

"timestamp":1605311779428,

"latitude":37.146880,

"longitude":-121.656113

}

}

If there isn't an active playback session all values will be 0.

Default Value: {"index":0,"timestamp":0}

:TRACe:PLAYback:SEEK <numeric_value>
:TRACe:PLAYback:SEEK?

Title: Trace Playback Seek

Description: This command sets and queries the current position in a playback session. A playback session contains a list of recorded traces and the zero-based index used by this command represents the trace at that index in the list, where the trace at index 0 is the trace that was recorded first and the trace at the last index is the trace recorded last.

The set command takes an index which will be the index of the next played trace. The query command takes no parameters and returns the index of the last played trace.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 0

Range: 0 to 0

:TRACe:PLAYback:TAG <NEXT|PREVious|ADD|REMove|ALL>

Title: Trace Playback Tag

Description: This command skips to the next or previous tag in the playback, if one exists. It can also be used to add/remove tags in the current playback session, which will modify the session file so that the tags persist the next time it's played. The ALL option allows for only the tag traces to be played in the recording. The tag traces are only played in ascending order in which they were created.

Parameter(s): <NEXT|PREVious|ADD|REMove|ALL>

www.tehencom.com

:TRACe:PLAYback:TAGS? [<RECord|PLAYback>]

Title: Tag Info

Description: This command returns which traces are tagged in a record or playback session. The response is in JSON format. Each tag is represented as an index, timestamp and geographical position. The indices correspond to the position of the tagged trace in the full recorded history, the timestamp values are millseconds since 1970-01-01T00:00:00.000 Coordinated Universal Time(UTC) describing when the trace was recorded, and the geographical position properties hold the latitude and longitude in decimal degrees. The index values can be used as a parameter to the TRACe:PLAYback:SEEK command. A response might look like the following:

{

"tags":

[

{"index":3,"timestamp":1605310939565,"latitude":37.146880,"longitude":-121.656113},

{"index":75,"timestamp":1605311015834,"latitude":37.146880,"longitude":-121.656113}

]

}

If there is no playback or record session active, the response will be {"tags":[]} An optional parameter can be set to query the record or playback tag list.

Parameter(s): [<RECord|PLAYback>]

Default Value: {"tags":[]}

:TRACe:PLAYback:TAG:TABLe <0 | 1 | ON | OFF>
:TRACe:PLAYback:TAG:TABLe?

Title: Playback Table

Description: Frontend command to indicate tag table on/off

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:TRACe:PRESet:ALL

Title: Preset All Trace

Description: This command preset all traces which turn Traces 2-6 off and set Trace 1 to Clear/Write, Active, Peak Detector.

:TRACe:RECord <RECord|STOP|PAUSe>
:TRACe:RECord?

Title: Trace Recording State

Description: This command sets or queries the Trace Recording state, which can be RECord, STOP, or PAUSe.

Parameter(s): <RECord|STOP|PAUSe>

Query Return: REC|STOP|PAUS

Default Value: STOP

www.tehencom.com

:TRACe:RECord:CSV:LINK <RECord|PLAYback|OFF>
:TRACe:RECord:CSV:LINK?

Title: Enable CSV Recording during Trace Record or Trace Playback

Description: This command sets or queries whether Trace Recording in CSV is linked to the Trace Record or Trace Playback states,

which can be RECord, PLAYback or OFF.

RECord:

Recording CSV State (TRACe:RECord:CSV:STATe) will be updated base on Trace Record State (TRACe:RECord) changes as following

Record State: Record CSV State:

RECord RECord

PAUSe PAUSe

STOP STOP

PLAYback:

Recording CSV State will be updated base on on Trace Playback State (TRACe:PLAYback) changes as following

Playback State: Record CSV State:

PLAY RECord

PAUSe PAUSe

STOP STOP

OFF:

Recording CSV State remain unaffected by Trace Record State or Trace Playback State changes.

Parameter(s): <RECord | PLAYback | OFF>

Query Return: REC | PLAY | OFF

Default Value: OFF

:TRACe:RECord:CSV:STATe <RECord|STOP|PAUSe>
:TRACe:RECord:CSV:STATe?

Title: Trace Recording CSV State

Description: This command sets or queries whether Trace Recording will also write a CSV of the recorded data, which can be RECord, STOP, or PAUSe.

Parameter(s): <RECord | STOP | PAUSe>

Query Return: REC | STOP | PAUS

Default Value: STOP

www.tehencom.com

:TRACe:RECord:INTerval:MODE <AUTO|MANual>
:TRACe:RECord:INTerval:MODE?

Title: Trace Recording Interval Mode

Description: This command sets or queries whether Trace Recording will AUTomatically record each trace or use MANual intervals.

Parameter(s): <AUTO|MANual>

Query Return: AUTO|MAN

Default Value: AUTO

:TRACe:RECord:INTerval:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRACe:RECord:INTerval:TIME?

Title: Trace Recording Interval Time

Description: This command sets or queries the interval length for use with manual interval mode Trace Recording.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 10000 ms

Default Unit: ms

Range: 20 ms to 3600000 ms

:TRACe:RECord:LINK <0 | 1 | ON | OFF>
:TRACe:RECord:LINK?

Title: Enable Recording Link Playback

Description: This command sets or queries whether a Trace Recording is linked to Trace Playback states. Recording State will be updated base on on Trace Playback State (TRACe:PLAYback) changes as following

Playback State: Record State:

PLAY RECord

PAUSe STOP

STOP STOP

For example, this can be used to capture tag traces (TRACe:PLAYback:TAG) or normal traces from one file to a new recording file.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:TRACe:RECord:MODE <AUTO|TIMed>
:TRACe:RECord:MODE?

Title: Trace Recording Mode

Description: This command sets or queries the Trace Recording mode, AUTO or TIMed. AUTO mode means recording will continue indefinitely. TIMed mode means recording will last for the specified recording time set by the Trace Recording Time setting.

Parameter(s): <AUTO | TIMed>

Query Return: AUTO | TIM

Default Value: AUTO

:TRACe:RECord:TAG

Title: Trace Recording Add Tag

Description: This command adds a tag to the current trace as it is being recorded or played.

:TRACe:RECord:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRACe:RECord:TIME?

Title: Trace Recording Time

Description: This command sets or queries the amount of time to record for if the Trace Recording mode is TIMed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 20000 ms

Default Unit: ms

Range: 1000 ms to 1000000000 ms

:TRACe:SELect <numeric_value>
:TRACe:SELect?

Title: Select Trace

Description: The selected trace will be used by operations that use a single trace. The max number of traces available to select is model specific.

To display the trace, see TRACe<n>:DISPlay[:STATe]

To update the trace state, see TRACe<n>:UPDate[:STATe]

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 1

Range: 1 to 6

www.tehencom.com

:TRACe:SPECtrogram:DETector[:FUNCtion]
<POSitive|RMS|NEGative|SAMPle|NORMal>
:TRACe:SPECtrogram:DETector[:FUNCtion]?

Title: Spectrogram Detector Type

Description: Sets the detection method for the spectrogram trace. The detection type determines how the display point is derived from its associated measurements. POSitive Peak detection displays the maximum value of the associated measurements. RMS detection displays the average power of the associated measurements. NEGative Peak detection displays the minimum value of the associated measurements. NORMal detection displays the maximum value, POSitive Peak, when the point is odd and minimum value, NEGative Peak, when the point is even. SAMPle detection selects one of the associated measurement points to display. This command will be ignored when spectrogram is disabled by DISPlay:VIEW. In RTSA mode the SAMPle detection replaces RMS detection.

Parameter(s): <POSitive | RMS | NEGative | SAMPle | NORMal>

Query Return: POS | RMS | NEG | SAMP | NORM

Default Value: POSitive

:TRACe:SPECtrogram:TYPE
<NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage>
:TRACe:SPECtrogram:TYPE?

Title: Spectrogram Trace Type

Description: Specifies how successive sweeps are combined to produce the resulting display value. Setting the TYPE to NORMal will cause the displayed value for a point to be the current measured value for that point. Setting the TYPE to AVERage will cause the displayed value for a point to be the average of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. Setting the TYPE to MAXimum will cause the displayed value for a point is the maximum measured value for that point over sweeps. Setting the TYPE to MINimum will cause the displayed value for a point is the minimum measured value for that point over sweeps.Setting the TYPE to RMAXimum will cause the displayed value for a point to be the maximum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt.Setting the TYPE to RMINimum will cause the displayed value for a point to be the minimum of the last <integer> measured values where <integer> is set by [:SENSe]:AVERage:COUNt. This command will be ignored when spectrogram is disabled by DISPlay:VIEW.

Parameter(s): <NORMal | MINimum | MAXimum | AVERage | RMAXimum | RMINimum | RAVerage>

Query Return: NORM | MIN | MAX | AVER | RMAX | RMIN | RAV

Default Value: NORMal

www.tehencom.com

:TRACe:STATus? <numeric_value>

Title: Trace Status

Description: This command returns a response of the same format as a valid TRACe[:DATA] response, except that instead of amplitude, each comma-delimited value is a decimal integer representing the bitwise-OR of one or more status bits. Each bit of the integer is set according to the table below to indicate that the corresponding trace point has the indicated status:

OkStatus = 0x0

ADCOverrange = 0x1

Saturation = 0x2

SLOLockFailure = 0x4

LO1LockFailure = 0x8

LO2LockFailure = 0x10

TGLOLockFailure = 0x20

LimitFailure = 0x40

OverpowerFailure = 0x1000

DeviceAccessFailure = 0x10000 Failed to communicate with the device.

EPROMFailure = 0x20000 Failed to access device EEPROM.

DataTransIrregular = 0x40000 Data transfer irregular.

NoCalibration = 0x80000 Data is not calibrated.

TGRefLockFailure = 0x100000 TG REF lock Failure

TGRfLockFailure = 0x200000 TG RF lock Failure

AlcUnlevelLow = 0x400000 ALC Unleveled Low

AlcUnlevelHigh = 0x800000 ALC Unleveled High

Parameter(s): <numeric_value>

:TRIGger:GATE:SLOPe <POSitive|NEGative>
:TRIGger:GATE:SLOPe?

Title: Gated Sweep Trigger Slope

Description: The gate trigger slope indicates whether the trigger point is on the rising or the falling edge of the external trigger signal.

Parameter(s): <POSitive | NEGative>

Query Return: POS | NEG

Default Value: POSitive

www.tehencom.com

:TRIGger[:SEQuence]:ATRigger <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRIGger[:SEQuence]:ATRigger?

Title: Trigger Auto Period

Description: The trigger auto period is the amount of time that must pass without an trigger event before a measurement is triggered automatically.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 1000 ms

Default Unit: ms

Range: 0.001 ms to 5000 ms

:TRIGger[:SEQuence]:ATRigger:STATe <0 | 1 | ON | OFF>
:TRIGger[:SEQuence]:ATRigger:STATe?

Title: Trigger Auto State

Description: The trigger auto state indicates whether or not a measurement should be triggered automatically after the Trigger Auto Period elapses.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:TRIGger[:SEQuence]:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRIGger[:SEQuence]:DELay?

Title: Trigger Delay

Description: The trigger delay is the amount of time between when an external trigger event happens and when the measurement starts.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: -1000 ms to 1670 ms

:TRIGger[:SEQuence]:DELay:STATe <0 | 1 | ON | OFF>
:TRIGger[:SEQuence]:DELay:STATe?

Title: Trigger Delay State

Description: The trigger delay state turns trigger delay on/off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:TRIGger[:SEQuence]:HOLDoff <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRIGger[:SEQuence]:HOLDoff?

Title: Trigger Holdoff

Description: The trigger holdoff is the amount of time between when a measurement ends and when to start looking for the next external trigger event.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (ms)

Default Value: 0 ms

Default Unit: ms

Range: 0 ms to 5000 ms

:TRIGger[:SEQuence]:HOLDoff:STATe <0 | 1 | ON | OFF>
:TRIGger[:SEQuence]:HOLDoff:STATe?

Title: Trigger Holdoff State

Description: The trigger holdoff state turns trigger holdoff on/off.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:TRIGger[:SEQuence]:SLOPe <POSitive|NEGative>
:TRIGger[:SEQuence]:SLOPe?

Title: Trigger Slope

Description: The trigger slope indicates whether the trigger point is on the rising or the falling edge of the external trigger signal.

Parameter(s): <POSitive|NEGative>

Query Return: POS|NEG

Default Value: POSitive

:TRIGger[:SEQuence]:SOURce <EXT|IMMediate|VIDeo>
:TRIGger[:SEQuence]:SOURce?

Title: Trigger Source

Description: The trigger source indicates whether or not to look for a trigger condition before making measurements.

IMMediate trigger source means that sweeps will be triggered without looking for a trigger event (free-run). VIDeo trigger is only valid for zero span and IQ capture. Video trigger is not supported for IQ streaming. External trigger options with a suffix number in them are only available on instruments with more than one trigger port and in this case omitting the number will be the same as using EXT1. For products that support trigger port direction settings, the ports will only be available as trigger sources if the trigger direction for that port is set to IN.

Parameter(s): <EXT|IMMediate|VIDeo>

Query Return: EXT|IMM|VID

Default Value: IMMediate

www.tehencom.com

:TRIGger[:SEQuence]:VIDeo:HYSTeresis <numeric_value> {DB}
:TRIGger[:SEQuence]:VIDeo:HYSTeresis?

Title: Trigger Video Hysteresis

Description: A relative amplitude value in dBm centered around the video trigger level which the input signal must cross for a trigger event to occur when trigger source is set to video (TRIG:SOUR VID).

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 200 dB

:TRIGger[:SEQuence]:VIDeo:LEVel <numeric_value> {<amplitude_units>}
:TRIGger[:SEQuence]:VIDeo:LEVel?

Title: Trigger Video Level

Description: The amplitude value which the input signal must cross for a trigger event to occur when trigger source is video (TRIG:SOUR VID).

See UNIT:POWer to query or set the current amplitude units.

Parameter(s): <numeric_value> {<amplitude_units>}

Query Return: Numeric (<amplitude_units>)

Default Value: 0 dBm

Default Unit: dBm

Range: -150 dBm to 30 dBm

:UNIT:CHPower:PSDensity <HZ|MHZ>
:UNIT:CHPower:PSDensity?

Title: Power Spectral Density Units

Description: Sets the power spectral density units to the current amplitude per either Hz or MHz. For example, if the current amplitude unit is dBm, then Hz would refer to dBm/Hz, and MHZ would be refer to dBm/MHz.

Parameters DBMHz and DBMMHz have been deprecated, but are still accepted values.

Parameter(s): <HZ|MHZ>

Query Return: HZ|MHZ

Default Value: HZ

www.tehencom.com

:UNIT:POWer
<DBM|DBM/M2|DBW|DBW/M2|DBV|DBV/M|DBMV|DBMV/M|DBUV|DBUV/M|DBA|DBA/M|V|V/M|A|A/M|W|W/M2|W/CM2>
:UNIT:POWer?

Title: Measurement Units

Description: Sets the default amplitude units for input, output and display.

<MS2090A/MS2080A/MS2070A>

The following units are only available when Field Strength is ON: DBM/M2, DBW/M2, DBV/M, DBMV/M, DBUV/M, DBA/M, V/M, A/M, W/M2, W/CM2

To query or set the Field Strength state, use [:SENSe]:FSTRength:STATe

Parameter(s):

<DBM | DBM/M2 | DBW | DBW/M2 | DBV | DBV/M | DBMV | DBMV/M | DBUV | DBUV/M | DBA | DBA/M | V | V/M | A | A/M | W | W/M2 | W/CM2>

Query Return:

DBM | DBM/M2 | DBW | DBW/M2 | DBV | DBV/M | DBMV | DBMV/M | DBUV | DBUV/M | DBA | DBA/M | V | V/M | A | A/M | W | W/M2 | W/CM2

Default Value: DBM

:UNIT:POWer
<DBM|DBM/M2|DBW|DBW/M2|DBV|DBV/M|DBMV|DBMV/M|DBUV|DBUV/M|DBA|DBA/M|V|V/M|A|A/M|W|W/M2|W/CM2>
:UNIT:POWer?

Title: Measurement Units

Description: Sets the default amplitude units for input, output and display.

<MS2090A/MS2080A/MS2070A>

The following units are only available when Field Strength is ON: DBM/M2, DBW/M2, DBV/M, DBMV/M, DBUV/M, DBA/M, V/M, A/M, W/M2, W/CM2

To query or set the Field Strength state, use [:SENSe]:FSTRength:STATe

Parameter(s):

<DBM | DBM/M2 | DBW | DBW/M2 | DBV | DBV/M | DBMV | DBMV/M | DBUV | DBUV/M | DBA | DBA/M | V | V/M | A | A/M | W | W/M2 | W/CM2>

Query Return:

DBM | DBM/M2 | DBW | DBW/M2 | DBV | DBV/M | DBMV | DBMV/M | DBUV | DBUV/M | DBA | DBA/M | V | V/M | A | A/M | W | W/M2 | W/CM2

Default Value: DBM

www.tehencom.com

2-4 High Accuracy Power Meter Commands

:CALCulate:FORWard:LIMit:LOWer <numeric_value> {DBM}
:CALCulate:FORWard:LIMit:LOWer?

Title: Forward Measurement Lower Limit Value

Description: This command is for in-line power sensor only. It sets or queries the lower limit value of the current forward measurement (e.g. FAVG). To change the lower limit value for different measurement mode, change the forward measurement mode first. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, :CALCulate{[1]}:FORWard:LIMit:LOWer:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:FORWard:LIMit:LOWer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: -50 dBm

Default Unit: dBm

Range: -100 dBm to 65 dBm

:CALCulate:FORWard:LIMit:LOWer:FAIL?

Title: Forward Measurement Lower Limit Check Fail

Description: This command is for in-line power sensor only. It queries the pass/fail result of the limit check for the current forward measurement. Returns 1 when lower limit check failed, otherwise return a 0 when lower limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:FORWard:LIMit:LOWer:PERCent <percent_value>
:CALCulate:FORWard:LIMit:LOWer:PERCent?

Title: Forward Lower Limit Value In Percent

Description: This command is for in-line power sensors only. It sets or queries the lower limit in percent of the current forward measurement. If limit state is on (See command :CALCulate{[1]:LIMit:STATe), a failure will be reported when the power reading is smaller than the lower limit value.\ Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:UPPer:PERCent instead).

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 0

Range: 0% to 99000%

www.tehencom.com

:CALCulate:FORWard:LIMit:UPPer <numeric_value> {DBM}
:CALCulate:FORWard:LIMit:UPPer?

Title: Forward Measurement Upper Limit Value

Description: This command is for in-line power sensor only. It sets or queries the upper limit value of the current forward measurement(e.g. FAVG). To change the upper limit value for different measurement mode, change the forward measurement mode first. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, :CALCulate{[1]}:FORWard:LIMit:UPPer:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:FORWard:LIMit:UPPer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: 10 dBm

Default Unit: dBm

Range: -100 dBm to 65 dBm

:CALCulate:FORWard:LIMit:UPPer:FAIL?

Title: Forward Measurement Upper Limit Check Fail

Description: This command is for in-line power sensor only. It queries the pass/fail result of the limit check for the current forward measurement. Returns 1 when upper limit check failed, otherwise return a 0 when upper limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:FORWard:LIMit:UPPer:PERCent <percent_value>
:CALCulate:FORWard:LIMit:UPPer:PERCent?

Title: Forward Upper Limit Value In Percent

Description: This command is for in-line power sensors only. It sets or queries the upper limit in percent of the current forward measurement. If limit state is on (See command :CALCulate{[1]:LIMit:STATe), a failure will be reported when the power reading is greater than the upper limit value. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:UPPer:PERCent instead).

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 100

Range: 1% to 100000%

www.tehencom.com

:CALCulate:FORWard:RELative:STATe <0 | 1 | ON | OFF>
:CALCulate:FORWard:RELative:STATe?

Title: Forward Relative Power State

Description: This command enables or disables the forward relative power level. When Relative is turned on, power readings are made relative to the power value that was measured at the time Relative is turned on.

The forward relative power state will turn off automatically when forward measurement mode is changed.

When measurement mode is CCDF or CREST, turning on relative is not allowed.

This command can only be used with inline power sensors.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:ALARm:STATe <0 | 1 | ON | OFF>
:CALCulate:LIMit:ALARm:STATe?

Title: Limit Alarm State

Description: This command sets or queries the limit alarm state to ON or OFF. When limit state is on (See command :CALCulate{[1]}:LIMit:STATe) and limit alarm is on, the instrument beeps on every limit checking failure.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:LOWer <numeric_value> {DBM}
:CALCulate:LIMit:LOWer?

Title: Lower Limit Value

Description: This command sets or queries the lower limit value of the meter. If limit state is on (See command :CALCulate{[1]}:LIMit:STATe) when the power reading is less than the lower limit value, CALCulate[1]:LIMit:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:LOWer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: -50 dBm

Default Unit: dBm

Range: -100 dBm to 20 dBm

www.tehencom.com

:CALCulate:LIMit:LOWer:FAIL?

Title: Lower Limit Check Fail

Description: This command queries if the lower limit checking failed. Returns 1 when lower limit check failed, otherwise return a 0 when lower limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:LOWer:PERCent <percent_value>
:CALCulate:LIMit:LOWer:PERCent?

Title: Lower Limit Value In Percent

Description: This command sets or queries the lower limit value of the meter in percent. Note that the limit checking will be using the limit value in percent if relative is on and unit is set to Watts.

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 0

Range: 0% to 99000%

:CALCulate:LIMit:STATe <0 | 1 | ON | OFF>
:CALCulate:LIMit:STATe?

Title: Limit State

Description: This command sets or queries the limit state to ON or OFF. Setting the limit state to ON or 1 turns on limit checking. Setting the limit state to OFF or 0 turns off limit checking.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:UPPer <numeric_value> {DBM}
:CALCulate:LIMit:UPPer?

Title: Upper Limit Value

Description: This command sets or queries the upper limit value of the meter. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, CALCulate[1]:LIMit:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:UPPer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: 10 dBm

Default Unit: dBm

Range: -100 dBm to 20 dBm

www.tehencom.com

:CALCulate:LIMit:UPPer:FAIL?

Title: Upper Limit Check Fail

Description: This command queries if the upper limit checking failed. Returns 1 when upper limit check failed, otherwise return a 0 when upper limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:LIMit:UPPer:PERCent <percent_value>
:CALCulate:LIMit:UPPer:PERCent?

Title: Upper Limit Value In Percent

Description: This command sets or queries the upper limit value of the meter in percent. Note that the limit checking will be using the limit value in percent if relative is on and unit is set to Watts.

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 100

Range: 1% to 100000%

:CALCulate:MAXHold:STATe <0 | 1 | ON | OFF>
:CALCulate:MAXHold:STATe?

Title: Max Hold State

Description: This command turns on or off max hold. When max hold is turned on, the maximum power reading is stored and only updated if a new measurement of higher power is made. If averaging is on, max hold displays the maximum value of the non-averaged data. See command :SENSe{[1]}:MAXHold:DATA? to retrieve the max hold data.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALCulate:RELative:STATe <0 | 1 | ON | OFF>
:CALCulate:RELative:STATe?

Title: Relative Power State

Description: This command enables or disables the relative power level. When Relative is turned on, power readings are made relative to the power value that was measured at the time Relative is turned on.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:CALCulate:REVerse:LIMit:LOWer <numeric_value> {DBM}
:CALCulate:REVerse:LIMit:LOWer?

Title: Reverse Measurement Lower Limit Value

Description: This command is for in-line power sensors only. It sets or queries the lower limit of the current reverse measurement(e.g. RAVG). To change the lower limit value for different measurement mode, change the reverse measurement mode first. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, :CALCulate{[1]}:REVerse:LIMit:LOWer:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:REVerse:LIMit:LOWer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: -50 dBm

Default Unit: dBm

Range: -100 dBm to 65 dBm

:CALCulate:REVerse:LIMit:LOWer:FAIL?

Title: Reverse Measurement Lower Limit Check Fail

Description: This command is for in-line power sensor only. It queries if the lower limit checking of the current reverse measurement failed. Returns 1 when lower limit check failed, otherwise return a 0 when lower limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:REVerse:LIMit:LOWer:PERCent <percent_value>
:CALCulate:REVerse:LIMit:LOWer:PERCent?

Title: Reverse Lower Limit Value In Percent

Description: This command is for in-line power sensors only. It sets or queries the lower limit in percent of the current reverse measurement. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, CALCulate[1]:LIMit:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:UPPer:PERCent instead).

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 0

Range: 0% to 99000%

www.tehencom.com

:CALCulate:REVerse:LIMit:UPPer <numeric_value> {DBM}
:CALCulate:REVerse:LIMit:UPPer?

Title: Reverse Measurement Upper Limit Value

Description: This command is for in-line power sensors only. It sets or queries the upper limit of the current reverse measurement (e.g. RAVG). To change the upper limit value for different measurement mode, change the reverse measurement mode first. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, :CALCulate{[1]}:REVerse:LIMit:UPPer:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:REVerse:LIMit:UPPer:PERCent instead).

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: 10 dBm

Default Unit: dBm

Range: -100 dBm to 65 dBm

:CALCulate:REVerse:LIMit:UPPer:FAIL?

Title: Reverse Measurement Upper Limit Check Fail

Description: This command is for in-line power sensor only. It queries if the upper limit checking of the current reverse measurement failed. Returns 1 when upper limit check failed, otherwise return a 0 when upper limit check passed.

Query Return: 0 | 1

Default Value: OFF

:CALCulate:REVerse:LIMit:UPPer:PERCent <percent_value>
:CALCulate:REVerse:LIMit:UPPer:PERCent?

Title: Reverse Upper Limit Value In Percent

Description: This command is for in-line power sensors only. It sets or queries the upper limit in percent of the current reverse measurement. If limit state is on (See command :CALCulate{[1]:LIMit:STATe) when the power reading is greater than the upper limit value, CALCulate[1]:LIMit:FAIL? will report a failure. Note that this command is not valid when relative is on and measurement unit is set to WATT (use the command :CALCulate{[1]}:LIMit:UPPer:PERCent instead).

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 100

Range: 1% to 100000%

www.tehencom.com

:CALCulate:REVerse:RELative:STATe <0 | 1 | ON | OFF>
:CALCulate:REVerse:RELative:STATe?

Title: Reverse Relative Power State

Description: This command enables or disables the reverse relative power level. When Relative is turned on, power readings are made relative to the power value that was measured at the time Relative is turned on.

The reverse relative power state will turn off automatically when reverse measurement mode is changed

This command applies only to AVG mode.

This command can only be used with inline power sensors.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:CALibration:ZERO

Title: Zeroing Sensor

Description: This command performs zeroing of the sensor. This improves low level measurement accuracy by removing measured system noise. Remove any RF input signal before zeroing is recommended. Zeroing sensor will reset the max hold.

:DISPlay:WINDow[:SCALe]:MAXimum <numeric_value> {DBM}
:DISPlay:WINDow[:SCALe]:MAXimum?

Title: Display Max

Description: This command sets or queries the maximum scale value of the meter display. Note that this command is not valid when relative is on and measurement unit is set to WATT.

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: 10 dBm

Default Unit: dBm

Range: -100 dBm to 20 dBm

:DISPlay:WINDow[:SCALe]:MAXimum:PERCent <percent_value>
:DISPlay:WINDow[:SCALe]:MAXimum:PERCent?

Title: Display Max In Percent

Description: This command sets or queries the maximum scale value of the meter display in percent when relative is on and unit is set to Watts.

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 100

Range: 1% to 100000%

www.tehencom.com

:DISPlay:WINDow[:SCALe]:MINimum <numeric_value> {DBM}
:DISPlay:WINDow[:SCALe]:MINimum?

Title: Display Min

Description: This command sets or queries the minimum scale value of the meter display. Note that this command is not valid when relative is on and measurement unit is set to WATT.

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

Default Value: -70 dBm

Default Unit: dBm

Range: -100 dBm to 20 dBm

:DISPlay:WINDow[:SCALe]:MINimum:PERCent <percent_value>
:DISPlay:WINDow[:SCALe]:MINimum:PERCent?

Title: Display Min In Percent

Description: This command sets or queries the minimum scale value of the meter display in percent when relative is on and unit is set to Watts.

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 0

Range: 0% to 99000%

:MMEMory:STORe:FDATa:CSV <string>,<string>

Title: Save formatted data to csv file

Description: This command saves the formatted data to csv file in specified file location. The file location is resolved using the MSUS and file path parameters. These parameters are case sensitive.

Parameters:

1. File path: The file path (including file name) relative to the MSUS root directory. File extension should not be specified.

2. MSUS: Device to save the file on. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices.

Parameter(s): <string>,<string>

www.tehencom.com

:SENSe:APERture <numeric_value>
:SENSe:APERture?

Title: Power Aperture Value

Description: This command sets or queries the power sensor aperture value. The aperture min/max values will vary depending on the sensor model. Note: This command is not available for the MA24106A sensor. Use the aperture mode command instead.

MA241xxA series: 0.01ms to 300ms

MA242x8A series: 0.01ms to 1000ms

MA243x0A series: 0.01ms to 1000ms

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 1

Range: 0.01 to 1000

:SENSe:APERture:MODE <HAT|LAT>
:SENSe:APERture:MODE?

Title: Aperture Mode

Description: This command sets or queries the aperture mode for MA24106A. MA24106A has Low Aperture Time(LAT) for fast reading or High Aperture Time (HAT) for more accurate readings.

Parameter(s): <HAT | LAT>

Query Return: HAT | LAT

Default Value: LAT

:SENSe:AVERage:COUNt <numeric_value>
:SENSe:AVERage:COUNt?

Title: Averaging Count

Description: This command sets or queries the number of measurements to be averaged in a rolling average.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 1

Range: 1 to 100

:SENSe:AVERage:SWEep?

Title: Averaging Sweep Count

Description: This command queries the number of sweep averages that have taken place.

Query Return: Numeric

Default Value: 1

Range: 1 to 100

www.tehencom.com

:SENSe:CCDFthreshold <numeric_value>
:SENSe:CCDFthreshold?

Title: CCDF Threshold

Description: This command sets or queries the CCDF Threshold from a minimum of 3.0 DBM to 54.77 DBM.

This command can only be used with inline power sensors.

Parameter(s): <numeric_value>

Query Return: Numeric

Default Value: 3

Range: 3 to 54.77

:SENSe:CORRection:EXTernal:GAIN <numeric_value> {DB}
:SENSe:CORRection:EXTernal:GAIN?

Title: External Gain

Description: This command sets or queries for the external gain. Changes to the external gain will update the display min and max values and limit upper and lower values.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 100 dB

:SENSe:CORRection:EXTernal:LOSS <numeric_value> {DB}
:SENSe:CORRection:EXTernal:LOSS?

Title: External Loss

Description: This command sets or queries for the external loss. Changes to the external loss will update the display min and max values and limit upper and lower values.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

Default Value: 0 dB

Default Unit: dB

Range: 0 dB to 100 dB

www.tehencom.com

:SENSe:DUTYcycle <percent_value>
:SENSe:DUTYcycle?

Title: Duty Cycle

Description: This command sets or queries the duty cycle from 0.1% up to 100%.

This command can only be used with inline power sensors and when forward measurement mode is set to Burst Average Manual.

Parameter(s): <percent_value>

Query Return: Percent

Default Value: 100

Range: 0.1% to 100%

:SENSe:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe:FREQuency?

Title: Frequency

Description: This command sets or queries the frequency. Note that the frequency range are sensor dependent.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

Default Value: 1000000000 Hz

Default Unit: Hz

Range: 10000 Hz to 40000000000 Hz

:SENSe:FREQuency:SSTandard:CATalog?

Title: Frequency Signal Standard Catalog Query

Description: This command returns a list of available signal standards separated by commas. Example of the return is None, P-GSM 900 - Uplink,P-GSM 900 - Downlink,DCS 1800 - Uplink,DCS 1800 - Downlink\

:SENSe:FREQuency:SSTandard:NAME <string>
:SENSe:FREQuency:SSTandard:NAME?

Title: Frequency Signal Standard

Description: This command sets or queries the frequency signal standard. The <string> argument is the name of the desired signal standard. For example, if the desired Signal Standard is P-GSM 900 - Uplink then the value of the <string> argument would be "P-GSM 900 - Uplink"

Parameter(s): <string>

Default Value: None

www.tehencom.com

:SENSe:MAXHold:DATA?

Title: Max Hold Power Reading

Description: This command returns the max power level readings when max hold is set to on. The query response is a JSON (http://json.org/) string of property object : {key : value} pairs. On error, the response is an empty JSON object {}. The data will return in the following format:

{ "powerInLog": {"units" : string, "value" : number}, "powerInLin": {"units" : string, "value" : number}, } When relative is turned on, data are returned in unit of dB and percent. When relative is turned off data are returned in unit of dBm and milliwatts. Note that changing any setting resets the max hold.

Default Value: {}

:SENSe:MODType <NONE|GSM|SINGle|MULT|ISDB|CDMA>
:SENSe:MODType?

Title: Modulation Type

Description: This command sets or queries the modulation type.

Set the available modulation types with the enums on the left hand side:

{ NONE - None,

GSM - GSM GPRS EDGE,

SINGle - WCDMA HSPA single carrier,

MULT - WCDMA HSPA multi carrier,

ISDB - ISDB T,

CDMA - CDMA IS95 2000 EVDO

}

This command can only be used with inline power sensors.

Parameter(s): <NONE | GSM | SINGle | MULT | ISDB | CDMA>

Query Return: NONE | GSM | SING | MULT | ISDB | CDMA

Default Value: NONE

:SENSe:POWer:DATA?

Title: Power Reading

Description: This command returns the power level readings. The query response is a JSON (http://json.org/) string of property object : {key : value} pairs. On error, the response is an empty JSON object {}. The data will return in the following format:

{ "powerInLog": {"units" : string, "value" : number}, "powerInLin": {"units" : string, "value" : number}, } When relative is turned on, data are returned in unit of dB and percent. When relative is turned off data are returned in unit of dBm and milliwatts.

www.tehencom.com

:SENSe:POWer:FORWard <FAVG|CRESt|BAM|PEAK|BAA|CCDF>

:SENSe:POWer:FORWard?

Title: Forward Measurement Mode

Description: This command sets or queries the forward measurement mode for inline power sensors (MA24103A, MA24105A).

Available forward modes are::

{ FAVG - Forward Average Power,

CRES - Crest Average Power,

BAM - Burst Average Manual,

PEAK - Peak Envelope Power,

BAA - Burst Average Auto,

CCDF - Complementary Cumulative Distribution Function

}

This command can only be used with inline power sensors.

Parameter(s): <FAVG | CRESt | BAM | PEAK | BAA | CCDF>

Query Return: FAVG | CRES | BAM | PEAK | BAA | CCDF

Default Value: FAVG

www.tehencom.com

:SENSe:POWer:INLine:DATA?

Title: Inline Power Reading

Description: This command returns the inline power level readings or other values specified by the forward and reverse measurement modes and the summary state. The query response is a JSON (http://json.org/) string of property object : {key : value} pairs. On error, the response is an empty JSON object {}. The data will return in the following format:

{ "forward": {

"ForwardPowerInLin": {

"units": "mW",

"value": "1067.09"

},

"ForwardPowerInLog": {

"units": "dBm",

"value": "10.28"

},

"mode": "FAVG"

},

"reverse": {

"ReversePowerInLin": {

"units": "mW",

"value": "137.03"

},

"ReversePowerInLog": {

"units": "dBm",

"value": "1.37"

},

"mode": "RAVG"

}

} When relative is turned on, data are returned in unit of dB and percent. When relative is turned off data are returned in unit of dBm and milliwatts.

This command can only be used with inline power sensors.

When summary state is on data will return in the following format. It overrides the selections of the forward and reverse measurement modes:

{ "Summary": {

"BAA": {

"units": "mW",

"value": "0.00"

},

"BAM": {

"units": "mW",

www.tehencom.com

"value": "3.15"
},
"CCDF": {
"units": "%",
"value": "0.00"
},
"CRES": {
"units": "dB",
"value": "15.79"
},
"FAVG": {
"units": "dBm",
"value": "3.15"
},
"PEAK": {
"units": "dBm",
"value": "18.93"
},
"RAVG": {
"units": "dBm",
"value": "0.90"
},
"REFL": {
"units": "",
"value": "0.77"
},
"RLOS": {
"units": "dB",
"value": "2.25"
},
"VSWR": {
"units": "",
"value": "7.78"
}
}

} More example output: When forward mode set to FWD and reverse mode set to VSWR, the data will return in the following format: { "forward": {

"ForwardPowerInLin": {
"units": "mW",
"value": "2786.12"

www.tehencom.com

},

"ForwardPowerInLog": {

"units": "dBm",

"value": "14.45"

},

"mode": "AVG"

},

"reverse": {

"mode": "VSWR",

"unit": "",

"value": "8.32"

}

} When forward mode set to CCDF and reverse mode set to VSWR, the data will return in the following format:

Note: VSWR has no units. CCDF has unit of %. { "forward": {

"mode": "CCDF",

"unit": "%",

"value": "17.26"

},

"reverse": {

"mode": "VSWR",

"unit": "",

"value": "16.76"

}

} Mapping of the measurement mode short to long form is as follows:

+-------+----------+ | Short | Long Form | +-------+----------+ | CRES | Crest Factor | | BAM | Burst Average Manual | | CCDF | CCDF | | PEAK | Peak Envelope Power | | BAA | Burst Average Auto | | REFL | Reflection Coefficient | | RLOS | Return Loss | | VSWR | VSWR | | FAVG | Forward Average Power | | RAVG | Reverse Average Power | +-------+----------+\

www.tehencom.com

:SENSe:POWer:REVerse <RAVG|REFL|RLOSs|VSWR>
:SENSe:POWer:REVerse?

Title: Reverse Measurement Mode

Description: This command sets or queries the reverse measurement mode for inline power sensors (MA24103A, MA24105A).

Available reverse modes are:

{ RAVG - Reverse Average Power,

REFL - Reflection Coefficient,

RLOS - Return Loss,

VSWR - Standing Wave Ratio

}

This command can only be used with inline power sensors.

Parameter(s): <RAVG|REFL|RLOSs|VSWR>

Query Return: RAVG|REFL|RLOS|VSWR

Default Value: RAVG

:SENSe:SUMMary <0 | 1 | ON | OFF>
:SENSe:SUMMary?

Title: Summary Mode State

Description: This command sets or queries the summary mode state. When summary mode is ENABLED, the inline power sensor will

return all measurements readings. When summary mode is DISABLED, the inline power sensor will return forward and reverse

readings.

This command can only be used with inline power sensors.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

:SENSe:SWEep:MODE <CONTinuous|SINGle>
:SENSe:SWEep:MODE?

Title: Set Sweep Mode

Description: This command sets or queries whether the measurement is set for continuous measurement or single measurement. In SINGle mode, each measurement can be activated by :TRIGger[:SEQuence][:REMote]:SINGle. If averaging is turned on, a complete set of measurements is performed based on the averging count.

Parameter(s): <CONTinuous|SINGle>

Query Return: CONT|SING

Default Value: CONTinuous

www.tehencom.com

:SENSe:USBDevice:PSENsor:INFormation?

Title: Sensor Information Query

Description: Returns the USB Power Sensor information. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. Sensor information contains the following:

{ "model": <model>, "frequencyRange": <minimum frequency in Hz, maximum frequency in Hz>, "serialNumber": <serial number>, "firmwareVersion": <version number>, "isConnected": <true|false> } Note that only one power sensor is supported at a time. The command will return the information of the first sensor connected.

:SENSe:VBW <FULL|FOUR|TWO>
:SENSe:VBW?

Title: Video Bandwidth

Description: This command sets or queries the video bandwidth quality.

Set the available video bandwidth qualities with the enums on the left hand side:

{ FULL - Full,

TWO - Two Hundred KHz,

FOUR - Four KHz

}

This command can only be used with inline power sensors.

Parameter(s): <FULL|FOUR|TWO>

Query Return: FULL|FOUR|TWO

Default Value: FULL

:TRIGger[:SEQuence][:REMote]:SINGle

Title: Initiate Single Sweep

Description: Initiates a sweep/measurement. If :SENSe{[1]}:SWEep:MODE is set to CONTinuous, or if :SENSe{[1]}:SWEep:MODE is set to SINGle but the current sweep has not completed yet, this command is ignored. This command is overlapped. It can be used in combination with *OPC? to synchronize the capture of one complete set of data. When this command is received, the pending operation bit is set. The pending operation will finish once the sweep/measurement is done. Clients can use *OPC? to 'block' until the sweep/measurement is completed.

:UNIT:POWer <DBM|WATTs>
:UNIT:POWer?

Title: Display Power Unit

Description: This command sets and queries the display measurement unit.

Parameter(s): <DBM|WATTs>

Query Return: DBM|WATT

Default Value: DBM

www.tehencom.com

2-5 Cable and Antenna Analyzer Commands

:CALCulate<n>:LIMit:PRESet

Title: Preset Limits

Description: Presets all limits for the specified channel. This preset all limits to their default values.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:ALL:OFF

Title: All Markers Off

Description: Turns all markers off for the specified channel. This will turn off all the markers for all traces.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:ALL:ON

Title: All Markers On

Description: Turns all markers on for the specified channel. This will turn on all the markers for all traces.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:PRESet

Title: Preset Markers

Description: Presets all markers for the specified channel. This presets active marker and presets all markers to their preset values.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:TABLe[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:MARKer:TABLe[:STATe]?

Title: Marker Table State

Description: This command sets or gets the marker table ON or OFF state for the specified channel. Setting the value to OFF or 0 will turn marker table off. Setting the value to ON or 1 will turn marker table on.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:MEASurement:CONFigure <RLDTf|TDDTf>

Title: Measurement Configure

Description: Configures the measurement settings for the specified channel. When the RLDTf command is issued, the display will split horizontally to show two traces: trace 1 displays the return loss measurement, and trace 2 displays the DTF return loss measurement. Similarly, when the TDDTf command is used, two traces will be displayed: trace 1 shows the DTF return loss measurement, and trace 2 shows the TDR Ohm measurement. Note that this command is available in CAA and CAAUSB application only when the option 0003 is installed.\

Parameter(s): <RLDTf|TDDTf>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:DATA? <FDATa|SDATa|FMEM|SMEM>

Title: Formatted Trace Data

Description: Return trace data with format specified using FORMat[:READings][:DATA] command. The command takes a data type parameter as FDATa, SDATa, FMEM, SMEM where FDATa and SDATa are the live trace final plotted data and raw complex data, FMEM and SMEM are the memory final plotted data and memory raw complex data. For Group Delay measurement, the data returned are in the unit of nanoseconds. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <FDATa|SDATa|FMEM|SMEM>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:ALARm <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:ALARm?

Title: Limit Alarm State

Description: This command sets and queries the limit alarm state of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:FAIL?

Title: Limit Check Fail

Description: This command returns an integer limit checking result of the current graph for a given channel and trace. Limit checking will only be performed when the limit message state or alarm is on. Use :CALCulate{[1]|2|3|4}:TRACe{[1]|2|3|4}:LIMit:MESSage command to set limit message state. The response value and description are as the following: Return Value Value Description ---------- 0 passed all limits 1 failed upper limit 2 failed lower limit 3 failed both upper and lower limit Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 3

:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe]?

Title: Lower Limit State

Description: This command sets and queries the lower limit state of the current graph for a given channel and trace. In segmented limit mode, a default lower segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y?

Title: Lower Limit Value

Description: This command sets and queries the lower limit value of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -100000 to 100000

:CALCulate<n>:TRACe<n>:LIMit:MESSage <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:MESSage?

Title: Limit Message State

Description: This command sets and queries the limit message state of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:MODE <SINGle|SEGMented>
:CALCulate<n>:TRACe<n>:LIMit:MODE?

Title: Limit Mode

Description: This command sets and queries the upper and lower limit mode of the current graph for a given channel and trace. In segmented limit mode, a default upper segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <SINGle|SEGMented>

Query Return: SING|SEGM

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: SINGle

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ADD

Title: Add Limit Segment

Description: This command adds a limit segment after the selected limit segment for the current graph type on the given channel and trace. The first limit segment will be a limit segment of the active limit type that covers the entire sweep range at the default Y location. Any limit segment added after a selected limit segment will continue from the selected segment and end at the begining of next segment for the same checking type. If the selected segment is the last segment of the checking type, the new segment will cover the rest of the sweep range. When a new segment is added, it automatically becomes the new selected limit segment. The maximum number of segments can be added is 42. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL <block data>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL?

Title: All Limit Segments

Description: This command sets or queries all limit segments of the current graph type for a given channel and trace in JSON format. The set command takes a SCPI standard (IEEE 488.2) definite arbitrary block data in the form of <header><block>. The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The query command returns all limit segments in the format of JSON array. Each array item specifies one of the limit segment. The return response is formatted the same as the <block> content in the set command. An example of an array item is as the following: {"id": 1, "start": {"x":30000, "y":-20}, "stop": {"x":1000000, "y":-30}, "type": upper} Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <block data>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:CLEar

Title: Clear All Limit Segments

Description: This command clears all limit segments of the current graph type for a given channel and trace. When upper and/or lower limit state is on in segmented limit mode, a default segment is inserted after the clear operation. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:COUNt? [<UPPer|LOWer>]

Title: Limit Segment Count

Description: This command returns the limit segment count of a given limit type for the current domain and graph type on the given channel and trace. When the limit type is not specified, it returns the total limit segment count including all upper and lower segments. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<UPPer|LOWer>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:DELete [<numeric_value>]

Title: Delete Limit Segment

Description: This command deletes the specified segment from the existing segmented limit collection of the current graph type on the given channel and trace. If segment number is not specified, the selected segment will be deleted. When a limit segment is deleted, the selected limit segment will not change unless the deleted segment is the last segment in the collection. In that case, the previous segment automatically becomes the selected limit segment. When the only segment of the current graph is deleted, the limit state will be turned off. Turning on the limit state will automatically adds a default segment to the segmented limit collection. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<numeric_value>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect?

Title: Select Limit Segment

Description: This command selects a specified limit segment from the existing segmented limit collection on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 42

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X?

Title: Segmented Limit Start X

Description: This command sets or queries start X value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 30000

Range: 30000 to 54000000000

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y?

Title: Segmented Limit Start Y

Description: This command sets or queries start Y value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X?

Title: Segmented Limit Stop X

Description: This command sets or queries stop X value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 30000

Range: 30000 to 54000000000

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y?

Title: Segmented Limit Stop Y

Description: This command sets or queries stop Y value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE <UPPer|LOWer>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE?

Title: Segmented Limit Type

Description: This command sets or queries the segment type of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <UPPer | LOWer>

Query Return: UPP | LOW

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: UPPer

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:STATus? [<block data>]

Title: Limit Segments Status

Description: This command returns an overall validation status and an array of error code for the provided segments in JSON format. It takes a SCPI standard (IEEE 488.2) definite arbitrary block data in the form of <header><block>. When the parameter is omitted, query returns the status of the existing limit segments of the current graph for a given channel and trace. The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The block content specifies the limit segments in the format of JSON array described for :CALCulate{[1] | 2 | 3 | 4}:TRACe{[1] | 2 | 3 | 4}:LIMit:SEGMent:ALL. The following is the format of the response: {"isValid": false, "errorCode": [0, 1, 2, 0]} where "isValid" is the overall status of all limit segments and "errorCode" is an array that contains error code for each segment. Error code returns 0 when there's no error, and returns non-zero value when there's any segment violation.\ :

0 - no error 1 - start greater than stop 2 - start overlap with previous segment of the same segment type Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<block data>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: {"isValid":true, "errorCode":[]}

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe?

Title: Limit Segment Vertical Move

Description: This command moves all limit segments of the active type (upper or lower limit) vertically for the current domain and graph type on the given channel and trace. The parameter of the command that specifies the y-axis location where the first point of the first segment will end up at. All segments of the same type will be shifted vertically for the same scale amount. The query command returns the Y value of the first segment starting point. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

:CALCulate<n>:TRACe<n>:LIMit:TYPE <UPPer|LOWer>
:CALCulate<n>:TRACe<n>:LIMit:TYPE?

Title: Limit Mode

Description: This command sets and queries the active limit type of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <UPPer|LOWer>

Query Return: UPP|LOW

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: UPPer

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe]?

Title: Upper Limit State

Description: This command sets and queries the upper limit state of the current graph for a given channel and trace. In segmented limit mode, a default upper segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y?

Title: Upper Limit Value

Description: This command sets and queries the upper limit value of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -100000 to 100000

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>:MODE <NORMal|DELTa>
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE?

Title: Marker Mode

Description: Select the marker mode. When marker is set to delta mode, it becomes a relative marker with reference to marker 1. Any marker except marker 1 can be a DELTa marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <NORMal|DELTa>

Query Return: NORM|DELT

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NORMal

:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE <TRACe|MEMory>
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE?

Title: Marker To Trace

Description: Move the marker to memory or live trace. Query returns the current trace (live vs. memory) marker is on. Available parameters are: TRACe: live trace MEMory: memory trace Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <TRACe|MEMory>

Query Return: TRAC|MEM

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: TRACe

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe]?

Title: Marker State

Description: Set marker on or off on the specified trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:MARKer<n>:TIME:X?

Title: Marker Time Delay X Position

Description: Gets the marker X position in time for the specified trace. This command is valid only if the current trace is set in Distance Domain. Querying this when not in Distance Domain may return an incorrect result. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 8.67e-09 s

Default Unit: s

Range: -2 s to 2 s

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>:X <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer<n>:X?

Title: Marker Position

Description: Change marker position on the specified trace. If the marker is a delta marker, the position specified is the relative position to the reference marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 27000015000

Range: -54000000000 to 54000000000

:CALCulate<n>:TRACe<n>:MARKer<n>:Y?

Title: Marker Y Value

Description: Gets the marker Y value. Value return are in trace amplitude unit. Unit can be retrieved using the command :SENSe{[1]|2|3|4}:TRACe{[1]|2|3|4}:AMPLitude:UNIT. If the marker is a delta marker, then the value return is the relative y value, otherwise absolute y value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0.0

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:LSearch?

Title: Marker Last Search Type

Description: Query the last marker search type. Available last marker search type are as follows: VALL Valley search PEAK Peak search PBM1M2 Peak bounded between Markers 1 and 2 VBM1M2 Valley bounded between Markers 1 and 2 PBM3M4 Peak bounded between Markers 3 and 4 VBM3M4 Valley bound between Markers 3 and 4 This command returns a different set of values for a specific application. For example, for CAAUSB and CAA the possible return value will be the VALL, PEAK, PBM1M2, PBM3M4, VBM1M2, and VBM3M4. For VNA the possible return value will be MIN, MAX, PEAK, PBM1M2, PBM3M4, VBM1M2, and VBM3M4. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: PEAK | VALL | PBM1M2 | PBM3M4 | VBM1M2 | VBM3M4

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: PEAK

:CALCulate<n>:TRACe<n>:MARKer:MOVE:LEFT

Title: Marker Move To Left

Description: Moves the marker X value to the next display point to the LEFT.

Note that if the marker is at the first point in the display, a move left command does nothing. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MOVE:RIGHt

Title: Marker Move To Right

Description: Moves the marker X value to the next display point to the RIGHT.

Note that if the marker is at the last point in the display, a move right command does nothing. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK

Title: Marker Peak

Description: Set the active marker to the position with peak value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:OTWO

Title: Marker Peak Bounded Between Marker 1 and 2

Description: This command sets the active marker to the trace peak value between marker 1 and 2. This command is valid only if either marker 5, 6, 7, or 8 is set as the active marker. This will turn on markers 1 and 2 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:TFOur

Title: Marker Peak Bounded Between Marker 3 and 4

Description: This command sets the active marker to the trace peak value between marker 3 and 4. This command is valid only if either marker 5, 6, 7, or 8 is set as the active marker. This will turn on marker 3 and 4 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:SELect <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer:SELect?

Title: Active Marker

Description: This command sets or gets the active marker on the specified channel and trace. This will turn on marker if marker is currently off. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 8

:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe]?

Title: Active Marker Tracking State

Description: Sets or gets active marker tracking state. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:VALLey

Title: Marker Valley

Description: Set the active marker to the position with the lowest value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:OTWO

Title: Marker Valley Bounded Between Marker 1 and 2

Description: This command sets the active marker to the trace valley value between marker 1 and 2. This command is valid only if either marker 5, 6, 7, or 8 is set as active marker. This will turn on markers 1 and 2 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:TFOur

Title: Marker Valley Bounded Between Marker 3 and 4

Description: This command sets the active marker to the trace valley value between marker 3 and 4. This command is valid only if either marker 5, 6, 7, or 8 is set as active marker. This will turn on markers 3 and 4 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MATH:FUNCtion <NORMal|FADD|FSUBtract|FAVerage>
:CALCulate<n>:TRACe<n>:MATH:FUNCtion?

Title: Trace Math Function.

Description: Sets and gets the math operation between measurement data and memory trace data.

NORMal - no math operation applied

ADD - Data plus Memory;

SUBTract - Data subtract Memory;

MULTiply - Data multiply Memory;

DIVide - Data divides by memory trace;

AVERage - Data plus Memory divide by two;

FADD - final data plus memory;

FSUBtract - final data subtract Memory;

FAVerage - final data plus memory divide by two.

Note that the available math functions are application dependent. For the VNA application the following math functions are available:
NORMal | ADD | SUBTract | MULTiply | DIVide | AVERage. For the CAAUSB and CAA applications, the following math functions are available:
NORMal | FADD | FSUBtract | FAVerage. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <NORMal | FADD | FSUBtract | FAVerage>

Query Return: NORM | FADD | FSUB | FAV

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NORMal

:CALCulate<n>:TRACe<n>:SMOothing:APERture <numeric_value>
:CALCulate<n>:TRACe<n>:SMOothing:APERture?

Title: Trace Smoothing Aperture

Description: Sets and gets the smoothing aperture value for specified trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 20

www.tehencom.com

:CALCulate<n>:TRACe<n>:CLAVerage?

Title: Cable Loss Average

Description: Queries the current cable loss average for the channel and trace specified. Note that the return value will be the most recent cable loss average value when measurement type is something other than Cable Loss.

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-2, Default = 1

Default Value: 0

Range: -10000 to 10000

:CALCulate<n>:TRACe<n>:MEASurement <RLOSs|DTFRloss|VSWR|DTFVswr|CLOSs|TRES|SMITh|PHASe|TRANsmission|TDOHm|TDLin>
:CALCulate<n>:TRACe<n>:MEASurement?

Title: Measurement Type

Description: Sets the measurement type for the given channel and trace. Note that TRANsmission measurement is available in CAA application if 0021 option is installed. The TDOHm and TDLin measurement are available in CAA and CAAUSB application if 0003 option is installed

Parameter(s):

<RLOSs | DTFRloss | VSWR | DTFVswr | CLOSs | TRES | SMITh | PHASe | TRANsmission | TDOHm | TDLin>

Query Return: RLOS | DTFR | VSWR | DTFV | CLOS | TRES | SMIT | PHAS | TRAN | TDOH | TDL

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-2, Default = 1

Default Value: RLOSs

:CALCulate<n>:TRACe[:DATA]:ALL?

Title: Trace Data All

Description: This command transfers VNA trace data from the instrument to the controller for all traces that are currently displayed. The trace data returns with no delimiter between each trace using the same IEEE definite length arbitrary block response of the Trace Data command.

After the usual header of arbitrary block, there is additional header information to support parsing the remaining data. This header has components in the following order: (1) A two-byte integer to return the number of display points per trace. All traces share the same display point value. (2) A two-byte integer to show the last update point of the traces. All traces share the same value of the 'last update point.' (3) A two-byte integer contains the trace flag value. The bits in the trace flag maps to a trace number to indicate whether the trace data includes that trace. Each trace uses 2 bits to represent what types of trace data are included. The first bit (if set) means live trace is included. The next bit(if set) means memory trace is included. For example, a trace flag of value 0x15 (0b010101)

www.tehencom.com

represents data of the live trace 1, 2, and 3 are included. Another example, a value of 0x17 (0b010111), which means live trace 1 to trace 3 are included. Plus, the memory trace 1 is also included. (4) a two-byte format flag. The format value is a bit-mask uses to indicate the format of trace data. The supported formats are real numbers or complex numbers. For instance, if the format flags have the value, Ox7 (0b1111) means trace 1 to trace 4 contains complex numbers; if the value is 0x2 (0b0010), then only trace 2 contains complex numbers. All other trace data is in real numbers (5) eight-byte trace data - This is the sector that contains trace data. If trace data in real numbers format, then each data point will be a double-precision value. If the trace data is a complex number, then each data point will consits of a 2X of an eight-byte value with the first eight-byte is the real part of a complex number, and the second eight-byte is the imaginary part of a complex number. The traces data return in increasing order. The memory trace data follows each live trace (if memory trace included) otherwise the next live trace of the next trace follows.

CALCulate Suffix
Range: 1-4, Default = 1

:CALCulate<n>:TRACe:LIMit:PRESet

Title: Preset Active Trace Limit

Description: This command presets the limit line associated with the active trace to the factory default values for the trace's graph type.

CALCulate Suffix
Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:CLAVerage?

Title: Active Trace Cable Loss Average

Description: This command queries the cable loss average for the active trace. Note that the return value will be the most recent cable loss average value when measurement type is something other than Cable Loss.

CALCulate Suffix
Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:CABLe:INFormation? [<string>]

Title: Cable Information

Description: This command returns the current selected cable information as a tab-delimited string. An optional cable name parameter can be set so the query returns a specific cable instead of the current selected cable. If cable name doesn't exist, an empty string is returned. Data is returned in the following field order with each field separated by tab delimited: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m will be see as 222.

Parameter(s): [<string>]

CALCulate Suffix
Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:CABLelist:ACTive?

Title: Active Cable List

Description: This command returns the active cable list type of the given channel.

Query Return: DEF|USER

CALCulate Suffix Range: 1-4, Default = 1

Default Value: DEFault

:CALCulate<n>:TRANsform:DISTance:CABLelist:CATalog?

Title: Cable List Catalog

Description: This command returns a list of available cable (non-sorted).

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:CABLe:NAME <string>
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME?

Title: Cable Name

Description: Set the cable name of the given channel. This will also update the active cable list type to DEFault. Use the CALCulate{[1]|2|3|4}:TRANsform:DISTance:CABLelist:ACTive command to query for the current active cable list type.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NONE

:CALCulate<n>:TRANsform:DISTance:CABLoss <numeric_value>
:CALCulate<n>:TRANsform:DISTance:CABLoss?

Title: Cable Loss

Description: Sets or queries the cable loss of the coaxial device for distance domain measurement on a given channel. Allowed unit types include dB/m (dB per meters) or dB/ft (dB per feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 dB/m

Default Unit: dB/m

Range: 0 dB/m to 5 dB/m

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:DATA?

Title: Distance Data Query

Description: This command returns the current distance list in meter as a comma-delimited string. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:DMAX?

Title: Distance Max

Description: This command returns the maximum distance for the distance domain measurement on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 2.6 m

Default Unit: m

Range: -100000 m to 100000 m

:CALCulate<n>:TRANsform:DISTance:PVELocity <numeric_value>
:CALCulate<n>:TRANsform:DISTance:PVELocity?

Title: Prop Velocity

Description: Sets or queries the propagation velocity of the coaxial device for distance domain measurement on a given channel.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 0.01 to 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:RESolution?

Title: Distance Resolution

Description: This command returns the distance resolution for the distance domain measurement on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 m

Default Unit: m

Range: -100000 m to 100000 m

:CALCulate<n>:TRANsform:DISTance:STARt <numeric_value>
:CALCulate<n>:TRANsform:DISTance:STARt?

Title: Start Distance

Description: Sets or queries the start distance on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 m

Default Unit: m

Range: 0 m to 4999.99 m

:CALCulate<n>:TRANsform:DISTance:STOP <numeric_value>
:CALCulate<n>:TRANsform:DISTance:STOP?

Title: Stop Distance

Description: Sets or queries the stop distance on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 2.6 m

Default Unit: m

Range: 0.01 m to 5000 m

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:UNIT <METers|FEET>
:CALCulate<n>:TRANsform:DISTance:UNIT?

Title: Distance Units

Description: Sets or queries the units to be used for the distance measurement on a given channel.

Parameter(s): <METers | FEET>

Query Return: MET | FEET

CALCulate Suffix Range: 1-4, Default = 1

Default Value: METers

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:ADD <string>

Title: Add User Cable

Description: Add a user cable. The parameter is a string with the following fields separated by a tab delimiter: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m should be enter as 222. Note Freq3 must be greater than or equal to Freq2, and Freq2 must be greater than or equal to Freq1. If there is one that existed with same name, then this new one will replace it.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:CLEar

Title: Clear All User Cable

Description: Clear all user cable list and set the active cable list type to DEFault if it's currently set to USER.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:DELete <string>

Title: Delete User Cable

Description: Delete a user cable of the given name. This command take one parameter: 1. Cable name - String containing the cable name to be deleted

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:INFormation? [<string>]

Title: User Cable Information

Description: This command returns the current selected user cable information as a tab-delimited string. An optional cable name parameter can be set so the query returns a specific user cable instead of the current selected user cable. If a user cable name doesn't exist, an empty string is returned.

Data is returned in the following field order with each field separated by tab delimited: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m will be see as 222.

Parameter(s): [<string>]

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLelist:CATalog?

Title: User Cable List Catalog

Description: This command returns a list of available user cables (non-sorted).

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME <string>
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME?

Title: User Cable Name

Description: Set the user cable name of the given channel. This will also update the active cable list type to USER. Use the CALCulate{[1]|2|3|4}:TRANsform:DISTance:CABLelist:ACTive command to query for the current active cable list type.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:REName <string>,<string>

Title: Rename User Cable

Description: Rename a user cable of the given name to a new name. This command takes 2 parameters: 1. Cable name - String containing the cable name to be renamed 2. New cable name - String containing the new cable name to rename to

Parameter(s): <string>,<string>

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:WINDow
<RECTangular|NSLobe|LSLobe|MSLobe>
:CALCulate<n>:TRANsform:DISTance:WINDow?

Title: Windowing

Description: Sets or queries the windowing type for distance domain measurement on a given channel.

Parameter(s): <RECTangular | NSLobe | LSLobe | MSLobe>

Query Return: RECT | NSL | LSL | MSL

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NSLobe

:DIAGnostic:SWEep:FREQuency:DATA?

Title: Get Frequency List

Description: This command returns the frequency list from the instrument to the caller. Data transfers from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>.

The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length is 9999. After that follows the <block>, which would be 9999 bytes in size.

The format of the block data is a comma-delimited list of frequency values in Hz unit. An example content returns would like - #4605530000,33684,37368,41053...\

:DISPlay<n>:WINDow:TRACe<n>:STATe <TRACe|MEMory|BOTH>
:DISPlay<n>:WINDow:TRACe<n>:STATe?

Title: Trace Display Type.

Description: Sets the display type for the given trace. Setting the type to TRAC displays the trace only. Setting the display type to MEM displays the trace memory only. Setting the display type to BOTH displays both the trace and memory. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <TRACe | MEMory | BOTH>

Query Return: TRAC | MEM | BOTH

DISPlay Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: TRACe

www.tehencom.com

:DISPlay:WINDow<n>:LAYout <SINGle|HDUal>
:DISPlay:WINDow<n>:LAYout?

Title: Trace Display Layout

Description: Sets or gets the trace display layout for given channel. If the number of trace display windows exceeds the number of traces, the higher numbered trace display windows will be blank. If the number of trace display windows is less than the number of traces set, some traces will have overlapped displays. Trace display window layout: SINGle - Single (One trace display window, one row and one column.) VDUal - Dual Vertical (Two trace display windows, one row and two column.) HDUal - Dual Horizontal (Two trace display windows, two row and one column.) VTRI - Tri Vertical (Three traces vertically split, two on the left, one on the right.) HTRI - Tri Horizontal (Three traces horizontally split, one on top, two on the bottom.) QUAD - Quad (Four trace display windows, two row and two column.) Note that the available trace display layouts are application dependent. Please refer to the Parameters field for valid window layout.

Parameter(s): <SINGle | HDUal>

Query Return: SING | HDU

WINDow Suffix Range: 1-4, Default = 1

Default Value: SINGle

:DISPlay:WINDow<n>:TRACe<n>:Y:AUTO

Title: Perform Auto Scale

Description: Performs auto scale on a given trace for a given channel. This operation sets graph top and bottom such that the trace occupies a significant portion of the grid. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:Y:BOTTom <numeric_value>
:DISPlay:WINDow<n>:TRACe<n>:Y:BOTTom?

Title: Graph Bottom

Description: Sets and queries the graph bottom value for the channel and trace specified. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: 60

Range: 0.1 to 60

www.tehencom.com

:DISPlay:WINDow<n>:TRACe<n>:Y:FULL

Title: Set Full Scale

Description: Sets graph top and bottom to maximize the grid. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart <STANdard|E10|E20|E30|C3>
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart?

Title: Smith Chart Zoom

Description: This command sets or queries the smith chart scale of the current graph type on the given channel and trace. This allow the user to zoom in and out from the reference impedance of the smith chart. Available scales are STANdard | E10 | E20 | E30 | C3 where: STANdard - 0 dB standard Smith Chart E10 - -10 dB expanded Smith Chart E20 - -20 dB expanded Smith Chart E30 - -30 dB expanded Smith Chart C3 - +3 dB compressed Smith Chart Note that this command is valid only if the current graph type is set to either Smith Impedance Chart or Smith Admittance Chart. For CAAUSB and CAA, this command is valid if the current measurement type is set to Smith Impedance Chart. Query will return STAN if the current graph type is not smith chart.

Parameter(s): <STANdard | E10 | E20 | E30 | C3>

Query Return: STAN | E10 | E20 | E30 | C3

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: STANdard

:DISPlay:WINDow<n>:TRACe<n>:Y:TOP <numeric_value>
:DISPlay:WINDow<n>:TRACe<n>:Y:TOP?

Title: Graph Top

Description: Sets and queries the graph top value for the channel and trace specified. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 59.9

www.tehencom.com

:DISPlay:WINDow<n>:TRACe:SCALe:PRESet

Title: Preset Active Trace Scales

Description: This command presets the scales of the current graph type of the active trace to their factory default values.

WINDow Suffix Range: 1-4, Default = 1

:FORMat[:READings][:DATA] <REAL|INTeger>,[<numeric_value>]
:FORMat[:READings][:DATA]?

Title: Format Reading

Description: Set the SCPI data reading format. The optional numeric parameter defines the length for different format type. Currently only length of 32 is supported for type REAL and INTeger.

Parameter(s): <REAL|INTeger>,[<numeric_value>]

:INITiate:VNA:SELFtest?

Title: VNA Self Test

Description: Perform a self-test and return the results. The response is formatted as a JSON (http://json.org/) array of name,value pair result objects. Some result objects also include a 'status' property that will be either 'pass' or 'fail' based on whether the criteria for that test was met.

For tests of voltages, the test passes if the measured voltage is within 10% of the expected voltage.

:MMEMory:CABLelist?

Title: Cable List Data

Description: This command transfers cable list data from the instrument to the controller. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The content of the block data contains a cable list header and the cable list data. The cable list header contains comment that start with '!' per line and a version line that start with '#Version'. The cable list data are in a tab-delimited format. Each line (row) contains the cable data in the following order: name, manufacturer, description, propVelocity, Freq1, CableLoss1, Freq2, CableLoss2, Freq3, CableLoss3 The query command will return a #10 if no cable is available.

www.tehencom.com

:MMEMory:LOAD <string>

Title: Load Data Files

Description: Loads data file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to load the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file smcaa : measurement file. limcaa: limit file. For example to load a setup file: MMEMory:LOAD "Internal/example_setup_file.stp"

Parameter(s): <string>

:MMEMory:STORe <string>

Title: Store Data Files

Description: Stores a data file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file \ (Not available with Secure Data Option)

smcaa : measurement file. txt : tab-delimited text data file. csv : comma separated text data file. limcaa: limit file. For example to save a setup file: MMEMory:STORe "Internal/example_setup_file.stp"

Parameter(s): <string>

:MMEMory:USER:CABLelist <block data>
:MMEMory:USER:CABLelist?

Title: User Cable List Data

Description: This command import/export user cable list file to/from the instrument. Data is transferred to/from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The content of the block data contains a tab-delimited cable list data. Each line (row) contains the cable data in the following order: name, manufacturer, description, propVelocity, Freq1, CableLoss1, Freq2, CableLoss2, Freq3, CableLoss3 The set command takes in a block data format. Please note that the maximum file transfer size to the instrument is 25 MB. The query command returned in block data format or a #10 if no user cable is available. Please refer to the command :CALCulate{[1]|2|3|4}:TRANsform:DISTance:USER:CABLe:ADD for a description and restriction of the field data.

Parameter(s): <block data>

www.tehencom.com

:SENSe<n>:AVERage:CLEar

Title: Restart Averaging

Description: Clears and restart averaging of the measurement data.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:AVERage:COUNt <numeric_value>
:SENSe<n>:AVERage:COUNt?

Title: Averaging Factor

Description: Sets number of sweeps to be averaged

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 1000

:SENSe<n>:AVERage:STATe <0 | 1 | ON | OFF>
:SENSe<n>:AVERage:STATe?

Title: Averaging State

Description: Turns averaging ON or OFF. Setting the value to ON or 1 will result in turning averaging ON. Setting the value to OFF or 0 will result in turning averaging OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OFF

:SENSe<n>:AVERage:SWEep?

Title: Sweep Count

Description: Returns the number of sweep counts

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 0 to 1000

:SENSe<n>:CORRection:COLLect:ABORt

Title: Calibration Abort

Description: Abort all steps of the RF calibration.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect[:ACQuire]
<OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

Title: Perform Calibration Step

Description: This command performs a calibration step. This command takes 2 parameter <cal step> and <port number>.

For cal step OPEN|SHORt|SHT1|SHT2|LOAD|ZERO use port numbers 1 and 2.

For cal step INST use port numbers 1.

For cal step THRU|ISOLation, use 1 for forward path.

NOTE: The available parameters are application dependent.

The VNA application supports
OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO

The CAA, and SiteMaster VNA applications support
OPEN|SHORt|LOAD|ZERO|THRU|INSTacal.

Parameter(s):

<OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

SENSe Suffix
Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:ACQuire:STATus?
<OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

Title: Calibration Step Status

Description: This command requests information about the current calibration step or the specified calibration step. If no calibration step is specified, then it return a 1 if the current calibration step has completed, otherwise it returns a 0. This command takes 2 parameter <cal step> and <port number>.

For cal step OPEN|SHORt|SHT1|SHT2|LOAD|ZERO use port numbers 1 and 2.

For cal step INST use port numbers 1.

For cal step THRU|ISOLation, use 1 for forward path, 2 for reverse path, and 12 for both forward path.

NOTE: The available parameters are application dependent.

The VNA application supports
OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO.

The CAAUSB and CAA applications support
OPEN|SHORt|LOAD|ZERO|THRU|INST.

Parameter(s):

<OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

SENSe Suffix
Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:ACTive:TYPE?

Title: Active Calibration Type

Description: Gets the current active calibration type. Please refer to the command :SENSe{[1]|2|3|4}:CORRection:COLLect:TYPE for a description of the available calibration type. Note that this command will return 'NONE' if no calibration is currently actived.

Query Return:

RF2P|RFP1|RFP2|RFBP|TRFP|TRRP|TRBP|RRP1|RRP2|RRBP|FP2P|RP2P|ES2P|TRES|IRP1|IS2P|IF2P|NONE

SENSe Suffix Range: 1-4, Default = 1

Default Value: NONE

:SENSe<n>:CORRection:COLLect:CKIT:INFormation? <numeric_value>

Title: Cal Kit Info

Description: Gets the cal kit info for the port selected. The port number could be 1 for port 1, 2 for port 2 or 3 for thru between port 1 and 2. Example: query cal kit information for port 1 - :SENSe:CORRection:COLLect:CKIT:INFormation? 1 For the CAAUSB and CAA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s): <numeric_value>

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:CATalog?

Title: Cal Kit Catalog

Description: This command returns a list of available cal kits for the selected port. Data is returned in a comma-separated list, e.g. "OSLK50,TOSLK50A-20,TOSLK50A-40,TOSLK50A-43.5" For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value:

OSLN50,OSLN50-1,OSLN50A-8,OSLN50A-18,TOSLN50A-8,TOSLN50A-18,22N50,22N75,26N50,26N75

www.tehencom.com

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:RIMPedance?

Title: Cal Kit Reference Impedance

Description: This command returns the cal kit reference impedance for the selected port For the CAAUSB and CAA applications, only port 1 is available.

Query Return: Numeric

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: 50

Range: 50 to 75

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string>
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect]?

Title: Select Cal Kit

Description: Sets the calibration kit for the selected port. Valid calibration kit names can be retrieved using the command :SENSe{[1]|2|3|4}:CORRection:COLLect:CKIT:PORT{[1]|2}:CATalog?.

A mismatch between the connector type and the given calibration kit will result in a command error. For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s): <string>

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OSLN50

:SENSe<n>:CORRection:COLLect:CONNector:CATalog? <numeric_value>

Title: Connector Type Catalog

Description: Gets the available connector type for the given port. Example: query available connector type for port 1 - :SENSe:CORRection:COLLect:CONNector:CATalog? 1 For the CAAUSB and CAA applications, only port 1 is available.

Parameter(s): <numeric_value>

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:INFormation?

Title: Calibration Information

Description: This command returns information about the current and active calibration settings. The response is formatted as a nested JSON array of name and value pairs. Following is an example of the response: [{"CurrentSettings":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}, {"name":"Valid Cal Window","value":"--"}, {"name":"User Cal Status","value":"--"}, {"name":"Cal Method","value":"OSL"}, {"name":"Cal Kit Port 1","value":"OSLN50"}, {"name":"Data Points","value":"1000"}, {"name":"Start Frequency","value":"0.03 MHz"}, {"name":"Stop Frequency","value":"54000 MHz"}, {"name":"FlexCal","value":"On"}]}, {"ActiveCalSettings":[{"name":"Date","value":"--"}, {"name":"Time","value":"--"}, {"name":"Internal Temperature","value":"--"}, {"name":"Valid Cal Window","value":"--"}, {"name":"User Cal Status","value":"--"}, {"name":"Cal Method","value":"--}, {"name":"Cal Kit Port 1","value":"--"}, {"name":"Data Points","value":"--"}, {"name":"Start Frequency","value":"--"}, {"name":"Stop Frequency","value":"--"}, {"name":"FlexCal","value":"--"}]}] For settings that are not available, the value will be "--".

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:INFormation:FACTory:INFormation?

Title: Factory Calibration Header Query

Description: This command returns the factory calibration header information of the CAA and VNA applications as ASCII of JSON array with the following information. [{"CalibrationInfo":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}]},]\

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:INITialize

Title: Resend Step

Description: This command retriggers the sending of the JSON content for the selected cal type. The command must be issued at the start of a user calibration prior to issuing the component data acquisition commands. Issuing this command will also abort the thru update. See also :SENSe:CORRection:COLLect:ACQuire:DATA?

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:LOAD

Title: Perform Load

Description: Perform Load step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:OPEN

Title: Perform Open

Description: Perform Open step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector <MN|FN>
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector?

Title: DUT Connector Type

Description: Sets or queries the DUT connector type for the indicated port. The available connector types varies by the current Cal Method and Line Type setup. Note that the available connector types are application dependent. A list of available connector types can be retrieved using the command :SENSe{[1]|2|3|4}:CORRection:COLLect:CONNector:CATalog? Available connector types are: Connector Type Description MK K(male) MN N(male) MV V(male) MS SMA(male) MC TNC(male) M716 716(male) M4P310 4.3-10(male) FK K(female) FN N(female) FV V(female) FS SMA(female) FC TNC(female) F716 716(female) F4P310 4.3-10(female) WG11 WG11A/WR229/R40 WG12 WG12/WR187/R48 WG13 WG13/WR159/R58 WG14 WG14/WR137/R70 WG15 WG15/WR112/R84 WG16 WG16/ER90/R100 WG17 WG17/WR75/R120 WG18 WG18/WR62/R140 WG20 WG20/WR42/R220 WG22 WG22/WR28/R320 For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s): <MN|FN>

Query Return: MN|FN

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: MN

:SENSe<n>:CORRection:COLLect:SAVE

Title: Complete RF Calculation

Description: Complete RF Calibration and perform coefficient calculation

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:SHORt

Title: Perform Short

Description: Perform Short step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:STATus?

Title: Calibration Status

Description: This command returns the calibration status. The command return 0 if calibration is not in progress, 1 if calibration is in progress, 2 if calibration has been aborted, 3 if cal-coefficient are being calculated, and 4 if a calibration has been completed.

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 4

:SENSe<n>:CORRection:COLLect:STEP:STATus?

Title: Calibration Step State

Description: This command returns the calibration step status of the calibration. The command return 1 if calibration step is started, 0 if calibration step is completed

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 1

:SENSe<n>:CORRection:COLLect:TYPE <RFP1|ES2P|TRES|TRFP|FP2P|IRP1|IS2P|IF2P>
:SENSe<n>:CORRection:COLLect:TYPE?

Title: Calibration Type

Description: Configures the calibration type. Calibration types: RF2P (Full 2 Port) RFP1 (Full Port 1) RFP2 (Full Port 2) RFBP (Full Both Ports) TRFP (Trans Response Fwd Path) TRRP (Trans Response Rev Path TRBP (Trans Response Both Paths) RRP1 (Reflection Response Port 1) RRP2 (Reflection Response Port 2) RRBP (Reflection Response Both Ports) FP2P (1 Path 2 Port Fwd Path) RP2P (1 Path 2 Port Rev Path) ES2P (1 Path 2 Port S11 and Ext. Sensor) TRES (Transmission -Fwd Ext. Sensor) IRP1 (Full Port 1 via InstaCal) IS2P (1 Path 2 Port S11 and Ext. Sensor via InstaCal) IF2P (1 Path 2 Port Fwd Path via InstaCal)

** Calibration types RF2P, RFP2, RFBP, RP2P, RRP2, RRBP, TRRP, and TRBP are only available with Full 2-Port S-Parameter option. Note that available calibration types are application dependent. Please refer to the Parameters field for valid calibration type.

Parameter(s): <RFP1 | ES2P | TRES | TRFP | FP2P | IRP1 | IS2P | IF2P>

Query Return: RFP1 | ES2P | TRES | TRFP | FP2P | IRP1 | IS2P | IF2P

SENSe Suffix Range: 1-4, Default = 1

Default Value: RFP1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:VALid:STATus?

Title: Calibration Valid Status

Description: This command requests information about the calibration Valid Status. The command return NA when calibration is off, or calibration is in progress. VAL for VALid when calibration exists and valid, and INV for INValid when calibration is invalid, due to change in temperature level. Return NOCal when calibration was never done.

Query Return: NOC | NA | VAL | INV

SENSe Suffix Range: 1-4, Default = 1

Default Value: NOCal

:SENSe<n>:CORRection:DATA?
<ERF|EDF|ESF|ETF|ELF|EXF|ERR|EDR|ESR|ETR|ELR|EXR>

Title: Error Correction Data

Description: Transfers the system error correction data from the instrument to the controller. <error term parameter> are string parameters that describe error terms. Valid Error Term parameter are:

ERF | EDF | ESF | ETF | ELF | EXF | ERR | EDR | ESR | ETR | ELR | EXR.

Note that certain error terms may not be available (and will return no data) for the current calibration.

Parameter(s): <ERF | EDF | ESF | ETF | ELF | EXF | ERR | EDR | ESR | ETR | ELR | EXR>

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart
<numeric_value>
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart?

Title: Reference Impedance

Description: Sets or queries the reference impedance for Smith Chart. The valid values are 50 and 75 ohm

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 50

Range: 50 to 75

www.tehencom.com

:SENSe<n>:CORRection[:STATe] <0 | 1 | ON | OFF>
:SENSe<n>:CORRection[:STATe]?

Title: Calibration Correction State

Description: This command turns the calibration error correction ON or OFF.

Setting the value to ON or 1 will turn the calibration error correction ON.

Setting the value to OFF or 0 will turn the calibration error correction to OFF.

Note that the error correction can be turned ON only if valid calibration is available.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OFF

:SENSe<n>:CORRection:TYPE <STANdard|FLEX>
:SENSe<n>:CORRection:TYPE?

Title: Calibration Correction Type

Description: Set the calibration to flex cal or standard cal for a given channel.

Parameter(s): <STANdard | FLEX>

Query Return: STAN | FLEX

SENSe Suffix Range: 1-4, Default = 1

Default Value: STANdard

:SENSe<n>:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:CENTer?

Title: Center Frequency

Description: Sets the center frequency. Note that changing the value of the center frequency will change the value of the coupled parameters, Start Frequency and Stop Frequency.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 27000015000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

www.tehencom.com

:SENSe<n>:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:SPAN?

Title: Span

Description: Sets the frequency span. Setting the value of <freq> to 0 Hz is the equivalent of setting the span mode to zero span. Note that changing the value of the frequency span will change the value of the coupled parameters Start Frequency and Stop Frequency and may change the Center Frequency.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 53999970000 Hz

Default Unit: Hz

Range: 0 Hz to 53999970000 Hz

:SENSe<n>:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:STARt?

Title: Start Frequency

Description: Sets the start frequency. Note that changing the value of the start frequency will change the value of the coupled parameters, Center Frequency and Span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 5000 Hz

Default Unit: Hz

Range: 5000 Hz to 6000000000 Hz

:SENSe<n>:FREQuency:STEP?

Title: Frequency Step Size

Description: Returns the frequency step.

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 53999970 Hz

Default Unit: Hz

Range: 0 Hz to 53999970000 Hz

www.tehencom.com

:SENSe<n>:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:STOP?

Title: Stop Frequency

Description: Sets the stop frequency. Note that changing the value of the stop frequency will change the value of the coupled parameters, Center Frequency and Span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 6000000000 Hz

Default Unit: Hz

Range: 5000 Hz to 6000000000 Hz

:SENSe<n>:HOLD:FUNCtion:RF[:STATe] <0 | 1 | ON | OFF>
:SENSe<n>:HOLD:FUNCtion:RF[:STATe]?

Title: RF In Hold

Description: Sets or gets the RF power output state when the sweep is in hold mode. When set to ON or 1, the RF is enabled in the hold mode. When set to OFF or 0, the RF is disabled in the Hold mode.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: ON

:SENSe<n>:SWEep:DYNamic:RANGe <HIGH|NORMal>
:SENSe<n>:SWEep:DYNamic:RANGe?

Title: Set the High/Low Dynamic Range

Description: Sets or gets the High/Low Dynamic Range setting. Applies to Transmission measurement mode where HIGH range improves the low level noise floor measurement (improved dynamic range measurement) but with slower sweep speeds, while LOW range enables faster sweeps with less accurate low level measurement.

Parameter(s): <HIGH|NORMal>

Query Return: HIGH|NORM

SENSe Suffix Range: 1-4, Default = 1

Default Value: NORMal

www.tehencom.com

:SENSe<n>:SWEep:MODE <CONTinuous|SINGle>
:SENSe<n>:SWEep:MODE?

Title: Set Sweep Trigger Mode

Description: Specifies whether the sweep/measurement is set to triggered continuously (CONTinuous), or triggered once and then hold (SINGle). Sweep/measurement restarts when the sweep trigger mode changes. If :TRIGger[:SEQuence][:REMote]:SINGle is received when sweep trigger mode is set to CONTinous, the command is ignored and results an error of -213.

Parameter(s): <CONTinuous|SINGle>

Query Return: CONT|SING

SENSe Suffix Range: 1-4, Default = 1

Default Value: CONTinuous

:SENSe<n>:SWEep:POINt <numeric_value>
:SENSe<n>:SWEep:POINt?

Title: Display Point Count

Description: Changes the number of display points the instrument currently measures. Increasing the number of display points can improve the resolution of measurements but will also increase the sweep time.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 315

Range: 2 to 10049

:SENSe<n>:SWEep:RATE <NORMal|FAST>
:SENSe<n>:SWEep:RATE?

Title: Set the Normal or Fast Sweep Rate

Description: Sets or gets the Normal/Fast Sweep Rate setting.

Parameter(s): <NORMal|FAST>

Query Return: NORM|FAST

SENSe Suffix Range: 1-4, Default = 1

Default Value: NORMal

www.tehencom.com

:SENSe<n>:SWEep:RFIMmunity <HIGH|LOW>
:SENSe<n>:SWEep:RFIMmunity?

Title: RF Immunity

Description: This command sets or queries the RF immunity state on the given channel.

Parameter(s): <HIGH|LOW>

Query Return: HIGH|LOW

SENSe Suffix Range: 1-4, Default = 1

Default Value: LOW

:SENSe<n>:SWEep:STATe <RUN|HOLD>
:SENSe<n>:SWEep:STATe?

Title: Set Sweep Run/Hold State

Description: To Run or Hold the sweep/measurement.

Parameter(s): <RUN|HOLD>

Query Return: RUN|HOLD

SENSe Suffix Range: 1-4, Default = 1

Default Value: RUN

:SENSe<n>:SWEep:TIME?

Title: Get Sweep Time

Description: Gets the Sweep Time.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:TRACe<n>:AMPLitude:UNIT?

Title: Trace Amplitude Unit

Description: Gets the amplitude unit for the given channel and trace. Unit return is based on the current trace graph type. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: NONE|DB|DEGR|SEC|OHMS|SIEM|LOGP|LINP

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NONE

www.tehencom.com

:SENSe<n>:TRACe:PRESet

Title: Preset Traces

Description: This command preset all traces for the given channel. This would set the Trace Display format to SINGle and set Trace 1 to measurement type to Return Loss Trace 2 to measurement type to Return Loss.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:TRACe:SELect <numeric_value>
:SENSe<n>:TRACe:SELect?

Title: Active Trace

Description: This command selects the given trace number as the active trace on the specified channel.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 2

:SENSe<n>:TRACe:TOTal <numeric_value>
:SENSe<n>:TRACe:TOTal?

Title: Number of Traces

Description: Command sets the number of traces on the specified channel

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 2

:SENSe<n>:USBDevice:INSTacal:INFormation?

Title: InstaCal Information Query

Description: Returns the InstaCal information. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. The response information contains the following: { "firmwareVersion": <version number>, "frequencyRange": <minimum frequency in Hz, maximum frequency in Hz>, "isConnected": <true|false> "model": <model> "serialNumber": <serial number>, } Note that only one Instacal is supported at a time. The command will only return the information of the first InstaCal unit that is being connected.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:USBDevice:PSENsor:INFormation?

Title: USB Power Sensor Information Query

Description: Returns the USB Power Sensor (i.e. MA2xxA/MA3xxA) information. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. The USB SiteMaster information contains the following:

{ "model": <model>, "frequencyRange": <minimum frequency in Hz, maximum frequency in Hz>, "serialNumber": <serial number>, "firmwareVersion": <version number>, "isConnected": <true|false> } Note that only one power sensor is supported at a time. The command will return the information of the first sensor connected.

SENSe Suffix Range: 1-4, Default = 1

[:SENSe]:FREQuency:SPAN:FULL

Title: Set to Full Span

Description: Sets the frequency span to full span. Note that changing the value of the frequency span will change the value of the coupled parameters, Start Frequency and Stop Frequency and may change the Center Frequency.

:SOURce<n>:POWer:PORT<n>:RANGe <HIGH|LOW>
:SOURce<n>:POWer:PORT<n>:RANGe?

Title: Power Range

Description: Sets or gets the power range of the indicated port. The power range can be either HIGH or LOW. Power range adjustment is only available for Port 1 on models MS2085A and MS2089A.

Parameter(s): <HIGH|LOW>

Query Return: HIGH|LOW

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: HIGH

www.tehencom.com

:STATus:OPERation[:EVENt]?

Title: Get Operation Status

Description: This command requests information about the current status of the instrument. Each bit of the return value represents some operation. Only a subset of the bits are implemented for each application. The number returned is the decimal representation of the bit-wise OR of the enabled bits:

Bit Decimal Value Description

0 1 Not implemented

1 2 Not implemented

2 4 Not implemented

3 8 Not implemented

4 16 Not implemented

5 32 Not implemented

6 64 Not implemented

7 128 Not implemented

8 256 Sweep Complete

This bit is set to 0 when the command :TRIGger[:SEQuence][:REMote]:SINGle is sent to trigger a sweep. It will have a value of 256 when the sweep has completed. When the command :TRIGger[:SEQuence][:IMMediate][:REMote] is sent to trigger the sweep, it will always return a value of 0.

9 512 Not implemented

10 1024 Not implemented

11 2048 Not implemented

12 4096 Not implemented

13 8192 Not implemented

14 16384 Not implemented

15 0 Will always be 0

www.tehencom.com

:TRACe[:DATA]? <numeric_value>

Title: Trace Data

Description: Return raw trace data in real and imaginary pair. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The format of the block data depends on the current data format setting (FORMat[:READings][:DATA]).

This command takes a single integer parameter specifying the trace number to transfer. If the parameter value is out of the range of valid trace numbers, the first trace (1) will be transferred. (Currently only one trace is supported, so this parameter has no effect.)

The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>.

The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The query command will return a #0 if data is invalid for the active trace.

Parameter(s): <numeric_value>

:TRIGger[:SEQuence][:IMMediate][:REMote]

Title: Restart Continuous Sweep

Description: Restart the sweep/measurement in continuous mode. If :SENSe{[1]|2|3|4}:SWEep:MODE is set to SINGle, this command is ignored and results an error -230.

:TRIGger[:SEQuence][:REMote]:SINGle

Title: Initiate Single Sweep

Description: Initiates a sweep/measurement. If :SENSe{[1]|2|3|4}:SWEep:MODE is set to CONTinuous, or if :SENSe{[1]|2|3|4}:SWEep:MODE is set to SINGle but the current sweep has not completed yet, this command is ignored. Use this command in combination with :STATus:OPERation? or *OPC? to synchronize the capture of one complete set of data. When this command is sent, the "sweep complete" bit of :STATus:OPERation? is set to 0, indicating that the measurement has not completed. The data collection is then triggered. The controlling program can poll :STATus:OPERation? to determine the status. When the "sweep complete" bit is set to 1, data is ready to be retrieved.

This command is also overlapped, so alternatively, *OPC? can be used to wait for completion of the measurement without polling. When this command is received, the pending operation bit is set. The pending operation will finish once the sweep/measurement is done. Clients can use *OPC? to 'block' until the sweep/measurement is completed.

www.tehencom.com

2-6 Vector Network Analyzer Commands

:CALCulate<n>:FORMat:SNP[:DATA] <DB|MA|RI>
:CALCulate<n>:FORMat:SNP[:DATA]?

Title: SNP Format Display

Description: Sets the parameter format displayed in the SNP data file.

Valid format display are MA|DB|RI where

MA - specifies data format in linear magnitude angle (Linear and Phase)

DB - specifies data format in log magnitued angle (Log and Phase)

RI - specified data format in Real and Imaginary

Parameter(s): <DB|MA|RI>

Query Return: DB|MA|RI

CALCulate Suffix Range: 1-4, Default = 1

Default Value: MA

:CALCulate<n>:FORMat:SNP:FREQuency <HZ|KHZ|MHZ|GHZ>
:CALCulate<n>:FORMat:SNP:FREQuency?

Title: SNP Frequency Unit Display

Description: Sets the frequency unit displayed in the SNP data file. Valid frequency unit display are HZ|KHZ|MHZ|GHZ

Parameter(s): <HZ|KHZ|MHZ|GHZ>

Query Return: HZ|KHZ|MHZ|GHZ

CALCulate Suffix Range: 1-4, Default = 1

Default Value: GHZ

:CALCulate<n>:FSEGment:CLEar

Title: Segmented Sweep Clear All Segments

Description: This command clears all the segmented sweep segments and creates a default segment. Note that segment update is not allowed when user calibration is on.

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:FSEGment:INFormation? [<numeric_value>]

Title: Segmented Sweep Segment Information

Description: This command returns the segment information for the given segement index. If no segment index is given, the commands return the segment information of the active segment. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. The response information contains the following: { "SegmentId":<segemnt Id>, "ifbw": <ifbw value in Hz>, "numOfPoints": <number of sweep point for this segment>, "power": <power value in dB>, "startFrequency": <segment start freq in Hz>, "stopFrequency": <segment stop freq in Hz>

}\

Parameter(s): [<numeric_value>]

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:FSEGment[:TABLe]:DATA?

Title: Segmented Sweep Data

Description: This command returns the segment sweep data. The response is formatted as a JSON (http://json.org/) array array of sweep segment. A segment information contains the following: { "SegmentId":<segemntid>, "ifbw": <ifbw value in Hz>, "numOfPoints": <number of sweep point for this segment>, "power": <power value in dB>, "startFrequency": <segment start freq in Hz>, "stopFrequency": <segment stop freq in Hz>

}\

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:LIMit:PRESet

Title: Preset Limits

Description: Presets all limits for the specified channel. This preset all limits to their default values.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:ALL:OFF

Title: All Markers Off

Description: Turns all markers off for the specified channel. This will turn off all the markers for all traces.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:ALL:ON

Title: All Markers On

Description: Turns all markers on for the specified channel. This will turn on all the markers for all traces.

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:MARKer:PRESet

Title: Preset Markers

Description: Presets all markers for the specified channel. This presets active marker and presets all markers to their preset values.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:MARKer:TABLe[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:MARKer:TABLe[:STATe]?

Title: Marker Table State

Description: This command sets or gets the marker table ON or OFF state for the specified channel. Setting the value to OFF or 0 will turn marker table off. Setting the value to ON or 1 will turn marker table on.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:PARameter<n>:FORMat
<MLOGarithmic|SWR|PHASe|SMITh|GDELay|REAL|IMAGinary|RIMPedance|IIMPedance|ISMith|ML/2|PLINear|PLOGarithmic|UWPHase|MLINear|ZMAGnitude>
:CALCulate<n>:PARameter<n>:FORMat?

Title: Graph Type

Description: Sets and queries the graph type for the given channel and trace. Note that the available graph types are application dependent. Available graph types for VNA are: MLOGarithmic | SWR | PHASe | SMITh | GDELay | REAL | IMAGinary | RIMPedance | IIMPedance | ISMith | ML/2 | PLINear | PLOGarithmic | UWPHase | MLINear | ZMAGnitude\

Parameter(s):

<MLOGarithmic | SWR | PHASe | SMITh | GDELay | REAL | IMAGinary | RIMPedance | IIMPedance | ISMith | ML/2 | PLINear | PLOGarithmic | UWPHase | MLINear | ZMAGnitude>

Query Return:

MLOG | SWR | PHAS | SMIT | GDEL | REAL | IMAG | RIMP | IIMP | ISM | ML/2 | PLIN | PLOG | UWPH | MLIN | ZMAG

CALCulate Suffix Range: 1-4, Default = 1

PARameter Suffix Range: 1-4, Default = 1

Default Value: MLOGarithmic

www.tehencom.com

:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric <AIR|MICRoporus|OTHer|POLYethylene|TEFLon>
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric?

Title: Reference Plane Extension Coaxial Line Dielectric Constant Type.

Description: Sets and gets the reference plane extension coaxial line dielectric constant type.

Parameter(s): <AIR | MICRoporus | OTHer | POLYethylene | TEFLon>

Query Return: AIR | MICR | OTH | POLY | TEFL

CALCulate Suffix Range: 1-4, Default = 1

Default Value: AIR

:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric:OTHer <numeric_value>
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric:OTHer?

Title: Reference Plane Extension Coaxial Line Dielectric Constant Manual Value.

Description: Sets and gets the reference plane extension coaxial line dielectric constant value. Use :CALCulate{[1] | 2 | 3 | 4}:REFerence:EXTension:COAXial:DIELectric to select the OTHer type

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 1.000649

Range: 1e-06 to 999999

:CALCulate<n>:REFerence:EXTension:PORT<n>:DISTance <numeric_value>
:CALCulate<n>:REFerence:EXTension:PORT<n>:DISTance?

Title: Reference Plane Extension Distance

Description: This command sets or queries the reference plane extension distance on the given channel and port. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1] | 2 | 3 | 4}:TRANsform:DISTance:UNIT SCPI command. For SiteMaster applications, only port 1 is available.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

PORT Suffix Range: 1-2, Default = 1

Default Value: 0 m

Default Unit: m

Range: -2997000000 m to 2997000000 m

www.tehencom.com

:CALCulate<n>:REFerence:EXTension:PORT<n>:LOSS <numeric_value> {DB}
:CALCulate<n>:REFerence:EXTension:PORT<n>:LOSS?

Title: Reference Plane Extension Loss

Description: This command sets or queries the reference plane extension loss (magnitude offset) on the given channel and port. For transmission S-Parameters this will shift the measurement of the given port by the magnitude offset. For reflection S-Parameters this will shift the measurement of the given port by 2x the magnitude offset. For SiteMaster applications, only port 1 is available.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

CALCulate Suffix Range: 1-4, Default = 1

PORT Suffix Range: 1-2, Default = 1

Default Value: 0 dB

Default Unit: dB

Range: -100 dB to 100 dB

:CALCulate<n>:REFerence:EXTension:PORT<n>:POFFset <numeric_value>
:CALCulate<n>:REFerence:EXTension:PORT<n>:POFFset?

Title: Reference Plane Extension Phase Offset

Description: This command sets or queries the reference plane extension phase offset in Degree for the given channel and port. For SiteMaster applications, only port 1 is available.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

PORT Suffix Range: 1-2, Default = 1

Default Value: 0

Range: -360 to 360

www.tehencom.com

:CALCulate<n>:REFerence:EXTension:PORT<n>:SLOPe <numeric_value>
:CALCulate<n>:REFerence:EXTension:PORT<n>:SLOPe?

Title: Reference Plane Extension Slope Offset

Description: This command sets or queries the reference plane extension slope offset for the given channel and port in dB/GHz. For reflection S-Parameters, the slope will be 2x dB/GHz due to the round-trip nature of the measurement. For SiteMaster applications, only port 1 is available.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

PORT Suffix Range: 1-2, Default = 1

Default Value: 0

Range: -100 to 100

:CALCulate<n>:REFerence:EXTension:PORT<n>:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:REFerence:EXTension:PORT<n>:TIME?

Title: Reference Plane Extension Time

Description: This command sets or queries the reference plane extension time (electrical delay) on the given channel and port. For SiteMaster applications, only port 1 is available.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

PORT Suffix Range: 1-2, Default = 1

Default Value: 0 s

Default Unit: s

Range: -10 s to 10 s

:CALCulate<n>:REFerence:EXTension:STATe?

Title: Reference Plane Extension State

Description: Turns ON or OFF the reference plane extension for Port 1 and Port 2.

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:REFerence:EXTension:WAVeguide:DIELectric <numeric_value>
:CALCulate<n>:REFerence:EXTension:WAVeguide:DIELectric?

Title: Reference Plane Extension Waveguide Dielectric Constant Value.

Description: Sets and gets the reference plane extension waveguide dielectric constant value.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1e-06 to 999999

:CALCulate<n>[:SELected]:GDELay:APERture <numeric_value>
:CALCulate<n>[:SELected]:GDELay:APERture?

Title: Active Trace Group Delay Aperture

Description: Sets or gets the Group Delay aperture for the indicated channel and active trace.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>[:SELected]:PARameter<n>:MEMory:MEMorize <ML1|ML2|ML3|ML4>

Title: Copy Trace To Memory

Description: Copies the given trace data into the specified memory buffer for the channel indicated. Available memory trace buffer are: ML1 (Memory Location trace 1) ML2 (Memory Location trace 2) ML3 (Memory Location trace 3) ML4 (Memory Location trace 4) Note that the specified memory location must match with the specified trace number. For instance if trace 2 is specified than the memory location must be ML2 Example to copy trace 2 to memory location 2 send :CALC:SEL:PAR2:MEM:MEM ML2

Parameter(s): <ML1|ML2|ML3|ML4>

CALCulate Suffix Range: 1-4, Default = 1

PARameter Suffix Range: 1-4, Default = 1

:CALCulate<n>[:SELected]:SMOothing:APERture <numeric_value>
:CALCulate<n>[:SELected]:SMOothing:APERture?

Title: Active Trace Smoothing Aperture

Description: Sets or gets the smoothing aperture for the indicated channel and active trace.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:DATA? <FDATa|SDATa|FMEM|SMEM>

Title: Formatted Trace Data

Description: Return trace data with format specified using FORMat[:READings][:DATA] command. The command takes a data type parameter as FDATa, SDATa, FMEM, SMEM where FDATa and SDATa are the live trace final plotted data and raw complex data, FMEM and SMEM are the memory final plotted data and memory raw complex data. For Group Delay measurement, the data returned are in the unit of nanoseconds. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <FDATa | SDATa | FMEM | SMEM>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:CENTer <numeric_value> {M | FT}

:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:CENTer?

Title: Gate Center Distance

Description: Set the gate center distance for the given channel and trace. Allowed unit types include m (meters) or ft (feet).

Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1] | 2 | 3 | 4}:TRANsform:DISTance:UNIT SCPI command. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {M | FT}

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1.3 m

Default Unit: m

Range: -149999.995 m to 150000 m

www.tehencom.com

:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:SPAN <numeric_value> {M | FT}
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:SPAN?

Title: Gate Span Distance

Description: Set the gate span distance for the given channel and trace. Allowed unit types include m (meters) or ft (feet).

Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {M | FT}

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1.6 m

Default Unit: m

Range: -99999.99 m to 200000 m

:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STARt <numeric_value> {M | FT}
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STARt?

Title: Gate Start Distance

Description: Set the gate start distance for the given channel and trace. Allowed unit types include m (meters) or ft (feet).

Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {M | FT}

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0.5 m

Default Unit: m

Range: -100000 m to 99990 m

www.tehencom.com

:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STOP <numeric_value> {M | FT}
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STOP?

Title: Gate Stop Distance

Description: Set the gate stop distance for the given channel and trace. Allowed unit types include m (meters) or ft (feet).

Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {M | FT}

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 2.1 m

Default Unit: m

Range: -99999.99 m to 100000 m

:CALCulate<n>:TRACe<n>:FILTer:GATE:NOTCh[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:FILTer:GATE:NOTCh[:STATe]?

Title: Gate Notch State

Description: Turns anti-gating on/off for the given channel and trace. This command is available only if option 2 is installed.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:FILTer:GATE:SHAPe <MAXimum|WIDE|NORMal|MINimum>
:CALCulate<n>:TRACe<n>:FILTer:GATE:SHAPe?

Title: Gate Shape

Description: Set the gate shape for the given channel and trace. This command is available only if option 2 is installed.

Parameter(s): <MAXimum|WIDE|NORMal|MINimum>

Query Return: MAX|WIDE|NORM|MIN

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NORMal

www.tehencom.com

:CALCulate<n>:TRACe<n>:FILTer:GATE[:STATe] <OFF|DISPlay|ON>
:CALCulate<n>:TRACe<n>:FILTer:GATE[:STATe]?

Title: Gate Display

Description: Set the gate display setting for the given channel and trace. The gate display can be either OFF (gate is turned off), DISPlay (gate is shown on the trace but not applied to the transform), and ON(the gate is shown and applied to the transform). This command is available only if option 2 is installed.

Parameter(s): <OFF | DISPlay | ON>

Query Return: OFF | DISP | ON

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:CENTer <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:CENTer?

Title: Gate Center Time

Description: Set the gate center time for the given channel and trace. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 4.33631e-09 s

Default Unit: s

Range: -2.95 s to 0.950333564095 s

www.tehencom.com

:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:SPAN <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:SPAN?

Title: Gate Span Time

Description: Set the gate span time for the given channel and trace. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 5.33698e-09 s

Default Unit: s

Range: -1.9 s to 2.000333564095 s

:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STARt?

Title: Gate Start Time

Description: Set the gate start time for the given channel and trace. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1.66782e-09 s

Default Unit: s

Range: -2 s to 0.000333530739 s

www.tehencom.com

:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STOP <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STOP?

Title: Gate Stop Time

Description: Set the gate stop time for the given channel and trace. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 7.0048e-09 s

Default Unit: s

Range: -1.9 s to 0.000333564095 s

:CALCulate<n>:TRACe<n>:GDELay:APERture <numeric_value>
:CALCulate<n>:TRACe<n>:GDELay:APERture?

Title: Group Delay Aperature

Description: Sets or gets the Group Delay aperture for specified channel and trace.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 0.25 to 20

:CALCulate<n>:TRACe<n>:LIMit:ALARm <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:ALARm?

Title: Limit Alarm State

Description: This command sets and queries the limit alarm state of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:FAIL?

Title: Limit Check Fail

Description: This command returns an integer limit checking result of the current graph for a given channel and trace. Limit checking will only be performed when the limit message state or alarm is on. Use :CALCulate{[1]|2|3|4}:TRACe{[1]|2|3|4}:LIMit:MESSage command to set limit message state. The response value and description are as the following: Return Value Value Description ---------- 0 passed all limits 1 failed upper limit 2 failed lower limit 3 failed both upper and lower limit Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 3

:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe]?

Title: Lower Limit State

Description: This command sets and queries the lower limit state of the current graph for a given channel and trace. In segmented limit mode, a default lower segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y?

Title: Lower Limit Value

Description: This command sets and queries the lower limit value of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -100000 to 100000

:CALCulate<n>:TRACe<n>:LIMit:MESSage <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:MESSage?

Title: Limit Message State

Description: This command sets and queries the limit message state of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:MODE <SINGle|SEGMented>
:CALCulate<n>:TRACe<n>:LIMit:MODE?

Title: Limit Mode

Description: This command sets and queries the upper and lower limit mode of the current graph for a given channel and trace. In segmented limit mode, a default upper segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <SINGle|SEGMented>

Query Return: SING|SEGM

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: SINGle

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ADD

Title: Add Limit Segment

Description: This command adds a limit segment after the selected limit segment for the current graph type on the given channel and trace. The first limit segment will be a limit segment of the active limit type that covers the entire sweep range at the default Y location. Any limit segment added after a selected limit segment will continue from the selected segment and end at the begining of next segment for the same checking type. If the selected segment is the last segment of the checking type, the new segment will cover the rest of the sweep range. When a new segment is added, it automatically becomes the new selected limit segment. The maximum number of segments can be added is 42. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL <block data>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL?

Title: All Limit Segments

Description: This command sets or queries all limit segments of the current graph type for a given channel and trace in JSON format. The set command takes a SCPI standard (IEEE 488.2) definite arbitrary block data in the form of <header><block>. The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The query command returns all limit segments in the format of JSON array. Each array item specifies one of the limit segment. The return response is formatted the same as the <block> content in the set command. An example of an array item is as the following: {"id": 1, "start": {"x":30000, "y":-20}, "stop": {"x":1000000, "y":-30}, "type": upper} Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <block data>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:CLEar

Title: Clear All Limit Segments

Description: This command clears all limit segments of the current graph type for a given channel and trace. When upper and/or lower limit state is on in segmented limit mode, a default segment is inserted after the clear operation. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:COUNt? [<UPPer|LOWer>]

Title: Limit Segment Count

Description: This command returns the limit segment count of a given limit type for the current domain and graph type on the given channel and trace. When the limit type is not specified, it returns the total limit segment count including all upper and lower segments. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<UPPer|LOWer>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:DELete [<numeric_value>]

Title: Delete Limit Segment

Description: This command deletes the specified segment from the existing segmented limit collection of the current graph type on the given channel and trace. If segment number is not specified, the selected segment will be deleted. When a limit segment is deleted, the selected limit segment will not change unless the deleted segment is the last segment in the collection. In that case, the previous segment automatically becomes the selected limit segment. When the only segment of the current graph is deleted, the limit state will be turned off. Turning on the limit state will automatically adds a default segment to the segmented limit collection. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<numeric_value>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect?

Title: Select Limit Segment

Description: This command selects a specified limit segment from the existing segmented limit collection on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 42

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X?

Title: Segmented Limit Start X

Description: This command sets or queries start X value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 30000

Range: 30000 to 54000000000

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y?

Title: Segmented Limit Start Y

Description: This command sets or queries start Y value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X?

Title: Segmented Limit Stop X

Description: This command sets or queries stop X value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 30000

Range: 30000 to 54000000000

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y?

Title: Segmented Limit Stop Y

Description: This command sets or queries stop Y value of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE <UPPer|LOWer>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE?

Title: Segmented Limit Type

Description: This command sets or queries the segment type of the selected limit segment of the current graph type on the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <UPPer | LOWer>

Query Return: UPP | LOW

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: UPPer

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:STATus? [<block data>]

Title: Limit Segments Status

Description: This command returns an overall validation status and an array of error code for the provided segments in JSON format. It takes a SCPI standard (IEEE 488.2) definite arbitrary block data in the form of <header><block>. When the parameter is omitted, query returns the status of the existing limit segments of the current graph for a given channel and trace. The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The block content specifies the limit segments in the format of JSON array described for :CALCulate{[1] | 2 | 3 | 4}:TRACe{[1] | 2 | 3 | 4}:LIMit:SEGMent:ALL. The following is the format of the response: {"isValid": false, "errorCode": [0, 1, 2, 0]} where "isValid" is the overall status of all limit segments and "errorCode" is an array that contains error code for each segment. Error code returns 0 when there's no error, and returns non-zero value when there's any segment violation.\ :

0 - no error 1 - start greater than stop 2 - start overlap with previous segment of the same segment type Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): [<block data>]

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: {"isValid":true, "errorCode":[]}

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe?

Title: Limit Segment Vertical Move

Description: This command moves all limit segments of the active type (upper or lower limit) vertically for the current domain and graph type on the given channel and trace. The parameter of the command that specifies the y-axis location where the first point of the first segment will end up at. All segments of the same type will be shifted vertically for the same scale amount. The query command returns the Y value of the first segment starting point. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 1199.9

:CALCulate<n>:TRACe<n>:LIMit:TYPE <UPPer|LOWer>
:CALCulate<n>:TRACe<n>:LIMit:TYPE?

Title: Limit Mode

Description: This command sets and queries the active limit type of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <UPPer|LOWer>

Query Return: UPP|LOW

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: UPPer

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe]?

Title: Upper Limit State

Description: This command sets and queries the upper limit state of the current graph for a given channel and trace. In segmented limit mode, a default upper segment will be turned on if no segment was setup previously. This command is valid only for non-circular graph types. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y <numeric_value>
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y?

Title: Upper Limit Value

Description: This command sets and queries the upper limit value of the current graph for a given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -100000 to 100000

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>:DISTance:X?

Title: Marker Distance X Position

Description: Gets the marker X position in distance for the specified trace. This command is valid only if the current trace is set in Time Domain. Querying this when not in Time Domain may return an incorrect result. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 2.6 m

Default Unit: m

Range: -100000 m to 100000 m

:CALCulate<n>:TRACe<n>:MARKer<n>:MODE <NORMal|DELTa>
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE?

Title: Marker Mode

Description: Select the marker mode. When marker is set to delta mode, it becomes a relative marker with reference to marker 1. Any marker except marker 1 can be a DELTa marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <NORMal|DELTa>

Query Return: NORM|DELT

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NORMal

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE <TRACe|MEMory>
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE?

Title: Marker To Trace

Description: Move the marker to memory or live trace. Query returns the current trace (live vs. memory) marker is on. Available parameters are: TRACe: live trace MEMory: memory trace Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <TRACe|MEMory>

Query Return: TRAC|MEM

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: TRACe

:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe]?

Title: Marker State

Description: Set marker on or off on the specified trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer<n>:X <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer<n>:X?

Title: Marker Position

Description: Change marker position on the specified trace. If the marker is a delta marker, the position specified is the relative position to the reference marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 27000015000

Range: -54000000000 to 54000000000

:CALCulate<n>:TRACe<n>:MARKer<n>:Y?

Title: Marker Y Value

Description: Gets the marker Y value. Value return are in trace amplitude unit. Unit can be retrieved using the command :SENSe{[1]|2|3|4}:TRACe{[1]|2|3|4}:AMPLitude:UNIT. If the marker is a delta marker, then the value return is the relative y value, otherwise absolute y value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

MARKer Suffix Range: 1-8, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0.0

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:LSearch?

Title: Marker Last Search Type

Description: Query the last marker search type. Available last marker search type are as follows: VALL Valley search PEAK Peak search PBM1M2 Peak bounded between Markers 1 and 2 VBM1M2 Valley bounded between Markers 1 and 2 PBM3M4 Peak bounded between Markers 3 and 4 VBM3M4 Valley bound between Markers 3 and 4 This command returns a different set of values for a specific application. For example, for CAAUSB and CAA the possible return value will be the VALL, PEAK, PBM1M2, PBM3M4, VBM1M2, and VBM3M4. For VNA the possible return value will be MIN, MAX, PEAK, PBM1M2, PBM3M4, VBM1M2, and VBM3M4. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: MAX | MIN | PEAK | PBM1M2 | PBM3M4 | VBM1M2 | VBM3M4

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: MAXimum

:CALCulate<n>:TRACe<n>:MARKer:MAXimum

Title: Marker Max

Description: Set the active marker to the position with maximum y value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MINimum

Title: Marker Min

Description: Set the active marker to the position with minimum y value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:MOVE:CENTer

Title: Active Marker Move To Center

Description: Moves the active marker to the center frequency, distance, or time of the given trace and channel. For trace domain in FREQuency or FGT, this would move the marker X value to the center frequency. For trace domain in DISTance, this would move the marker X value to the center distance. For trace domain in TIME, this would move the marker X value to the center time. Use the :SENSe{[1]|2|3|4}:TRACe{[1]|2|3|4}:DOMain? command to query for the current trace domain. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MOVE:LEFT

Title: Marker Move To Left

Description: Moves the marker X value to the next display point to the LEFT.

Note that if the marker is at the first point in the display, a move left command does nothing. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MOVE:REFerence

Title: Active Marker Move To Reference

Description: Moves the active marker to the reference marker of the given trace and channel. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:MOVE:RIGHt

Title: Marker Move To Right

Description: Moves the marker X value to the next display point to the RIGHT.

Note that if the marker is at the last point in the display, a move right command does nothing. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MOVE:STARt

Title: Active Marker Move To Start

Description: Moves the active marker to the start frequency, distance, or time of the given trace and channel. For trace domain in FREQuency or FGT, this would move the marker X value to the start frequency. For trace domain in DISTance, this would move the marker X value to the start distance. For trace domain in TIME, this would move the marker X value to the start time. Use the :SENSe{[1]|2|3|4}:TRACe{[1]|2|3|4}:DOMain? command to query for the current trace domain. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:MOVE:STOP

Title: Active Marker Move To Stop

Description: Moves the active marker value to the stop frequency, distance, or time of the given trace and channel. For trace domain in FREQuency or FGT, this would move the marker X value to the stop frequency. For trace domain in DISTance, this would move the marker X value to the stop distance. For trace domain in TIME, this would move the marker X value to the stop time. Use the :SENSe{[1]|2|3|4}:TRACe{[1]|2|3|4}:DOMain? command to query for the current trace domain. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK

Title: Marker Peak

Description: Set the active marker to the position with peak value. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:OTWO

Title: Marker Peak Bounded Between Marker 1 and 2

Description: This command sets the active marker to the trace peak value between marker 1 and 2. This command is valid only if either marker 5, 6, 7, or 8 is set as the active marker. This will turn on markers 1 and 2 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:TFOur

Title: Marker Peak Bounded Between Marker 3 and 4

Description: This command sets the active marker to the trace peak value between marker 3 and 4. This command is valid only if either marker 5, 6, 7, or 8 is set as the active marker. This will turn on marker 3 and 4 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion?

Title: Marker Excursion

Description: Sets the excursion for a marker. The excursion is the vertical distance from the peak to the next highest valley which must be exceeded for a peak to be considered a peak in marker peak commands. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 200

:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion:STATe <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion:STATe?

Title: Marker Excursion State

Description: Turn on/off excursion checking for the marker peak commands. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:MARKer:PEAK:LEFT

Title: Marker Move To Left Peak

Description: Moves the active marker X value to the point in the marker's assigned trace that is the highest peak to the LEFT of the current X position of the marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK:NEXT

Title: Marker Move To Next Peak

Description: Moves active marker X value to the point in the marker's assigned trace that is the next highest peak. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:RIGHt

Title: Marker Move To Right Peak

Description: Moves the active marker X value to the point in the marker's assigned trace that is the highest peak to the RIGHT of the current X position of the marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold?

Title: Marker Threshold

Description: Sets the threshold level for a marker. The threshold is the level that a peak must exceed to be considered a peak in marker peak commands. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: -200 to 100

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold:STATe <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold:STATe?

Title: Marker Threshold State

Description: Turn on/off threshold checking for the marker peak command. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: OFF

:CALCulate<n>:TRACe<n>:MARKer:SELect <numeric_value>
:CALCulate<n>:TRACe<n>:MARKer:SELect?

Title: Active Marker

Description: This command sets or gets the active marker on the specified channel and trace. This will turn on marker if marker is currently off. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 8

:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe] <0 | 1 | ON | OFF>
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe]?

Title: Active Marker Tracking State

Description: Sets or gets active marker tracking state. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <0 | 1 | ON | OFF>

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:OTWO

Title: Marker Valley Bounded Between Marker 1 and 2

Description: This command sets the active marker to the trace valley value between marker 1 and 2. This command is valid only if either marker 5, 6, 7, or 8 is set as active marker. This will turn on markers 1 and 2 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:TFOur

Title: Marker Valley Bounded Between Marker 3 and 4

Description: This command sets the active marker to the trace valley value between marker 3 and 4. This command is valid only if either marker 5, 6, 7, or 8 is set as active marker. This will turn on markers 3 and 4 on if it's not already on. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:MATH:FUNCtion
<NORMal|ADD|SUBTract|MULTiply|DIVide|AVERage>
:CALCulate<n>:TRACe<n>:MATH:FUNCtion?

Title: Trace Math Function.

Description: Sets and gets the math operation between measurement data and memory trace data.

NORMal - no math operation applied

ADD - Data plus Memory;

SUBTract - Data subtract Memory;

MULTiply - Data multiply Memory;

DIVide - Data divides by memory trace;

AVERage - Data plus Memory divide by two;

FADD - final data plus memory;

FSUBtract - final data subtract Memory;

FAVerage - final data plus memory divide by two.

Note that the available math functions are application dependent. For the VNA application the following math functions are available:
NORMal | ADD | SUBTract | MULTiply | DIVide | AVERage. For the CAAUSB and CAA applications, the following math functions are available:
NORMal | FADD | FSUBtract | FAVerage. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <NORMal | ADD | SUBTract | MULTiply | DIVide | AVERage>

Query Return: NORM | ADD | SUBT | MULT | DIV | AVER

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NORMal

:CALCulate<n>:TRACe<n>:REFerence:EXTension:AUTO:DISTance

Title: Auto Distance Reference Plane Extension

Description: This command calculates and applies the reference extension delay for the indicated trace. Note that the reference plane extension must be ON for this command to work

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe<n>:REFerence:EXTension:FDEPendent:AUTO

Title: Auto Distance and Slope Reference Plane Extension

Description: This command calculates and applies the reference extension distance and slope offset for the given channel and trace. Note that the reference plane extension must be ON for this command to work.

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRACe<n>:SMOothing:APERture <numeric_value>
:CALCulate<n>:TRACe<n>:SMOothing:APERture?

Title: Trace Smoothing Aperture

Description: Sets and gets the smoothing aperture value for specified trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 20

:CALCulate<n>:TRACe<n>:TRANsform:TIME:BPASs:STIMulus <STANdard|PHASor>
:CALCulate<n>:TRACe<n>:TRANsform:TIME:BPASs:STIMulus?

Title: Time Domain Band Pass Response Type

Description: Sets the response type to be used in the band pass transformation process for the given trace. This command is available only if option 2 is installed.

Parameter(s): <STANdard | PHASor>

Query Return: STAN | PHAS

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: STANdard

www.tehencom.com

:CALCulate<n>:TRACe<n>:TRANsform:TIME:LPASs:STIMulus <STEP|IMPulse>
:CALCulate<n>:TRACe<n>:TRANsform:TIME:LPASs:STIMulus?

Title: Time Domain Low Pass Response Type

Description: Sets the response type to be used in the low pass transformation process for the given trace. This command is available only if option 2 is installed.

Parameter(s): <STEP|IMPulse>

Query Return: STEP|IMP

CALCulate Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: IMPulse

:CALCulate<n>:TRACe[:DATA]:ALL?

Title: Trace Data All

Description: This command transfers VNA trace data from the instrument to the controller for all traces that are currently displayed. The trace data returns with no delimiter between each trace using the same IEEE definite length arbitrary block response of the Trace Data command.

After the usual header of arbitrary block, there is additional header information to support parsing the remaining data. This header has components in the following order: (1) A two-byte integer to return the number of display points per trace. All traces share the same display point value. (2) A two-byte integer to show the last update point of the traces. All traces share the same value of the 'last update point.' (3) A two-byte integer contains the trace flag value. The bits in the trace flag maps to a trace number to indicate whether the trace data includes that trace. Each trace uses 2 bits to represent what types of trace data are included. The first bit (if set) means live trace is included. The next bit(if set) means memory trace is included. For example, a trace flag of value 0x15 (0b010101) represents data of the live trace 1, 2, and 3 are included. Another example, a value of 0x17 (0b010111), which means live trace 1 to trace 3 are included. Plus, the memory trace 1 is also included. (4) a two-byte format flag. The format value is a bit-mask uses to indicate the format of trace data. The supported formats are real numbers or complex numbers. For instance, if the format flags have the value, Ox7 (0b1111) means trace 1 to trace 4 contains complex numbers; if the value is 0x2 (0b0010), then only trace 2 contains complex numbers. All other trace data is in real numbers (5) eight-byte trace data - This is the sector that contains trace data. If trace data in real numbers format, then each data point will be a double-precision value. If the trace data is a complex number, then each data point will consits of a 2X of an eight-byte value with the first eight-byte is the real part of a complex number, and the second eight-byte is the imaginary part of a complex number. The traces data return in increasing order. The memory trace data follows each live trace (if memory trace included) otherwise the next live trace of the next trace follows.

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRACe:LIMit:PRESet

Title: Preset Active Trace Limit

Description: This command presets the limit line associated with the active trace to the factory default values for the trace's graph type.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:CABLe:INFormation? [<string>]

Title: Cable Information

Description: This command returns the current selected cable information as a tab-delimited string. An optional cable name parameter can be set so the query returns a specific cable instead of the current selected cable. If cable name doesn't exist, an empty string is returned. Data is returned in the following field order with each field separated by tab delimited: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m will be see as 222.

Parameter(s): [<string>]

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:CABLelist:ACTive?

Title: Active Cable List

Description: This command returns the active cable list type of the given channel.

Query Return: DEF|USER

CALCulate Suffix Range: 1-4, Default = 1

Default Value: DEFault

:CALCulate<n>:TRANsform:DISTance:CABLelist:CATalog?

Title: Cable List Catalog

Description: This command returns a list of available cable (non-sorted).

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:CABLe:NAME <string>
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME?

Title: Cable Name

Description: Set the cable name of the given channel. This will also update the active cable list type to DEFault. Use the CALCulate{[1]|2|3|4}:TRANsform:DISTance:CABLelist:ACTive command to query for the current active cable list type.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NONE

:CALCulate<n>:TRANsform:DISTance:CABLoss <numeric_value>
:CALCulate<n>:TRANsform:DISTance:CABLoss?

Title: Cable Loss

Description: Sets or queries the cable loss of the coaxial device for distance domain measurement on a given channel. Allowed unit types include dB/m (dB per meters) or dB/ft (dB per feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 dB/m

Default Unit: dB/m

Range: 0 dB/m to 5 dB/m

:CALCulate<n>:TRANsform:DISTance:DATA?

Title: Distance Data Query

Description: This command returns the current distance list in meter as a comma-delimited string. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:DMAX?

Title: Distance Max

Description: This command returns the maximum distance for the distance domain measurement on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 2.6 m

Default Unit: m

Range: -100000 m to 100000 m

:CALCulate<n>:TRANsform:DISTance:FCUToff <numeric_value> {HZ | KHZ | MHZ | GHZ}
:CALCulate<n>:TRANsform:DISTance:FCUToff?

Title: Cutoff Freq

Description: Sets or queries the cutoff frequency of the waveguide device for distance domain measurement on a given channel.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 500000 Hz

Default Unit: Hz

Range: 0 Hz to 5400000000000 Hz

:CALCulate<n>:TRANsform:DISTance:MEDium <COAX|WAVeguide>
:CALCulate<n>:TRANsform:DISTance:MEDium?

Title: Line Type

Description: Sets or queries the medium type for distance domain measurement on a given channel.

Parameter(s): <COAX|WAVeguide>

Query Return: COAX|WAV

CALCulate Suffix Range: 1-4, Default = 1

Default Value: COAX

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:PVELocity <numeric_value>
:CALCulate<n>:TRANsform:DISTance:PVELocity?

Title: Prop Velocity

Description: Sets or queries the propagation velocity of the coaxial device for distance domain measurement on a given channel.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 0.01 to 1

:CALCulate<n>:TRANsform:DISTance:RESolution?

Title: Distance Resolution

Description: This command returns the distance resolution for the distance domain measurement on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 m

Default Unit: m

Range: -100000 m to 100000 m

:CALCulate<n>:TRANsform:DISTance:STARt <numeric_value>
:CALCulate<n>:TRANsform:DISTance:STARt?

Title: Start Distance

Description: Sets or queries the start distance on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 m

Default Unit: m

Range: -100000 m to 99999.99 m

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:STOP <numeric_value>
:CALCulate<n>:TRANsform:DISTance:STOP?

Title: Stop Distance

Description: Sets or queries the stop distance on a given channel. Allowed unit types include m (meters) or ft (feet). Note that if no unit is passed in, the instrument will assume that the incoming or outgoing unit is the current unit type set through the :CALCulate{[1]|2|3|4}:TRANsform:DISTance:UNIT SCPI command.

Parameter(s): <numeric_value>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 2.6 m

Default Unit: m

Range: -99999.99 m to 100000 m

:CALCulate<n>:TRANsform:DISTance:UNIT <METers|FEET>
:CALCulate<n>:TRANsform:DISTance:UNIT?

Title: Distance Units

Description: Sets or queries the units to be used for the distance measurement on a given channel.

Parameter(s): <METers|FEET>

Query Return: MET|FEET

CALCulate Suffix Range: 1-4, Default = 1

Default Value: METers

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:ADD <string>

Title: Add User Cable

Description: Add a user cable. The parameter is a string with the following fields separated by a tab delimiter: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m should be enter as 222. Note Freq3 must be greater than or equal to Freq2, and Freq2 must be greater than or equal to Freq1. If there is one that existed with same name, then this new one will replace it.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:CLEar

Title: Clear All User Cable

Description: Clear all user cable list and set the active cable list type to DEFault if it's currently set to USER.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:DELete <string>

Title: Delete User Cable

Description: Delete a user cable of the given name. This command take one parameter: 1. Cable name - String containing the cable name to be deleted

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:INFormation? [<string>]

Title: User Cable Information

Description: This command returns the current selected user cable information as a tab-delimited string. An optional cable name parameter can be set so the query returns a specific user cable instead of the current selected user cable. If a user cable name doesn't exist, an empty string is returned.

Data is returned in the following field order with each field separated by tab delimited: 1. Name - cable name, cannot be empty 2. MFG - manufacturer of the cable, can be empty 3. Description - cable description, can be empty 4. PV - Propagation Velocity, number and cannot be empty 5. Freq1 - Frequency 1 value in MHz, number and cannot be empty 6. CableLoss1 - Cable loss for Freq1, number and cannot be empty 7. Freq2 - Frequency 2 value in MHz, number and cannot be empty 8. CableLoss2 - Cable Loss for Freq2, number and cannot be empty 9. Freq3 - Frequency 3 value in MHz, number and cannot be empty 10. CableLoss3 - Cable Loss for Freq3, number and cannot be empty Note: PV and CableLoss values are scaled by a factor of 1000. For example a cableloss of 0.222 dB/m will be see as 222.

Parameter(s): [<string>]

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLelist:CATalog?

Title: User Cable List Catalog

Description: This command returns a list of available user cables (non-sorted).

CALCulate Suffix Range: 1-4, Default = 1

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME <string>
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME?

Title: User Cable Name

Description: Set the user cable name of the given channel. This will also update the active cable list type to USER. Use the CALCulate{[1]|2|3|4}:TRANsform:DISTance:CABLelist:ACTive command to query for the current active cable list type.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:USER:CABLe:REName <string>,<string>

Title: Rename User Cable

Description: Rename a user cable of the given name to a new name. This command takes 2 parameters: 1. Cable name - String containing the cable name to be renamed 2. New cable name - String containing the new cable name to rename to

Parameter(s): <string>,<string>

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:WAVeguidelist:CATalog?

Title: Waveguide List Catalog

Description: This command returns a list of available waveguide (non-sorted).

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:DISTance:WAVeguide:NAME <string>
:CALCulate<n>:TRANsform:DISTance:WAVeguide:NAME?

Title: Waveguide Name

Description: Set the waveguide name of the given channel.

Parameter(s): <string>

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NONE

:CALCulate<n>:TRANsform:DISTance:WGLoss <numeric_value>
:CALCulate<n>:TRANsform:DISTance:WGLoss?

Title: Waveguide Loss

Description: Sets or queries the loss of the waveguide device for distance domain measurement on a given channel.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 5

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:WINDow
<RECTangular|NSLobe|LSLobe|MSLobe|KBESsel|DCHebyshev>
:CALCulate<n>:TRANsform:DISTance:WINDow?

Title: Windowing

Description: Sets or queries the windowing type for distance domain measurement on a given channel.

Parameter(s): <RECTangular | NSLobe | LSLobe | MSLobe | KBESsel | DCHebyshev>

Query Return: RECT | NSL | LSL | MSL | KBES | DCH

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NSLobe

:CALCulate<n>:TRANsform:DISTance:WINDow:DCGamma <numeric_value> {DB}
:CALCulate<n>:TRANsform:DISTance:WINDow:DCGamma?

Title: Dolph-Chebyshev Gamma Value

Description: Sets the windowing Dolph-Chebyshev gamma value for distance domain measurement. Note that changing this value will also update the value in the command :CALCulate{[1] | 2 | 3 | 4}:TRANsform:TIME:WINDow:DCGamma if option 2 is installed.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 40 dB

Default Unit: dB

Range: 0 dB to 200 dB

:CALCulate<n>:TRANsform:DISTance:WINDow:KBBeta <numeric_value>
:CALCulate<n>:TRANsform:DISTance:WINDow:KBBeta?

Title: Kaiser-Bessel Beta Value

Description: Sets the windowing Kaiser-Bessel beta value for distance domain measurement. Note that changing this value will also update the value of the command :CALCulate{[1] | 2 | 3 | 4}:TRANsform:TIME:WINDow:KBBeta if option 2 is installed.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0.5

Range: 0 to 8000000

www.tehencom.com

:CALCulate<n>:TRANsform:TIME:DATA?

Title: Time Data Query

Description: This command returns the current time list in nanosecond as a comma-delimited string. This command is available only if option 2 is installed.

The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

CALCulate Suffix Range: 1-4, Default = 1

:CALCulate<n>:TRANsform:TIME:RESolution?

Title: Time Resolution

Description: This command returns the time resolution for reflection in seconds. This command is available only if option 2 is installed.

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 s

Default Unit: s

Range: -2 s to 2 s

:CALCulate<n>:TRANsform:TIME:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRANsform:TIME:STARt?

Title: Start Time

Description: Set the start time of the given channel. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 s

Default Unit: s

Range: -2 s to 1.9 s

www.tehencom.com

:CALCulate<n>:TRANsform:TIME:STOP <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:CALCulate<n>:TRANsform:TIME:STOP?

Title: Stop Time

Description: Set the stop time of the given channel. If no unit is specified, time is set in seconds. This command is available only if option 2 is installed.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 8.67e-09 s

Default Unit: s

Range: -1.9 s to 2 s

:CALCulate<n>:TRANsform:TIME:TMAX?

Title: Time Max

Description: This command return the maximum time for reflection in seconds. This command is available only if option 2 is installed.

Query Return: Numeric (s)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0 s

Default Unit: s

Range: -2 s to 2 s

:CALCulate<n>:TRANsform:TIME:TYPE?

Title: Time Domain Processing Type

Description: Returns the time domain processing type. Return 'LPAS' for low pass or 'BPAS' for band pass. This command is available only if option 2 is installed.

Query Return: LPAS | BPAS

CALCulate Suffix Range: 1-4, Default = 1

Default Value: LPAS

www.tehencom.com

:CALCulate<n>:TRANsform:TIME:TYPE:AUTO <0 | 1 | ON | OFF>
:CALCulate<n>:TRANsform:TIME:TYPE:AUTO?

Title: Time Domain Processing Mode

Description: Set the time domain transformation mode to either Auto or Bandpass only.

In Auto mode, the instrument uses lowpass time domain processing if the instrument settings allow that. Otherwise, it uses band pass processing.

The query version of this command return 1 if time domain processing is set to automatic, or return a 0 if Auto mode is set to OFF. This command is available only if option 2 is installed.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

CALCulate Suffix Range: 1-4, Default = 1

Default Value: ON

:CALCulate<n>:TRANsform:TIME:WINDow
<RECTangular|NSLobe|LSLobe|MSLobe|KBESsel|DCHebyshev>
:CALCulate<n>:TRANsform:TIME:WINDow?

Title: Time Domain Windowing

Description: Defines the windowing type for time domain measurement on a given channel. This command is available only if option 2 is installed.

Parameter(s): <RECTangular | NSLobe | LSLobe | MSLobe | KBESsel | DCHebyshev>

Query Return: RECT | NSL | LSL | MSL | KBES | DCH

CALCulate Suffix Range: 1-4, Default = 1

Default Value: NSLobe

:CALCulate<n>:TRANsform:TIME:WINDow:DCGamma <numeric_value> {DB}
:CALCulate<n>:TRANsform:TIME:WINDow:DCGamma?

Title: Time Domain Dolph-Chebyshev Gamma Value

Description: Sets the windowing Dolph-Chebyshev gamma value for time domain measurement. This command is available only if option 2 is installed. Changing this value will also update the value of the command :CALCulate{[1] | 2 | 3 | 4}:TRANsform:DISTance:WINDow:DCGamma.

Parameter(s): <numeric_value> {DB}

Query Return: Numeric (dB)

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 40 dB

Default Unit: dB

Range: 0 dB to 200 dB

www.tehencom.com

:CALCulate<n>:TRANsform:TIME:WINDow:KBBeta <numeric_value>
:CALCulate<n>:TRANsform:TIME:WINDow:KBBeta?

Title: Time Domain Kaiser-Bessel Beta Value

Description: Sets the windowing Kaiser-Bessel beta value for time domain measurement. This command is available only if option 2 is installed. Note that changing this value will also update the value of the command :CALCulate{[1]|2|3|4}:TRANsform:DISTance:WINDow:KBBeta.

Parameter(s): <numeric_value>

Query Return: Numeric

CALCulate Suffix Range: 1-4, Default = 1

Default Value: 0.5

Range: 0 to 8000000

:CALCulate:TRANsform:GATE[:DATA]:BINary? <numeric_value>

Title: Binary Gate Data Query

Description: Returns the gate data in binary as a sequence of 4-byte floating point values. The first 4 bytes of the response indicate the length of the response as an unsigned integer. This command is available only if option 2 is installed.

Parameter(s): <numeric_value>

:DIAGnostic:SWEep:FREQuency:DATA?

Title: Get Frequency List

Description: This command returns the frequency list from the instrument to the caller. Data transfers from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>.

The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length is 9999. After that follows the <block>, which would be 9999 bytes in size.

The format of the block data is a comma-delimited list of frequency values in Hz unit. An example content returns would like - #4605530000,33684,37368,41053...\

www.tehencom.com

:DISPlay<n>:WINDow:TRACe<n>:STATe <TRACe|MEMory|BOTH>
:DISPlay<n>:WINDow:TRACe<n>:STATe?

Title: Trace Display Type.

Description: Sets the display type for the given trace. Setting the type to TRAC displays the trace only. Setting the display type to MEM displays the trace memory only. Setting the display type to BOTH displays both the trace and memory. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <TRACe | MEMory | BOTH>

Query Return: TRAC | MEM | BOTH

DISPlay Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: TRACe

:DISPlay:WINDow<n>:LAYout <SINGle|HDUal|VDUal|HTRI|VTRI|QUAD>
:DISPlay:WINDow<n>:LAYout?

Title: Trace Display Layout

Description: Sets or gets the trace display layout for given channel. If the number of trace display windows exceeds the number of traces, the higher numbered trace display windows will be blank. If the number of trace display windows is less than the number of traces set, some traces will have overlapped displays. Trace display window layout: SINGle - Single (One trace display window, one row and one column.) VDUal - Dual Vertical (Two trace display windows, one row and two column.) HDUal - Dual Horizontal (Two trace display windows, two row and one column.) VTRI - Tri Vertical (Three traces vertically split, two on the left, one on the right.) HTRI - Tri Horizontal (Three traces horizontally split, one on top, two on the bottom.) QUAD - Quad (Four trace display windows, two row and two column.) Note that the available trace display layouts are application dependent. Please refer to the Parameters field for valid window layout.

Parameter(s): <SINGle | HDUal | VDUal | HTRI | VTRI | QUAD>

Query Return: SING | HDU | VDU | HTRI | VTRI | QUAD

WINDow Suffix Range: 1-4, Default = 1

Default Value: HDUal

www.tehencom.com

:DISPlay:WINDow<n>:SPLit <R1C1|R1C2|R2C1|C2R2R1|R2C1C2|R2C2>
:DISPlay:WINDow<n>:SPLit?

Title: Trace Display Layout

Description: Sets or gets the trace display layout for given channel. The layout is in a Row-by-Column format where R represents rows and C represents columns. If the number of trace display windows exceeds the number of traces, the higher numbered trace display windows will be blank. If the number of trace display windows is less than the number of traces set, some traces will have overlapped displays. The following trace display window layout are available: R1C1 - Single (One trace display window, one row and one column.) R1C2 - Dual Vertical (Two trace display windows, one row and two column.) R2C1 - Dual Horizontal (Two trace display windows, two row and one column.) C2R2R1 - Tri Vertical (Three traces vertically split, two on the left, one on the right.) R2C1C2 - Tri Horizontal (Three traces horizontally split, one on top, two on the bottom.) R2C2 - Quad (Four trace display windows, two row and two column.)\

Parameter(s): <R1C1|R1C2|R2C1|C2R2R1|R2C1C2|R2C2>

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:CENTer:MOVE

Title: Move the center to active marker

Description: Moves the center frequency to the active marker X position of the specified trace. This command do nothing in time and distance domain. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:REFMarker:MOVE

Title: Move reference marker active marker

Description: Moves the reference marker position to the active marker X position of the specified trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

www.tehencom.com

:DISPlay:WINDow<n>:TRACe<n>:STARt:MOVE

Title: Move the start to active marker

Description: Moves the start to active marker. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:STOP:MOVE

Title: Move the stop to active marker

Description: Moves the stop value of the current domain (frequency, time or distance) to the active marker X position of the specified trace.

Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:Y:AUTO

Title: Perform Auto Scale

Description: Performs auto scale on a given trace for a given channel. This operation sets graph top and bottom such that the trace occupies a significant portion of the grid. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

:DISPlay:WINDow<n>:TRACe<n>:Y:FULL

Title: Set Full Scale

Description: Sets graph top and bottom to maximize the grid. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

www.tehencom.com

:DISPlay:WINDow<n>:TRACe<n>:Y:PDIV <numeric_value>
:DISPlay:WINDow<n>:TRACe<n>:Y:PDIV?

Title: Scale Per Division

Description: Sets and queries the scale per division for the channel and trace specified

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: 10

Range: 1 to 20

:DISPlay:WINDow<n>:TRACe<n>:Y:RLEV <numeric_value>
:DISPlay:WINDow<n>:TRACe<n>:Y:RLEV?

Title: Reference Level

Description: Sets and queries the reference level for the channel and trace specified

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 999.9

:DISPlay:WINDow<n>:TRACe<n>:Y:RPOS <numeric_value>
:DISPlay:WINDow<n>:TRACe<n>:Y:RPOS?

Title: Reference Line

Description: Sets and queries the reference line for the channel and trace specified

Parameter(s): <numeric_value>

Query Return: Numeric

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 10

www.tehencom.com

:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart <STANdard|E10|E20|E30|C3>
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart?

Title: Smith Chart Zoom

Description: This command sets or queries the smith chart scale of the current graph type on the given channel and trace. This allow the user to zoom in and out from the reference impedance of the smith chart. Available scales are STANdard | E10 | E20 | E30 | C3 where: STANdard - 0 dB standard Smith Chart E10 - -10 dB expanded Smith Chart E20 - -20 dB expanded Smith Chart E30 - -30 dB expanded Smith Chart C3 - +3 dB compressed Smith Chart Note that this command is valid only if the current graph type is set to either Smith Impedance Chart or Smith Admittance Chart. For CAAUSB and CAA, this command is valid if the current measurement type is set to Smith Impedance Chart. Query will return STAN if the current graph type is not smith chart.

Parameter(s): <STANdard | E10 | E20 | E30 | C3>

Query Return: STAN | E10 | E20 | E30 | C3

TRACe Suffix Range: 1-4, Default = 1

WINDow Suffix Range: 1-4, Default = 1

Default Value: STANdard

:DISPlay:WINDow<n>:TRACe:SCALe:PRESet

Title: Preset Active Trace Scales

Description: This command presets the scales of the current graph type of the active trace to their factory default values.

WINDow Suffix Range: 1-4, Default = 1

:FORMat[:READings][:DATA] <REAL|INTeger>,[<numeric_value>]
:FORMat[:READings][:DATA]?

Title: Format Reading

Description: Set the SCPI data reading format. The optional numeric parameter defines the length for different format type. Currently only length of 32 is supported for type REAL and INTeger.

Parameter(s): <REAL | INTeger>,[<numeric_value>]

:INITiate:VNA:SELFtest?

Title: VNA Self Test

Description: Perform a self-test and return the results. The response is formatted as a JSON (http://json.org/) array of name,value pair result objects. Some result objects also include a 'status' property that will be either 'pass' or 'fail' based on whether the criteria for that test was met.

For tests of voltages, the test passes if the measured voltage is within 10% of the expected voltage.

www.tehencom.com

:MMEMory:CABLelist?

Title: Cable List Data

Description: This command transfers cable list data from the instrument to the controller. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The content of the block data contains a cable list header and the cable list data. The cable list header contains comment that start with '!' per line and a version line that start with '#Version'. The cable list data are in a tab-delimited format. Each line (row) contains the cable data in the following order: name, manufacturer, description, propVelocity, Freq1, CableLoss1, Freq2, CableLoss2, Freq3, CableLoss3 The query command will return a #10 if no cable is available.

:MMEMory:LOAD <string>

Title: Load Data Files

Description: Loads data file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to load the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file smvna : measurement file. limvna : limit file. sgs : segmented sweep file. For example to load a setup file: MMEMory:LOAD "Internal/example_setup_file.stp"

Parameter(s): <string>

:MMEMory:LOAD:FSEGment <string>,<string>

Title: Load Segmented Sweep From File

Description: TThis command loads the segmented sweep data from the specified segmented sweep file to the active trace. The file location is resolved using the MSUS and file path parameters. Parameters:

1. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional. If file extension is specified it should be .sgs.

2. MSUS: Device to load the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:LOAD:FSEGment "/example_segment)sweep_file", "USB1-1"

Note the model of the device that the segmented sweep was saved in must match the model of the the device to load in; otherwise, the load will be rejected. Note that recall is not allowed when user calibration is on.

Parameter(s): <string>,<string>

www.tehencom.com

:MMEMory:LOAD:LIMit <string>,<string>

Title: Load Limit From File

Description: This command loads limit data from the specified limit file to the active trace. The file location is resolved using the MSUS and file path parameters. Parameters:

1. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional. If file extension is specified it should be .limvna.

2. MSUS: Device to load the file from. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:LOAD:LIMit "/example_limit_file", "USB1-1"

Note recall will fail if the domain or the graph type of the recall file does not match the active trace domain and graph type. Also, the model of the device that the limit was saved in must match the model of the the device to load in; otherwise, the load will be rejected.

Parameter(s): <string>,<string>

:MMEMory:STORe <string>

Title: Store Data Files

Description: Stores a data file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file \ (Not available with Secure Data Option)

smvna : measurement file. s2p : Data file in S2P format. txt : tab-delimited text data file. csv : comma separated text data file. limvna : limit file. sgs : segmented sweep file. For example to save a setup file: MMEMory:STORe "Internal/example_setup_file.stp"

Parameter(s): <string>

:MMEMory:STORe:FSEGment <string>,<string>

Title: Store Segmented Sweep To File

Description: This command stores the segmented sweep data into the specified file location. The file location is resolved using the MSUS and file path parameters. Intermediate folders specified by the file path parameter are automatically created. The output file extension is .sgs. The command automatically overwrites the specified file if present. Parameters:
1. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional.

2. MSUS: Device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:STORe:FSEGment "/example_segment_sweep_file", "USB1-1"

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <string>,<string>

www.tehencom.com

:MMEMory:STORe:LIMit <string>,<string>

Title: Store Limit To File

Description: This command stores the active trace current graph limit data into the specified file location. The file location is resolved using the MSUS and file path parameters. Intermediate folders specified by the file path parameter are automatically created. The output file extension is .limvna.

The command automatically overwrites the specified file if present. Parameters: 1. File path: The file path (including file name) relative to the MSUS root directory. File path is case sensitive. File extension is optional.

2. MSUS: Device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. MSUS parameter is case sensitive.

For example:

MMEMory:STORe:LIMit "/example_limit_file", "USB1-1"

A common cause of the command failure is not having enough space available on the storage location. Use :MMEMory:CATalog:DIRectory query command to retrieve the total space available on the storage location.

Parameter(s): <string>,<string>

:MMEMory:USER:CABLelist <block data>
:MMEMory:USER:CABLelist?

Title: User Cable List Data

Description: This command import/export user cable list file to/from the instrument. Data is transferred to/from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The content of the block data contains a tab-delimited cable list data. Each line (row) contains the cable data in the following order: name, manufacturer, description, propVelocity, Freq1, CableLoss1, Freq2, CableLoss2, Freq3, CableLoss3 The set command takes in a block data format. Please note that the maximum file transfer size to the instrument is 25 MB. The query command returned in block data format or a #10 if no user cable is available. Please refer to the command :CALCulate{[1]|2|3|4}:TRANsform:DISTance:USER:CABLe:ADD for a description and restriction of the field data.

Parameter(s): <block data>

:SENSe<n>:AVERage:CLEar

Title: Restart Averaging

Description: Clears and restart averaging of the measurement data.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:AVERage:COUNt <numeric_value>
:SENSe<n>:AVERage:COUNt?

Title: Averaging Factor

Description: Sets number of sweeps to be averaged

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 1000

:SENSe<n>:AVERage:STATe <0 | 1 | ON | OFF>
:SENSe<n>:AVERage:STATe?

Title: Averaging State

Description: Turns averaging ON or OFF. Setting the value to ON or 1 will result in turning averaging ON. Setting the value to OFF or 0 will result in turning averaging OFF.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OFF

:SENSe<n>:AVERage:SWEep?

Title: Sweep Count

Description: Returns the number of sweep counts

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 0 to 1000

:SENSe<n>:BANDwidth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:BANDwidth[:RESolution]?

Title: IFBW

Description: Sets or gets the IFBW of the given channel.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:ABORt

Title: Calibration Abort

Description: Abort all steps of the RF calibration.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect[:ACQuire] <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

Title: Perform Calibration Step

Description: This command performs a calibration step. This command takes 2 parameter <cal step> and <port number>.

For cal step OPEN|SHORt|SHT1|SHT2|LOAD|ZERO use port numbers 1 and 2.

For cal step INST use port numbers 1.

For cal step THRU|ISOLation, use 1 for forward path.

NOTE: The available parameters are application dependent.

The VNA application supports OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO.

The CAAUSB, CAA, and SiteMaster VNA applications support OPEN|SHORt|LOAD|ZERO|THRU|INSTacal.

Parameter(s):

<OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:ACQuire:STATus? <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value>

Title: Calibration Step Status

Description: This command requests information about the current calibration step or the specified calibration step. If no calibration step is specified, then it return a 1 if the current calibration step has completed, otherwise it returns a 0. This command takes 2 parameter <cal step> and <port number>.

For cal step OPEN | SHORt | SHT1 | SHT2 | LOAD | ZERO | MATCh use port numbers 1 and 2.

For cal step INST use port numbers 1.

NOTE: The available parameters are application dependent.

The VNA application supports
OPEN | SHORt | SHT1 | SHT2 | LOAD | THRU | ISOLation | ZERO.

The CAAUSB and CAA applications support
OPEN | SHORt | LOAD | ZERO | THRU | INST.

Parameter(s):

<OPEN | SHORt | SHT1 | SHT2 | LOAD | THRU | ISOLation | ZERO | INSTacal>,<numeric_value>

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:ACTive:TYPE?

Title: Active Calibration Type

Description: Gets the current active calibration type. Please refer to the command :SENSe{[1] | 2 | 3 | 4}:CORRection:COLLect:TYPE for a description of the available calibration type. Note that this command will return 'NONE' if no calibration is currently actived.

Query Return:

RF2P | RFP1 | RFP2 | RFBP | TRFP | TRRP | TRBP | RRP1 | RRP2 | RRBP | FP2P | RP2P | ES2P | TRES | IRP1 | IS2P | IF2P | NONE

SENSe Suffix Range: 1-4, Default = 1

Default Value: NONE

:SENSe<n>:CORRection:COLLect:CKIT:INFormation? <numeric_value>

Title: Cal Kit Info

Description: Gets the cal kit info for the port selected. The port number could be 1 for port 1, 2 for port 2 or 3 for thru between port 1 and 2. Example: query cal kit information for port 1 - :SENSe:CORRection:COLLect:CKIT:INFormation? 1 For the CAAUSB and CAA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s): <numeric_value>

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:CATalog?

Title: Cal Kit Catalog

Description: This command returns a list of available cal kits for the selected port. Data is returned in a comma-separated list, e.g. "OSLK50,TOSLK50A-20,TOSLK50A-40,TOSLK50A-43.5" For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value:

OSLN50,OSLN50-1,OSLN50A-8,OSLN50A-18,TOSLN50A-8,TOSLN50A-18,22N50,22N75,26N50,26N75

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:RIMPedance?

Title: Cal Kit Reference Impedance

Description: This command returns the cal kit reference impedance for the selected port For the CAAUSB and CAA applications, only port 1 is available.

Query Return: Numeric

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: 50

Range: 50 to 75

:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string>
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect]?

Title: Select Cal Kit

Description: Sets the calibration kit for the selected port. Valid calibration kit names can be retrieved using the command :SENSe{[1]|2|3|4}:CORRection:COLLect:CKIT:PORT{[1]|2}:CATalog?.

A mismatch between the connector type and the given calibration kit will result in a command error. For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s): <string>

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OSLN50

www.tehencom.com

:SENSe<n>:CORRection:COLLect:CONNector:CATalog? <numeric_value>

Title: Connector Type Catalog

Description: Gets the available connector type for the given port. Example: query available connector type for port 1 - :SENSe:CORRection:COLLect:CONNector:CATalog? 1 For the CAAUSB and CAA applications, only port 1 is available.

Parameter(s): <numeric_value>

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:INFormation?

Title: Calibration Information

Description: This command returns information about the current and active calibration settings. The response is formatted as a nested JSON array of name and value pairs. Following is an example of the response: [{"CurrentSettings":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}, {"name":"Valid Cal Window","value":"--"}, {"name":"Cal Status","value":"--"}, {"name":"Cal Type","value":"Full Reflection - S11"}, {"name":"Cal Method","value":"SOLT"}, {"name":"Cal Line Type","value":"Coax"}, {"name":"Cal Kit Port 1","value":"OSLK50"}, {"name":"Cal Kit Port 2","value":"OSLK50"}, {"name":"Data Points","value":"1000"}, {"name":"Start Frequency","value":"0.03 MHz"}, {"name":"Stop Frequency","value":"54000 MHz"}, {"name":"IFBW","value":"0.001 MHz"}, {"name":"Source Power Level Port 1","value":"0 dBm"}, {"name":"Source Power Level Port 2","value":"0 dBm"}, {"name":"Interpolation","value":"Off"}, {"name":"FlexCal","value":"On"}]}, {"ActiveCalSettings":[{"name":"Date","value":"--"}, {"name":"Time","value":"--"}, {"name":"Internal Temperature","value":"--"}, {"name":"Valid Cal Window","value":"--"}, {"name":"Cal Status","value":"--"}, {"name":"Cal Type","value":"--"}, {"name":"Cal Method","value":"--}, {"name":"Cal Line Type","value":"--"}, {"name":"Cal Kit Port 1","value":"--"}, {"name":"Cal Kit Port 2","value":"--"}, {"name":"Data Points","value":"--"}, {"name":"Start Frequency","value":"--"}, {"name":"Stop Frequency","value":"--"}, {"name":"IFBW","value":"--"}, {"name":"Source Power Level Port 1","value":"--"}, {"name":"Source Power Level Port 2","value":"--"}, {"name":"Interpolation","value":"--"}, {"name":"FlexCal","value":"--"}]}] For settings that are not available, the value will be "--".

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:INFormation:FACTory:INFormation?

Title: Factory Calibration Header Query

Description: This command returns the factory calibration header information of the CAA and VNA applications as ASCII of JSON array with the following information. [{"CalibrationInfo":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}]},]\

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:INITialize

Title: Resend Step

Description: This command retriggers the sending of the JSON content for the selected cal type. The command must be issued at the start of a user calibration prior to issuing the component data acquisition commands. Issuing this command will also abort the thru update. See also :SENSe:CORRection:COLLect:ACQuire:DATA?

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:INTerpolation[:STATe] <0 | 1 | ON | OFF>
:SENSe<n>:CORRection:COLLect:INTerpolation[:STATe]?

Title: Calibration Inteprolation State

Description: This command turns the calibration interpolation ON or OFF.

Setting the value to ON or 1 will turn the calibration interpolation to ON.

Setting the value to OFF or 0 will turn the calibration interpolation to OFF.

Note: that the interpolation can be turned ON only if calibration correction is on.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OFF

:SENSe<n>:CORRection:COLLect:LOAD

Title: Perform Load

Description: Perform Load step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:MEDium <COAX|WAVeguide>
:SENSe<n>:CORRection:COLLect:MEDium?

Title: Calibration Line Type

Description: Sets the calibration line type. Available line type are: COAX|WAVeguide

Parameter(s): <COAX|WAVeguide>

Query Return: COAX|WAV

SENSe Suffix Range: 1-4, Default = 1

Default Value: COAX

www.tehencom.com

:SENSe<n>:CORRection:COLLect:METHod <SOLT|SSLT>
:SENSe<n>:CORRection:COLLect:METHod?

Title: Calibration Method

Description: Sets the calibration method for the indicated channel. The following calibration methods are available (SOLT|SSLT|SSST|SOLR|LRL|LRM):

SOLT : Short-Open-Load-Thru calibration method,

SSLT : Short-Short-Load-Thru calibration method,

SSST : Short-Short-Short-Thru calibration method,

SOLR : Short-Open-Load-Reciprocal calibration method,

LRL : Line-Reflect-Line calibration method.

LRM : Line-Reflect-Match calibration method. Note that SOLR, LRL, and LRM are only supported if calibration type is set to RF2P (Full 2 Port). Setting calibration method to either SOLR, LRL, or LRM will set the calibration type to RF2P.

Parameter(s): <SOLT|SSLT>

Query Return: SOLT|SSLT

SENSe Suffix Range: 1-4, Default = 1

Default Value: SOLT

:SENSe<n>:CORRection:COLLect:OPEN

Title: Perform Open

Description: Perform Open step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector
<MK|FK|MN|FN|MC|FC|M716|F716|MS|FS|MV|FV|M4P310|F4P310|WG11|WG12|WG13>
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector?

Title: DUT Connector Type

Description: Sets or queries the DUT connector type for the indicated port. The available connector types varies by the current Cal Method and Line Type setup. Note that the available connector types are application dependent. A list of available connector types can be retrieved using the command :SENSe{[1]|2|3|4}:CORRection:COLLect:CONNector:CATalog? Available connector types are: Connector Type Description MK K(male) MN N(male) MV V(male) MS SMA(male) MC TNC(male) M716 716(male) M4P310 4.3-10(male) FK K(female) FN N(female) FV V(female) FS SMA(female) FC TNC(female) F716 716(female) F4P310 4.3-10(female) WG11 WG11A/WR229/R40 WG12 WG12/WR187/R48 WG13 WG13/WR159/R58 WG14 WG14/WR137/R70 WG15 WG15/WR112/R84 WG16 WG16/ER90/R100 WG17 WG17/WR75/R120 WG18 WG18/WR62/R140 WG20 WG20/WR42/R220 WG22 WG22/WR28/R320 For the CAAUSB, CAA, and SiteMaster VNA applications, only port 1 is available. This command is not available if the calibration type is set to InstaCal.

Parameter(s):

<MK|FK|MN|FN|MC|FC|M716|F716|MS|FS|MV|FV|M4P310|F4P310|WG11|WG12|WG13>

Query Return:

MK|FK|MN|FN|MC|FC|M716|F716|MS|FS|MV|FV|M4P310|F4P310|WG11|WG12|WG13

PORT Suffix Range: 1-2, Default = 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: MN

:SENSe<n>:CORRection:COLLect:RDEVice <OPEN|SHORt|SHT1|SHT2>
:SENSe<n>:CORRection:COLLect:RDEVice?

Title: Reflection Device

Description: Configures the reflection device for Reflection Response. Available device selections for each calibration method are: OPEN|SHORt for SOLT, SHT1|SHT2 for SSLT

Parameter(s): <OPEN|SHORt|SHT1|SHT2>

Query Return: OPEN|SHOR|SHT1|SHT2

SENSe Suffix Range: 1-4, Default = 1

Default Value: OPEN

:SENSe<n>:CORRection:COLLect:RDEVice:CATalog:FULL?

Title: Available reflection Response Device Query

Description: This command returns a list of available reflection response device separated by commas.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:SAVE

Title: Complete RF Calculation

Description: Complete RF Calibration and perform coefficient calculation

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:SHORt

Title: Perform Short

Description: Perform Short step of the Calibration

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:STATus?

Title: Calibration Status

Description: This command returns the calibration status. The command return 0 if calibration is not in progress, 1 if calibration is in progress, 2 if calibration has been aborted, 3 if cal-coefficient are being calculated, and 4 if a calibration has been completed.

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 4

:SENSe<n>:CORRection:COLLect:STEP:STATus?

Title: Calibration Step State

Description: This command returns the calibration step status of the calibration. The command return 1 if calibration step is started, 0 if calibration step is completed

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 1

www.tehencom.com

:SENSe<n>:CORRection:COLLect:THRU:SELect <P1THru|P2THru|USRThru>
:SENSe<n>:CORRection:COLLect:THRU:SELect?

Title: Thru Device Selection

Description: Selects the Thru or reciprocal device use for RF Calibration. Valid selections are P1THru | P2THru | USRThru where

P1THru - Port 1 CalKit Thru

P2THru - Port 2 CalKit Thru

USRThru - User entered Thru device Note, when the SOLR cal method is selected, USRThru will be selected. If P1TH or P2TH are chosen instead, the thru length offset from the selected cal kit will be use for the reciprocal length.

Parameter(s): <P1THru | P2THru | USRThru>

Query Return: P1TH | P2TH | USRT

SENSe Suffix Range: 1-4, Default = 1

Default Value: P1THru

:SENSe<n>:CORRection:COLLect:TUPDate

Title: Setup For Thru Or Reciprocal Update

Description: This command allows for a thru or reciprocal calibration step to be re-performed.//

It only applies for calibrations with thru or reciprocal steps and applies only if that supporting calibration is currently enabled.//

The cal step information will be updated to be that of the thru or reciprocal calibration step.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:TYPE
<RFP1|ES2P|TRES|TRFP|RRP1|FP2P|IRP1|IS2P|IF2P>
:SENSe<n>:CORRection:COLLect:TYPE?

Title: Calibration Type

Description: Configures the calibration type. Calibration types: RF2P (Full 2 Port) RFP1 (Full Port 1) RFP2 (Full Port 2) RFBP (Full Both Ports) TRFP (Trans Response Fwd Path) TRRP (Trans Response Rev Path TRBP (Trans Response Both Paths) RRP1 (Reflection Response Port 1) RRP2 (Reflection Response Port 2) RRBP (Reflection Response Both Ports) FP2P (1 Path 2 Port Fwd Path) RP2P (1 Path 2 Port Rev Path) ES2P (1 Path 2 Port S11 and Ext. Sensor) TRES (Transmission -Fwd Ext. Sensor) IRP1 (Full Port 1 via InstaCal) IS2P (1 Path 2 Port S11 and Ext. Sensor via InstaCal) IF2P (1 Path 2 Port Fwd Path via InstaCal)

** Calibration types RF2P, RFP2, RFBP, RP2P, RRP2, RRBP, TRRP, and TRBP are only available with Full 2-Port S-Parameter option. Note that available calibration types are application dependent. Please refer to the Parameters field for valid calibration type.

Parameter(s): <RFP1 | ES2P | TRES | TRFP | RRP1 | FP2P | IRP1 | IS2P | IF2P>

Query Return: RFP1 | ES2P | TRES | TRFP | RRP1 | FP2P | IRP1 | IS2P | IF2P

SENSe Suffix Range: 1-4, Default = 1

Default Value: FP2P

www.tehencom.com

:SENSe<n>:CORRection:COLLect:USRThru:INFormation?

Title: User Thru Info

Description: Gets the user defined thru info.

Example: query cal kit information for port 1 - [:SENSe]:CORRection:COLLect:USERThru:INFormation? 1

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:COLLect:USRThru:LDELay <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:SENSe<n>:CORRection:COLLect:USRThru:LDELay?

Title: Thru Line Delay

Description: Sets or gets the line delay of the user Thru device. This value will be used for RF Calibration if the USRThru is selected as the Thru device. Note that changing the value of the Thru line delay will change the value of the Thru line length.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0 s

Default Unit: s

Range: -3.33564e-07 s to 3.33564e-07 s

:SENSe<n>:CORRection:COLLect:USRThru:LENGth <numeric_value>
:SENSe<n>:CORRection:COLLect:USRThru:LENGth?

Title: Thru Line Length

Description: Sets or gets the line length of the user Thru or reciprocal device. This will be used for RF Calibration if Thru device selection is set as USRThru. Note that changing the value of the Thru line length will change the value of the Thru line delay.

Parameter(s): <numeric_value>

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0 m

Default Unit: m

Range: -100 m to 100 m

www.tehencom.com

:SENSe<n>:CORRection:COLLect:VALid:STATus?

Title: Calibration Valid Status

Description: This command requests information about the calibration Valid Status. The command return NA when calibration is off, or calibration is in progress. VAL for VALid when calibration exists and valid, and INV for INValid when calibration is invalid, due to change in temperature level. Return NOCal when calibration was never done.

Query Return: NOC | NA | VAL | INV

SENSe Suffix Range: 1-4, Default = 1

Default Value: NOCal

:SENSe<n>:CORRection:DATA?
<ERF|EDF|ESF|ETF|ELF|EXF|ERR|EDR|ESR|ETR|ELR|EXR>

Title: Error Correction Data

Description: Transfers the system error correction data from the instrument to the controller. <error term parameter> are string parameters that describe error terms. Valid Error Term parameter are:

ERF | EDF | ESF | ETF | ELF | EXF | ERR | EDR | ESR | ETR | ELR | EXR.

Note that certain error terms may not be available (and will return no data) for the current calibration.

Parameter(s): <ERF | EDF | ESF | ETF | ELF | EXF | ERR | EDR | ESR | ETR | ELR | EXR>

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart
<numeric_value>
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart?

Title: Reference Impedance

Description: Sets or queries the reference impedance for Smith Chart. The valid values are 50 and 75 ohm

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 50

Range: 50 to 75

:SENSe<n>:CORRection:SPARams?

Title: Calibration S-Parameter

Description: This command returns a comma delimited list of S-Parameter with calibration applied on the given channel. When the calibration is turned off, query returns empty list.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:CORRection[:STATe] <0 | 1 | ON | OFF>
:SENSe<n>:CORRection[:STATe]?

Title: Calibration Correction State

Description: This command turns the calibration error correction ON or OFF.

Setting the value to ON or 1 will turn the calibration error correction ON.

Setting the value to OFF or 0 will turn the calibration error correction to OFF.

Note that the error correction can be turned ON only if valid calibration is available.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: OFF

:SENSe<n>:CORRection:TYPE <STANdard|FLEX>
:SENSe<n>:CORRection:TYPE?

Title: Calibration Correction Type

Description: Set the calibration to flex cal or standard cal for a given channel.

Parameter(s): <STANdard | FLEX>

Query Return: STAN | FLEX

SENSe Suffix Range: 1-4, Default = 1

Default Value: STANdard

:SENSe<n>:DFRequency:DATA <block data>
:SENSe<n>:DFRequency:DATA?

Title: Load Discrete Frequency

Description: This command load the given discrete frequency list data to the instrument. Data is transferred to/from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>.

The ASCII header specifies the number of data bytes of the file. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>. The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size.

Parameter(s): <block data>

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:DFRequency:DATA:SIZE?

Title: Discrete Frequency List Size

Description: Returns the number of points in the current discrete frequency list.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:CENTer?

Title: Center Frequency

Description: Sets the center frequency. Note that changing the value of the center frequency will change the value of the coupled parameters, Start Frequency and Stop Frequency.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 27000015000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

:SENSe<n>:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:SPAN?

Title: Span

Description: Sets the frequency span. Setting the value of <freq> to 0 Hz is the equivalent of setting the span mode to zero span. Note that changing the value of the frequency span will change the value of the coupled parameters Start Frequency and Stop Frequency and may change the Center Frequency.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 53999970000 Hz

Default Unit: Hz

Range: 0 Hz to 53999970000 Hz

www.tehencom.com

:SENSe<n>:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:STARt?

Title: Start Frequency

Description: Sets the start frequency. Note that changing the value of the start frequency will change the value of the coupled parameters, Center Frequency and Span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 5000 Hz

Default Unit: Hz

Range: 5000 Hz to 6000000000 Hz

:SENSe<n>:FREQuency:STEP?

Title: Frequency Step Size

Description: Returns the frequency step.

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 53999970 Hz

Default Unit: Hz

Range: 0 Hz to 53999970000 Hz

:SENSe<n>:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FREQuency:STOP?

Title: Stop Frequency

Description: Sets the stop frequency. Note that changing the value of the stop frequency will change the value of the coupled parameters, Center Frequency and Span.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 6000000000 Hz

Default Unit: Hz

Range: 5000 Hz to 6000000000 Hz

:SENSe<n>:FSEGment:ADD <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ |

www.tehencom.com

GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>]

Title: Segmented Sweep Add Segment

Description: This command adds a new frequency-sweep segment at the end of the active segment or the given segment index. Use the :SENSe:FSEGment:COUNt? MAX command to query for the maximum number of available segments. This command expected the following fields in the following order: 1. Start - start frequency 2. Stop - stop frequency 3. points - number of points from 2 to 16,001. Note total of all segments points cannot exceed max point limit of 160001. 4. IFBW - IF bandwidth 5. P1 Power - Port power for Port 1 6. SegmentIndex - the segment index to add the new segment below, optional. If not specified then the new segment will add after the active segment. Note new segement cannot exceed maximum frequency range, max point range, and total allowed segments of 100. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>]

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:FSEGment:ADD:AUTO [<numeric_value>]

Title: Segmented Sweep Add Auto Generated Segment

Description: This command adds a new frequency-sweep segment at the end of the active segment or the given segment index. The new segment will cover from the previous segment stop plus 1 Hz to 2 Hz. Note new segement cannot exceed maximum frequency range, max point range, and total allowed segments of 100. Note that segment update is not allowed when user calibration is on.

Parameter(s): [<numeric_value>]

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:FSEGment:COUNt?

Title: Total Segmented Sweep Segments

Description: Returns the number of segments in the frequency-based segmented sweep.

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 100

www.tehencom.com

:SENSe<n>:FSEGment:DELete [<numeric_value>]

Title: Segmented Sweep Delete Segment

Description: This command deletes the specified segment from the existing segmented sweep collection. If the segment number is not specified, the active segment will be deleted. When a segment is deleted, the active segment will not change unless the deleted segment is the last segment in the collection. In that case, the previous segment automatically becomes the active segment. Note that segment update is not allowed when user calibration is on.

Parameter(s): [<numeric_value>]

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:FSEGment:EDIT <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>]

Title: Segmented Sweep Edit Segment

Description: This command edit the frequency-sweep segment of the given segment index or the active segment if no segement index is given. This command expected the following fields in the following order: 1. Start - start frequency 2. Stop - stop frequency 3. points - number of points from 2 to 16,001 4. IFBW - IF bandwidth 5. P1 Power - Port power for Port 1 6. SegmentIndex - the segment index to be edited, optional. If not specified then the edit segment will be the active segment. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>]

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:FSEGment:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ}

:SENSe<n>:FSEGment:FREQuency:STARt?

Title: Selected Segmented Sweep Frequency Start

Description: This command sets or queries the current selected frequency-based segmented sweeps start frequency.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 30000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

www.tehencom.com

:SENSe<n>:FSEGment:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FSEGment:FREQuency:STOP?

Title: Selected Segmented Sweep Frequency Stop

Description: This command sets or queries the current selected frequency-based segmented sweep stop frequency. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 54000000000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

:SENSe<n>:FSEGment:POINts?

Title: Total Segmented Sweep Points Count

Description: Returns the total point counts in the frequency-based segmented sweep.

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1001

Range: 2 to 16001

:SENSe<n>:FSEGment:SELect <numeric_value>
:SENSe<n>:FSEGment:SELect?

Title: Segmented Sweep Select Segment

Description: This command sets the given segment index as the active segment from the existing frequency-based segmented sweep collection on the given channel.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 100

www.tehencom.com

:SENSe<n>:FSEGment:STARt?

Title: Segmented Sweep Frequency Start

Description: Returns the start frequency of the frequency-based segmented sweep.

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 30000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

:SENSe<n>:FSEGment:STOP?

Title: Segmented Sweep Frequency Stop

Description: Returns the stop frequency of the frequency-based segmented sweep. Note that segment update is not allowed when user calibration is on.

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 54000000000 Hz

Default Unit: Hz

Range: 30000 Hz to 54000000000 Hz

:SENSe<n>:FSEGment:SWEep:IFBW <numeric_value> {HZ | KHZ | MHZ | GHZ}
:SENSe<n>:FSEGment:SWEep:IFBW?

Title: Selected Segmented Sweep IFBW

Description: This command sets or queries the current selected frequency-based segmented sweep IF bandwidth. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ}

Query Return: Numeric (Hz)

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1000 Hz

Default Unit: Hz

Range: 10 Hz to 1000000 Hz

www.tehencom.com

:SENSe<n>:FSEGment:SWEep:POINt <numeric_value>
:SENSe<n>:FSEGment:SWEep:POINt?

Title: Selected Segmented Sweep Point

Description: This command sets or queries the current selected frequency-based segmented sweep number of sweep point. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1000

Range: 2 to 16001

:SENSe<n>:HOLD:FUNCtion:RF[:STATe] <0 | 1 | ON | OFF>
:SENSe<n>:HOLD:FUNCtion:RF[:STATe]?

Title: RF In Hold

Description: Sets or gets the RF power output state when the sweep is in hold mode. When set to ON or 1, the RF is enabled in the hold mode. When set to OFF or 0, the RF is disabled in the Hold mode.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

SENSe Suffix Range: 1-4, Default = 1

Default Value: ON

:SENSe<n>:SWEep:MODE <CONTinuous|SINGle>
:SENSe<n>:SWEep:MODE?

Title: Set Sweep Trigger Mode

Description: Specifies whether the sweep/measurement is set to triggered continuously (CONTinuous), or triggered once and then hold (SINGle). Sweep/measurement restarts when the sweep trigger mode changes. If :TRIGger[:SEQuence][:REMote]:SINGle is received when sweep trigger mode is set to CONTinous, the command is ignored and results an error of -213.

Parameter(s): <CONTinuous|SINGle>

Query Return: CONT|SING

SENSe Suffix Range: 1-4, Default = 1

Default Value: CONTinuous

www.tehencom.com

:SENSe<n>:SWEep:POINt <numeric_value>
:SENSe<n>:SWEep:POINt?

Title: Display Point Count

Description: Changes the number of display points the instrument currently measures. Increasing the number of display points can improve the resolution of measurements but will also increase the sweep time.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1000

Range: 2 to 16001

:SENSe<n>:SWEep:RFIMmunity <HIGH|LOW>
:SENSe<n>:SWEep:RFIMmunity?

Title: RF Immunity

Description: This command sets or queries the RF immunity state on the given channel.

Parameter(s): <HIGH | LOW>

Query Return: HIGH | LOW

SENSe Suffix Range: 1-4, Default = 1

Default Value: LOW

:SENSe<n>:SWEep:STATe <RUN|HOLD>
:SENSe<n>:SWEep:STATe?

Title: Set Sweep Run/Hold State

Description: To Run or Hold the sweep/measurement.

Parameter(s): <RUN | HOLD>

Query Return: RUN | HOLD

SENSe Suffix Range: 1-4, Default = 1

Default Value: RUN

:SENSe<n>:SWEep:TIME?

Title: Get Sweep Time

Description: Gets the Sweep Time.

SENSe Suffix Range: 1-4, Default = 1

www.tehencom.com

:SENSe<n>:SWEep:TYPE <SEGMented|LINear>
:SENSe<n>:SWEep:TYPE?

Title: Sweep Type

Description: Specifies the sweep type.

Parameter(s): <SEGMented | LINear>

Query Return: SEGM | LIN

SENSe Suffix Range: 1-4, Default = 1

Default Value: LINear

:SENSe<n>:TRACe<n>:AMPLitude:UNIT?

Title: Trace Amplitude Unit

Description: Gets the amplitude unit for the given channel and trace. Unit return is based on the current trace graph type. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Query Return: NONE | DB | DEGR | SEC | OHMS | SIEM | LOGP | LINP

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: NONE

:SENSe<n>:TRACe<n>:DOMain <FREQuency|TIME|DISTance|FGT>
:SENSe<n>:TRACe<n>:DOMain?

Title: Trace Domain

Description: Defines the domain for the given channel and trace. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes. Note that the TIME and FGT domains are only available if option 2 is installed.

Parameter(s): <FREQuency | TIME | DISTance | FGT>

Query Return: FREQ | TIME | DIST | FGT

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: FREQuency

www.tehencom.com

:SENSe<n>:TRACe<n>:SPARams <S11|S21|USR|ES21>
:SENSe<n>:TRACe<n>:SPARams?

Title: Response Type

Description: Sets the S-parameter for the channel and trace specified. For response type ES21, this will set the graph type to MLOG. ** S12 and S22 are available only if Full 2-Port S-Parameter option is installed.

Parameter(s): <S11|S21|USR|ES21>

Query Return: S11|S21|USR|ES21

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: S11

:SENSe<n>:TRACe<n>:SPARams:USR:DENominator <A1|B1|B2|ONE>
:SENSe<n>:TRACe<n>:SPARams:USR:DENominator?

Title: User-defined S-parameter denominator.

Description: Sets the user-defined S-parameter denominator. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <A1|B1|B2|ONE>

Query Return: A1|B1|B2|ONE

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: A1

:SENSe<n>:TRACe<n>:SPARams:USR:NUMerator <A1|B1|B2|ONE>
:SENSe<n>:TRACe<n>:SPARams:USR:NUMerator?

Title: User-defined S-parameter numerator.

Description: Sets the user-defined S-parameter numerator. Note that the number of available trace suffixes is application dependent and may differ from the listed TRACe Suffix Range. Use the :SENSe:TRACe:TOTal? MAX command to query for the maximum number of available trace suffixes.

Parameter(s): <A1|B1|B2|ONE>

Query Return: A1|B1|B2|ONE

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: A1

www.tehencom.com

:SENSe<n>:TRACe<n>:SPARams:USR:PORT <numeric_value>
:SENSe<n>:TRACe<n>:SPARams:USR:PORT?

Title: User-defined S-parameter driving Port

Description: Sets the user-defined S-parameter power source port.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

TRACe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 1

:SENSe<n>:TRACe:PRESet

Title: Preset Traces

Description: This command preset all traces for the given channel. This would set the Trace Display format to R2C2 and set Trace 1 to graph type Log Mag, S11 Trace 2 to graph type Log Mag, S21 Trace 3 to graph type Log Mag, S12 (Smith, S11 if option 12 is not installed) Trace 4 to graph type Log Mag, S22 (Smith, S21 if option 12 is not installed)

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:TRACe:SELect <numeric_value>
:SENSe<n>:TRACe:SELect?

Title: Active Trace

Description: This command selects the given trace number as the active trace on the specified channel.

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 1

Range: 1 to 4

:SENSe<n>:TRACe:TOTal <numeric_value>
:SENSe<n>:TRACe:TOTal?

Title: Number of Traces

Description: Command sets the number of traces on the specified channel

Parameter(s): <numeric_value>

Query Return: Numeric

SENSe Suffix Range: 1-4, Default = 1

Default Value: 2

Range: 1 to 4

www.tehencom.com

:SENSe<n>:USBDevice:INSTacal:INFormation?

Title: InstaCal Information Query

Description: Returns the InstaCal information. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. The response information contains the following: { "firmwareVersion": <version number>, "frequencyRange": <minimum frequency in Hz, maximum frequency in Hz>, "isConnected": <true|false> "model": <model> "serialNumber": <serial number>, } Note that only one Instacal is supported at a time. The command will only return the information of the first InstaCal unit that is being connected.

SENSe Suffix Range: 1-4, Default = 1

:SENSe<n>:USBDevice:PSENsor:INFormation?

Title: USB Power Sensor Information Query

Description: Returns the USB Power Sensor (i.e. MA2xxA/MA3xxA) information. The response is formatted as a JSON (http://json.org/) array of name, value pair result objects. The USB SiteMaster information contains the following:

{ "model": <model>, "frequencyRange": <minimum frequency in Hz, maximum frequency in Hz>, "serialNumber": <serial number>, "firmwareVersion": <version number>, "isConnected": <true|false> } Note that only one power sensor is supported at a time. The command will return the information of the first sensor connected.

SENSe Suffix Range: 1-4, Default = 1

[:SENSe]:FREQuency:SPAN:FULL

Title: Set to Full Span

Description: Sets the frequency span to full span. Note that changing the value of the frequency span will change the value of the coupled parameters, Start Frequency and Stop Frequency and may change the Center Frequency.

:SOURce<n>:FSEGment:POWer:PORT<n> <numeric_value> {DBM}
:SOURce<n>:FSEGment:POWer:PORT<n>?

Title: Selected Segmented Sweep Power Level

Description: Sets or queries the current selected frequency-based segmented sweep power level for the indicated port. Only Port 1 is available for SiteMaster applications. Note that segment update is not allowed when user calibration is on.

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0 dBm

Default Unit: dBm

Range: -50 dBm to 10 dBm

www.tehencom.com

:SOURce<n>:POWer:CORRection:COLLect:ABORt

Title: Power Calibration Abort

Description: Abort PCAL step of the power calibration if it's currently running.

SOURce Suffix Range: 1-4, Default = 1

:SOURce<n>:POWer:CORRection:COLLect[:ACQuire] <ZERO|PCAL>

Title: Perform Power Calibration Step

Description: This command performs a power calibration step for the current selected port. This command takes a parameter <cal step> <cal step> can be either ZERO | PCAL. ZERO for zeroing the usb power sensor. PCAL for performing a power calibration.

Parameter(s): <ZERO | PCAL>

Query Return: ZERO | PCAL

SOURce Suffix Range: 1-4, Default = 1

Default Value: PCAL

:SOURce<n>:POWer:CORRection:COLLect:APPLy

Title: Apply Power Calibration Calculation

Description: Complete the Power Calibration

SOURce Suffix Range: 1-4, Default = 1

:SOURce<n>:POWer:CORRection:PORT:SELect <PORT1>
:SOURce<n>:POWer:CORRection:PORT:SELect?

Title: Power Correction Port Select

Description: This command sets the power correction port for the specified port PORT1 | PORT2. Port 2 is available only if option 02xx is installed. For SiteMaster VNA, only Port 1 is available.

Parameter(s): <PORT1>

Query Return: PORT1

SOURce Suffix Range: 1-4, Default = 1

Default Value: PORT1

www.tehencom.com

:SOURce<n>:POWer:PORT<n>:CORRection:COLLect:STATus?

Title: Power Calibration Status

Description: This command returns the power calibration status. The command return 0 if calibration is not in progress, 1 if calibration is in progress, 2 if calibration has been aborted, 3 if applying power calibration, and 4 if a calibration has been completed. Port 2 is available only if option 02xx is installed. For SiteMaster VNA, only Port 1 is available.

Query Return: Numeric

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 4

:SOURce<n>:POWer:PORT<n>:CORRection:STATe <0 | 1 | ON | OFF>
:SOURce<n>:POWer:PORT<n>:CORRection:STATe?

Title: Power Calibration State

Description: The set command turns ON/OFF flat power correction for the indicated channel and port.

The query command returns the ON/OFF status of flat power correction for the indicated channel and port. Port 2 is available only if option 02xx is installed. For SiteMaster VNA, only Port 1 is available.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: OFF

:SOURce<n>:POWer:PORT<n>:CORRection:TARGet <numeric_value> {DBM}
:SOURce<n>:POWer:PORT<n>:CORRection:TARGet?

Title: Target Power

Description: This command sets the power level target for the flat power correction calibration on the indicated channel and port. Returns the power level target for the flat power correction calibration on the indicated channel and port. Port 2 is available only if option 02xx is installed. For SiteMaster VNA, only Port 1 is available.

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0 dBm

Default Unit: dBm

Range: -50 dBm to 10 dBm

www.tehencom.com

:SOURce<n>:POWer:PORT<n>[:LEVel][:IMMediate][:AMPLitude] <numeric_value>
:SOURce<n>:POWer:PORT<n>[:LEVel][:IMMediate][:AMPLitude]?

Title: Power Level

Description: Sets or gets the power level of the indicated port. Only Port 1 is available for SiteMaster applications.

Parameter(s): <numeric_value>

Query Return: Numeric (DBM)

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0 dBm

Default Unit: dBm

Range: -50 dBm to 10 dBm

:SOURce<n>:RECeiver:CORRection:COLLect:ABORt

Title: Receiver Calibration Abort

Description: Abort THRU step of the receiver calibration if it's currently running.

SOURce Suffix Range: 1-4, Default = 1

:SOURce<n>:RECeiver:CORRection:COLLect[:ACQuire]

Title: Perform Receiver Calibration Step

Description: This command performs a receiver calibration THRU step for the current selected port.

SOURce Suffix Range: 1-4, Default = 1

:SOURce<n>:RECeiver:CORRection:COLLect:APPLy

Title: Apply Receiver Calibration Calculation

Description: Completes the receiver calibration.

SOURce Suffix Range: 1-4, Default = 1

:SOURce<n>:RECeiver:CORRection:PORT:SELect <PORT2>
:SOURce<n>:RECeiver:CORRection:PORT:SELect?

Title: Receiver Cal Port Select

Description: This command sets the receiver calibration port for the specified port {1|2}. Port 1 is available only if option 02xx is installed. For SiteMaster VNA, only Port 2 is available.

Parameter(s): <PORT2>

Query Return: PORT2

SOURce Suffix Range: 1-4, Default = 1

Default Value: PORT2

www.tehencom.com

:SOURce<n>:RECeiver:PORT<n>:CORRection:COLLect:STATus?

Title: Receiver Calibration Status

Description: This command returns the receiver calibration status. The command return 0 if calibration is not in progress, 1 if calibration is in progress, 2 if calibration has been aborted, 3 if applying receiver calibration, and 4 if a calibration has been completed. Port 1 is available only if option 02xx is installed. For SiteMaster VNA, only Port 2 is available.

Query Return: Numeric

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0

Range: 0 to 4

:SOURce<n>:RECeiver:PORT<n>:CORRection:STATe <0 | 1 | ON | OFF>
:SOURce<n>:RECeiver:PORT<n>:CORRection:STATe?

Title: Receiver Calibration State

Description: The set command turns ON/OFF the flat receiver correction for the indicated channel and port. The query command returns the ON/OFF status of the flat receiver correction for the indicated channel and port {1|2}. For SiteMaster VNA, only Port 2 is available.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: OFF

:SOURce<n>:RECeiver:PORT<n>:CORRection:TARGet <numeric_value> {DBM}
:SOURce<n>:RECeiver:PORT<n>:CORRection:TARGet?

Title: Receiver Target Power Level

Description: This command sets the power level target for the receiver flatness correction calibration on the indicated channel and port. Returns the power level target for the flat power correction calibration on the indicated channel and port. Port 1 is available only if option 02xx is installed. For SiteMaster VNA, only Port 2 is available.

Parameter(s): <numeric_value> {DBM}

Query Return: Numeric (DBM)

PORT Suffix Range: 1-2, Default = 1

SOURce Suffix Range: 1-4, Default = 1

Default Value: 0 dBm

Default Unit: dBm

Range: -50 dBm to 10 dBm

www.tehencom.com

:STATus:OPERation[:EVENt]?

Title: Get Operation Status

Description: This command requests information about the current status of the instrument. Each bit of the return value represents some operation. Only a subset of the bits are implemented for each application. The number returned is the decimal representation of the bit-wise OR of the enabled bits:

Bit Decimal Value Description

0 1 Not implemented

1 2 Not implemented

2 4 Not implemented

3 8 Not implemented

4 16 Not implemented

5 32 Not implemented

6 64 Not implemented

7 128 Not implemented

8 256 Sweep Complete

This bit is set to 0 when the command :TRIGger[:SEQuence][:REMote]:SINGle is sent to trigger a sweep. It will have a value of 256 when the sweep has completed. When the command :TRIGger[:SEQuence][:IMMediate][:REMote] is sent to trigger the sweep, it will always return a value of 0.

9 512 Not implemented

10 1024 Not implemented

11 2048 Not implemented

12 4096 Not implemented

13 8192 Not implemented

14 16384 Not implemented

15 0 Will always be 0

www.tehencom.com

:TRACe[:DATA]? <numeric_value>

Title: Trace Data

Description: Return raw trace data in real and imaginary pair. Data is transferred from the instrument as an IEEE definite length arbitrary block response, which has the form <header><block>. The format of the block data depends on the current data format setting (FORMat[:READings][:DATA]).

This command takes a single integer parameter specifying the trace number to transfer. If the parameter value is out of the range of valid trace numbers, the first trace (1) will be transferred. (Currently only one trace is supported, so this parameter has no effect.)

The ASCII header specifies the number of data bytes. It looks like #AX, where A is the number of digits in X and X is the number of bytes in the <block>.

The first character is the literal ascii hash '#' 043. The second character (A) is a single ascii digit '1' to '9' describing the number of bytes in the length section (X). This number is called nlength. The next nlength bytes make up an ascii string of digits '1' to '9' describing the length of the <block> data.

For example, if the first 6 bytes are #49999, then the nlength is 4. The 4 bytes of length are 9999. After that follows the <block>, which would be 9999 bytes in size. The query command will return a #0 if data is invalid for the active trace.

Parameter(s): <numeric_value>

:TRIGger<n>[:SEQuence]:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR}
:TRIGger<n>[:SEQuence]:DELay?

Title: Trigger Delay

Description: The trigger delay is the amount of time between when an external trigger event happens and when the measurement starts.

Parameter(s): <numeric_value> {PS | NS | US | MS | S | MIN | HR}

Query Return: Numeric (s)

TRIGger Suffix Range: 1-4, Default = 1

Default Value: 0 s

Default Unit: s

Range: 0 s to 10000 s

www.tehencom.com

:TRIGger<n>[:SEQuence]:SOURce <INTernal|EXT1|EPO1>
:TRIGger<n>[:SEQuence]:SOURce?

Title: Trigger Source

Description: The trigger source indicates whether or not to look for a trigger condition before making measurements. INTernal trigger source means the sweep will be automatically triggered when set to continuous mode. EXTx trigger source means that sweeps will only be trigger via an external condition at the trigger IN port. EPOx trigger source means each point in the sweep will look for an external trigger before proceeding to the next point. Note that only full reversing products support the EPO2 and EXT2 arguments. For products that support trigger port direction settings, the ports will only be available as trigger sources if the trigger direction for that port is set to IN.

Parameter(s): <INTernal | EXT1 | EPO1>

Query Return: INT | EXT1 | EPO1

TRIGger Suffix Range: 1-4, Default = 1

Default Value: INTernal

:TRIGger[:SEQuence][:IMMediate][:REMote]

Title: Restart Continuous Sweep

Description: Restart the sweep/measurement in continuous mode. If :SENSe{[1] | 2 | 3 | 4}:SWEep:MODE is set to SINGle, this command is ignored and results an error -230.

:TRIGger[:SEQuence][:REMote]:SINGle

Title: Initiate Single Sweep

Description: Initiates a sweep/measurement. If :SENSe{[1] | 2 | 3 | 4}:SWEep:MODE is set to CONTinuous, or if :SENSe{[1] | 2 | 3 | 4}:SWEep:MODE is set to SINGle but the current sweep has not completed yet, this command is ignored. Use this command in combination with :STATus:OPERation? or *OPC? to synchronize the capture of one complete set of data. When this command is sent, the "sweep complete" bit of :STATus:OPERation? is set to 0, indicating that the measurement has not completed. The data collection is then triggered. The controlling program can poll :STATus:OPERation? to determine the status. When the "sweep complete" bit is set to 1, data is ready to be retrieved.

This command is also overlapped, so alternatively, *OPC? can be used to wait for completion of the measurement without polling. When this command is received, the pending operation bit is set. The pending operation will finish once the sweep/measurement is done. Clients can use *OPC? to 'block' until the sweep/measurement is completed.

2-7 Vector Volt Meter Commands

:FETCh:VVM:DATA?

Title: Fetch Measurement Data

Description: Returns the measurement data in comma separated values depending upon the measurement type and the measurement format. If no signal is detected, query returns a blank string.

www.tehencom.com

:FETCh:VVM:TABLe:MEASurement? <ABSolute|RELative>,[<numeric_value>]

Title: Fetch Measurement Data In The Table

Description: Returns the absolute or relative data at a specified cable index in the cable table display.

Data must be memorized to that location before it can be returned. If no signal is detected, query returns a blank string.

First parameter is the data type to return.

Second parameter is the optional numerical index of the data location in the table display format. If no value is provided,

the value from the [:SENSe]:VVM:DATA:TABLe:CABLe:SELect command will be used.

Parameter(s): <ABSolute|RELative>,[<numeric_value>]

:FETCh:VVM:ZERO:REFerence?

Title: Fetch Zero Reference Data

Description: Returns the reference data in comma separated values depending upon

the measurement type and the measurement format e.g "0.1, 0.1".

If no reference was saved, query returns a blank string.

:INITiate[:IMMediate]

Title: Initiate Single Sweep

Description: Initiates a single sweep/measurement. If [:SENSe]:VVM:AVERage:MODE is set to CONTinuous regardless of

whether :INITiate:VVM:HOLD is ON or OFF, or if [:SENSe]:VVM:AVERage:MODE is set to SINGle but the current sweep has

not completed yet, this command is ignored and will generate an error.

This command is overlapped. It can be used in combination with *OPC? to synchronize the capture of one complete set of data.

When this command is received, the pending operation bit is set. The pending operation will finish

once the sweep/measurement is done. Clients can use *OPC? to 'block' until the sweep/measurement is completed.

:INITiate:VVM:HOLD <0 | 1 | ON | OFF>
:INITiate:VVM:HOLD?

Title: Set Sweep State

Description: Command sets the sweep state between run and hold. This command is ignored in external trigger mode. Query returns the sweep state, run or hold. Query returns 1 for hold mode, and returns 0 for run mode.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

www.tehencom.com

:MMEMory:LOAD <string>

Title: Load Data Files

Description: Loads a file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file \ (Not available with Secure Data Option)

smvvm : measurement file. For example to save a setup file: MMEMory:STORe "Internal/example_setup_file.stp"

Parameter(s): <string>

:MMEMory:STORe <string>

Title: Store Data Files

Description: Stores a data file of the type specified by the filename extension. The parameter must contain the MSUS followed by '/' and file path. MSUS is the mass storage device to store the file to. See MMEMory:CATalog:MSUSs? for information on obtaining the list of available devices. The following is a list of supported file extension: stp: setup file \ (Not available with Secure Data Option)

smvvm : measurement file. txt : tab-delimited text data file. csv : comma separated text data file. For example to save a setup file: MMEMory:STORe "Internal/example_setup_file.stp"

Parameter(s): <string>

[:SENSe]:VVM:AVERage:CLEar

Title: Reset Measurement Averaging

Description: Clears and restarts averaging of the measurement data.

[:SENSe]:VVM:AVERage:COUNt <numeric_value> | DEFault | MINimum | MAXimum

[:SENSe]:VVM:AVERage:COUNt? [DEFault | MINimum | MAXimum]

Title: Sweep Averaging Count

Description: Command sets number of sweeps to be averaged. When number of sweep averaging is set to be greater than 1, averaging is turned on.

Query Return: Numeric

Set Command Parameter(s): <numeric_value> | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

Default Value: 1

Range: 1 to 1000

www.tehencom.com

[:SENSe]:VVM:AVERage:MODE <SINGle|CONTinuous>
[:SENSe]:VVM:AVERage:MODE?

Title: Averaging Mode

Description: Averaging mode has two values: SINGle and CONTinuous. Each averaging mode will function differently in conjunction with :INITiate[:IMMediate] depending on the RUN/HOLD state as described below:

For SINGle and HOLD - Triggering a measurement update will put the instrument into RUN until the average

count ([:SENSe]:VVM:AVERage:COUNt) is reached, then will automatically go back into HOLD.

For SINGle and RUN - Triggering a measurement update will run until the average count ([:SENSe]:VVM:AVERage:COUNt) is reached,

then will automatically go into HOLD.

For CONTinuous and RUN/HOLD - Triggering a measurement update will result in an error.

Parameter(s): <SINGle|CONTinuous>

Query Return: SING|CONT

Default Value: CONTinuous

[:SENSe]:VVM:CALibration:STATe?

Title: State of Calibrated Measurements

Description: Query returns the state of calibrated measurements depending on the calibration collection type. 0 means no calibration was done. For calibration types RFP1 & RRP1, return value is '1'. For calibration types RFP2 & RRP2, return value is '2'. For calibration types TRFP & TRRP, return value is '4'. For calibration types FP2P & RP2P, return value is '5'.

[:SENSe]:VVM:CORRection:COLLect:ABORt

Title: Abort Calibration

Description: Aborts all steps of the RF calibration

[:SENSe]:VVM:CORRection:COLLect[:ACQuire]
<OPEN|SHORt|LOAD|THRU>,<numeric_value>

Title: Perform Calibration Step

Description: Command performs a calibration step with the given two parameters.

For cal step OPEN|SHORt|LOAD|THRU, use port numbers 1 and 2. For cal step THRU, use 1 for forward path, 2 for reverse path.

Please note that port number 2 is unavailable for certain models. Only port number 1 will be accessible for those models.

Parameter(s): <OPEN|SHORt|LOAD|THRU>,<numeric_value>

www.tehencom.com

[:SENSe]:VVM:CORRection:COLLect:ACQuire:STATus? <OPEN|SHORt|LOAD|THRU>,<numeric_value>

Title: Calibration Step Status

Description: Query returns 1 if a specified cal step is completed. Otherwise, query returns 0. If no query parameters are provided, then the last cal step status is returned. If no cal was performed, then the query returns 0.

For cal step OPEN|SHORt|LOAD|THRU, use port numbers 1 and 2. For cal step THRU, use 1 for forward path, 2 for reverse path.

Please note that port number 2 is unavailable for certain models. Only port number 1 will be accessible for those models.

Parameter(s): <OPEN|SHORt|LOAD|THRU>,<numeric_value>

[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>:CATalog?

Title: Cal Kit Catalog For The Selected Port

Description: Query returns the available calibration kits for the selected port. The available ports depend on the calibration collection type.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

PORT Suffix Range: 1-2, Default = 1

Default Value:

OSLN50,OSLN50-1,OSLN50A-8,OSLN50A-18,TOSLN50A-8,TOSLN50A-18,22N50,22N75,26N50,26N75

[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>:INFormation?

Title: Calibration Kit Data

Description: Query returns the calibration kit data as a comma-delimited string with description-value pairs for the selected port.

The available ports depend on the calibration collection type and the model.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

PORT Suffix Range: 1-2, Default = 1

www.tehencom.com

[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string>
[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>[:SELect]?

Title: Set Calibration Kit

Description: Command sets the calibration kit for the selected port. The available ports depend on the calibration collection type and the model.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those model.for those models.

Before setting the calibration kit, make sure the device is set to the appropriate connector type (refer [:SENSe]:VVM:CORRection:COLLect:PORT:CONNector).

A mismatch between the connector type and the given calibration kit will result in a command error.

Parameter(s): <string>

PORT Suffix Range: 1-2, Default = 1

Default Value: OSLN50

[:SENSe]:VVM:CORRection:COLLect:INFormation?

Title: Calibration Information

Description: This command returns information about the current and active calibration settings. The response is formatted as a nested JSON array of name and value pairs. Following is an example of the response: [{"CurrentSettings":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}, {"name":"Valid Cal Window","value":"--"}, {"name":"Cal Status","value":"--"}, {"name":"Cal Type","value":"Full Reflection - S11"}, {"name":"Cal Method","value":"SOLT"}, {"name":"Cal Line Type","value":"Coax"}, {"name":"Cal Kit Port 1","value":"OSLK50"}, {"name":"Cal Kit Port 2","value":"OSLK50"}, {"name":"CW Frequency","value":"0.03 MHz"}, {"name":"IFBW","value":"0.001 MHz"}, {"name":"Source Power Level Port 1","value":"0 dBm"}, {"name":"Source Power Level Port 2","value":"0 dBm"}, {"ActiveCalSettings":[{"name":"Date","value":"--"}, {"name":"Time","value":"--"}, {"name":"Internal Temperature","value":"--"}, {"name":"Valid Cal Window","value":"--"}, {"name":"Cal Status","value":"--"}, {"name":"Cal Type","value":"--"}, {"name":"Cal Method","value":"--}, {"name":"Cal Line Type","value":"--"}, {"name":"Cal Kit Port 1","value":"--"}, {"name":"Cal Kit Port 2","value":"--"}, {"name":"CW Frequency","value":"--"}, {"name":"IFBW","value":"--"}, {"name":"Source Power Level Port 1","value":"--"}, {"name":"Source Power Level Port 2","value":"--"},] For settings that are not available, the value will be "--".

[:SENSe]:VVM:CORRection:COLLect:INFormation:FACTory:INFormation?

Title: Factory Calibration Header Query

Description: This command returns the factory calibration header information as ASCII of JSON array with the following information:

[{"CalibrationInfo":[{"name":"Date","value":"30 Sep 2020"}, {"name":"Time","value":"14:51:29"}, {"name":"Internal Temperature","value":"60.78 C / 141.404 F"}]},]\

[:SENSe]:VVM:CORRection:COLLect:INFO:STATus?

Title: Calibration Status

Description: Query returns 0 if calibration is not in progress 1 if calibration is in progress 2 if calibration was aborted 3 if cal-coefficients are being calculated 4 if calibration has completed.

www.tehencom.com

[:SENSe]:VVM:CORRection:COLLect:INITialize

Title: Reset Calibration Step

Description: This command resets the calibration steps for the selected cal type. The command must be issued at the start of a user calibration prior to issuing the component data acquisition commands. Issuing this command will also abort the thru update. See also :SENSe:CORRection:COLLect:ACQuire:DATA?

[:SENSe]:VVM:CORRection:COLLect:LOAD

Title: Calibration Load Step

Description: Perform 'Load' step of calibration.

[:SENSe]:VVM:CORRection:COLLect:OPEN

Title: Calibration Open Step

Description: Perform 'Open' step of calibration.

[:SENSe]:VVM:CORRection:COLLect:PORT<n>:CONNector:CATalog?

Title: Connector Catalog

Description: Command returns a string containing every accepted connector type.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

PORT Suffix Range: 1-2, Default = 1

[:SENSe]:VVM:CORRection:COLLect:PORT<n>:DCONnector <MK|MN|MC|M716|MS|MV|M4P310|FK|FN|FC|F716|FS|FV|F4P310>
[:SENSe]:VVM:CORRection:COLLect:PORT<n>:DCONnector?

Title: DUT Connector Type

Description: Sets or queries the DUT connector type for the indicated port. The available connector types varies by the current Cal Method and Line Type setup. A list of available connector types can be retrieved using the command :SENSe:VVM:CORRection:COLLect:CONNector:CATalog? The DUT connector type is the opposite gender of the port connector type that sets or queries using :SENSe:VVM:CORRection:COLLect:PORT:CONNector. Available connector types are: Connector Type Description MK K(male) MN N(male) MV V(male) MS SMA(male) MC TNC(male) M716 716(male) M4P310 4.3-10(male) FK K(female) FN N(female) FV V(female) FS SMA(female) FC TNC(female) F716 716(female) F4P310 4.3-10(female) Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

Parameter(s): <MK|MN|MC|M716|MS|MV|M4P310|FK|FN|FC|F716|FS|FV|F4P310>

Query Return: MK|MN|MC|M716|MS|MV|M4P310|FK|FN|FC|F716|FS|FV|F4P310

PORT Suffix Range: 1-2, Default = 1

Default Value: MN

[:SENSe]:VVM:CORRection:COLLect:SAVE

Title: Perform Calibration

Description: Complete an RF Cal and perform coefficient calculation.

www.tehencom.com

[:SENSe]:VVM:CORRection:COLLect:SHORt

Title: Calibration Short Step

Description: Perform 'Short' step of calibration.

[:SENSe]:VVM:CORRection:COLLect:TUPDate

Title: Setup For Thru Update

Description: This command allows for a thru calibration step to be re-performed.

It only applies for calibrations with thru steps and applies only if that supporting calibration is currently enabled. The cal step information will be updated to be that of the thru calibration step.

[:SENSe]:VVM:CORRection:COLLect:TYPE <RFP1|RRP1|TRFP|FP2P>
[:SENSe]:VVM:CORRection:COLLect:TYPE?

Title: Calibration Collection Type

Description: Sets and queries the calibration collection type.

Parameter(s): <RFP1|RRP1|TRFP|FP2P>

Query Return: RFP1|RRP1|TRFP|FP2P

Default Value: RFP1

[:SENSe]:VVM:CORRection:COLLect:TYPE:ACTive?

Title: Active Calibration Type

Description: Gets the current active calibration type. Please refer to the command :SENSe:VVM:CORRection:COLLect:TYPE for a description of the available calibration type. Note that this command will return 'NONE' if no calibration is currently active.

Query Return: RFP1|FP2P|RRP1|TRFP|RFP2|RP2P|RRP2|TRRP|NONE

Default Value: NONE

[:SENSe]:VVM:CORRection[:STATe] <0 | 1 | ON | OFF>
[:SENSe]:VVM:CORRection[:STATe]?

Title: Calibration Correction State

Description: Sets calibration correction state. Query returns 1 if RF cal is on. Otherwise, it returns 0.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

Default Value: OFF

[:SENSe]:VVM:DISPlay:FORMat <CW|TABLe>
[:SENSe]:VVM:DISPlay:FORMat?

Title: Display Format

Description: Sets and queries the VVM display format.

Parameter(s): <CW|TABLe>

Query Return: CW|TABL

Default Value: CW

www.tehencom.com

[:SENSe]:VVM:DISPlay:RESolution <ONEDigit|TWODigit>
[:SENSe]:VVM:DISPlay:RESolution?

Title: Display Resolution

Description: Sets and queries the display resolution.

Parameter(s): <ONEDigit|TWODigit>

Query Return: ONED|TWOD

Default Value: ONEDigit

[:SENSe]:VVM:FORMat <LMP|LNMP|VSWR|IMPedance>
[:SENSe]:VVM:FORMat?

Title: Measurement Format

Description: Sets and queries the VVM measurement format of the active measurement. Note that certain measurement format will be unavailable base on the measurement type set.

Parameter(s): <LMP|LNMP|VSWR|IMPedance>

Query Return: LMP|LNMP|VSWR|IMP

Default Value: LMP

[:SENSe]:VVM:FREQuency:CW <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum
[:SENSe]:VVM:FREQuency:CW? [DEFault | MINimum | MAXimum]

Title: Center Frequency

Description: Sets and queries the center frequency.

Query Return: Numeric (Hz)

Set Command Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

Default Value: 100000000 Hz

Default Unit: Hz

Range: 5000 Hz to 6000000000 Hz

[:SENSe]:VVM:IMPedance <numeric_value> | DEFault | MINimum | MAXimum
[:SENSe]:VVM:IMPedance? [DEFault | MINimum | MAXimum]

Title: Reference Impedance

Description: Command sets the reference impedance in Ohms. Query returns the reference impedance in Ohms.

Query Return: Numeric

Set Command Parameter(s): <numeric_value> | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

Default Value: 50

Range: 50 to 75

www.tehencom.com

[:SENSe]:VVM:MEASurement:TYPE <P1T|P1R|A/B|B/A|A|B>
[:SENSe]:VVM:MEASurement:TYPE?

Title: Measurement Type

Description: Sets and queries the VVM active measurement type.

Parameter(s): <P1T | P1R | A/B | B/A | A | B>

Query Return: P1T | P1R | A/B | B/A | A | B

Default Value: P1R

[:SENSe]:VVM:PORT<n>:RFON[:STATe] <0 | 1 | ON | OFF>
[:SENSe]:VVM:PORT<n>:RFON[:STATe]?

Title: RF Power Output State

Description: Command sets and queries the RF power output state of the indicated port.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

Parameter(s): <0 | 1 | ON | OFF>

Query Return: 0 | 1

PORT Suffix Range: 1-2, Default = 1

Default Value: OFF

[:SENSe]:VVM:SWEep:IFBW <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum
[:SENSe]:VVM:SWEep:IFBW? [DEFault | MINimum | MAXimum]

Title: IF Bandwidth

Description: Sets and queries the IF bandwidth.

Query Return: Numeric (Hz)

Set Command Parameter(s): <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

Default Value: 10 Hz

Default Unit: Hz

Range: 10 Hz to 100000 Hz

www.tehencom.com

[:SENSe]:VVM:TABLe:CABLe:NAME <string>,[<numeric_value>]
[:SENSe]:VVM:TABLe:CABLe:NAME? [<numeric_value>]

Title: Cable Name

Description: Sets or queries the cable name at a particular index of the cable table display.

The set command takes in one required parameter and one optional parameter.

The required first paramter is the cable name to set, and the optional second parameter is the index of the cable in the table display to set. If the second paramter is not given, the value from the [:SENSe]:VVM:DATA:TABLe:CABLe:SELect command will be used.

The query command takes in one optional parameter. The optional parameter is the index of the cable in the table display to set. If the second paramter is not given, the value from the [:SENSe]:VVM:DATA:TABLe:CABLe:SELect command will be used.

Set Command Parameter(s): <string>,[<numeric_value>]

Query Command Parameter(s): [<numeric_value>]

[:SENSe]:VVM:TABLe:CABLe:SELect <numeric_value> | DEFault | MINimum | MAXimum
[:SENSe]:VVM:TABLe:CABLe:SELect? [DEFault | MINimum | MAXimum]

Title: Selected Table Index

Description: Sets the selected index for the cable table display. Note that saving a measurement to the table will cause the selected index to automatically increment to the next open slot in the table starting from the slot that had just been saved. If there are no empty slots left in the table, the selected index will be kept at the index that was last saved.

Query Return: Numeric

Set Command Parameter(s): <numeric_value> | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

Default Value: 1

Range: 1 to 100

[:SENSe]:VVM:TABLe:CLEar [<numeric_value>]

Title: Clear Measurement Data At Location

Description: Clear the data at a specified cable index for the currently chosen measurement type in the cable table display.

Accepts an optional numeric parameter dictating the index of the table display to clear the data at.

If no value is provided, the value from the [:SENSe]:VVM:DATA:TABLe:CABLe:SELect command will be used.

Parameter(s): [<numeric_value>]

www.tehencom.com

[:SENSe]:VVM:TABLe:CLEar:SELected

Title: Clear Measurement Data Table

Description: Clears the table data for the selected measurement type.

[:SENSe]:VVM:TABLe:MEMorize [<numeric_value>]

Title: Memorize Measurement Data At Location

Description: Memorize the data at a specified cable index for the currently chosen measurement type in the cable table display.

Accepts an optional numeric parameter dictating the index of the table display to memorize the data to.

If no value is provided, the value from the [:SENSe]:VVM:DATA:TABLe:CABLe:SELect command will be used.

Note that saving a measurement to the table will cause the selected index to automatically

increment to the next open slot in the table starting from the slot that had just been saved.

If there are no empty slots left in the table, the selected index will be kept at the index that was last saved.

Parameter(s): [<numeric_value>]

[:SENSe]:VVM:ZERO:REFerence:CLEar

Title: Clear Zero Reference Data

Description: Clear the zero reference data for the current measurement. Turns off Zero Reference state.

[:SENSe]:VVM:ZERO:REFerence:SET

Title: Set Zero Reference Data

Description: Sets the zero reference data for the current measurement type. Turns on Zero Reference state.

[:SENSe]:VVM:ZERO:REFerence:TYPE <OPEN|SHORt>
[:SENSe]:VVM:ZERO:REFerence:TYPE?

Title: Zero Reference Type

Description: Sets or queries the Zero Referencing type.

Parameter(s): <OPEN|SHORt>

Query Return: OPEN|SHOR

Default Value: OPEN

www.tehencom.com

:SOURce:VVM:POWer <LOW|HIGH>
:SOURce:VVM:POWer?

Title: Source Power Level

Description: Sets and queries the source power level.

Parameter(s): <LOW | HIGH>

Query Return: LOW | HIGH

Default Value: HIGH

:SOURce:VVM:POWer:MODE <HILow|DISCrete>
:SOURce:VVM:POWer:MODE?

Title: Level Mode

Description: Sets and queries the level mode. When level mode is set to HILow, only the :SOURce:VVM:POWer command will be avaiable for setting the power level and [:SOURce]:VVM:POWer:PORT{[1] | 2}[:LEVel] will be disabled. When level mode is set to DISCrete, only [:SOURce]:VVM:POWer:PORT{[1] | 2}[:LEVel] will be available to set the power level and :SOURce:VVM:POWer will be disabled.

Parameter(s): <HILow | DISCrete>

Query Return: HIL | DISC

Default Value: HILow

[:SOURce]:VVM:POWer:PORT<n>[:LEVel] <numeric_value> {DBM} | DEFault | MINimum | MAXimum
[:SOURce]:VVM:POWer:PORT<n>[:LEVel]? [DEFault | MINimum | MAXimum]

Title: Power Level

Description: Sets or queries the power level of the indicated port.

Please note that PORT2 is unavailable for certain models. Only PORT1 will be accessible for those models.

Query Return: Numeric (DBM)

Set Command Parameter(s): <numeric_value> {DBM} | DEFault | MINimum | MAXimum

Query Command Parameter(s): [DEFault | MINimum | MAXimum]

PORT Suffix Range: 1-2, Default = 1

Default Value: 0 dBm

Default Unit: dBm

Range: -45 dBm to 10 dBm

2025-03-10T09:08:38PM

www.tehencom.com

www.tehencom.com

Appendix A — SCPI Error Table

This section lists the error code/messages returned from the device when an error occurs during the execution of the SCPI command.

Error messages are classified by error number as listed in table below.

Error Number	Error String	Description
11	EEPROM read/write error	EEPROM read and/or write failed
10	Hardware communication error	Failed to communicate with device hardware.
2	Option mismatch	Operation failed due to option mismatch.
1	Model mismatch	Operation failed due to option mismatch.
0	No error	The queue is completely empty. Every error/event in the queue has been read or the queue was purposely cleared by power-on, `*CLS`, etc.
-100	Command error	Command error
-101	Invalid character	A syntactic element contains a character which is invalid for that type.
-102	Syntax error	An unrecognized command or data type was encountered.
-103	Invalid separator	The parser was expecting a separator and encountered an illegal character.
-104	Data type error	The parser recognized a data element different than one allowed.
-108	Parameter not allowed	More parameters were received than expected for the header.
-109	Missing parameter	Fewer parameters were received than required for the header.
-110	Command header error	An error was detected in the header.
-120	Numeric data error	Error is generated when parsing a data element which appears to be numeric, including the non-decimal numeric types.
-121	Invalid character in number	An invalid character for the data type being parsed was encountered.
-123	Exponent too large	The magnitude of the exponent was larger than 32000.
-124	Too many digits	The mantissa of a decimal numeric data element contained more than 255 digits excluding leading zeros.
-131	Invalid suffix	The suffix does not follow the syntax or suffix is inappropriate for this device.
-141	Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-160	Block data error	Error is generated when parsing a block data element.
-171	Invalid Expression	The expression data element was invalid; for example, unmatched parentheses or an illegal character.
-200	Execution error	Execution error
-213	Init ignored	Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
-221	Settings Conflict	The processed parameter could not be set due to the current device state.

www.tehencom.com

Error Number	Error String	Description
-222	Data Out of Range	The processed parameter is outside of the instrument's defined range.
-224	Illegal parameter value	Indicates that an exact value, from a list of possibles, was expected.
-230	Invalid trace data	Data corrupt or stale
-233	Invalid version	Indicates that the version does not match the version expected by the device.
-251	Missing mass storage	Indicates that a legal program command or query could not be executed because of missing mass storage.
-256	File name not found	Indicates that a legal program command or query could not be executed because the file name on the device was not found.
-300	Device-specific error	Device-specific error
-340	Calibration Failed	Calibration Failed
-350	Queue overflow	A specific code entered into the queue in lieu of the code that caused the error. This code indicates that there is no room in the queue and an error occurred but was not recorded.
-363	Input buffer overrun	Software or hardware input buffer on incoming port overflows with data caused by improper or nonexistent pacing.
-400	Query error	Query error

www.tehencom.com

Appendix B — SCPI Command Reference

Remote Programming Setup and Interface . . . 1-2
Sending SCPI Commands with NI-VISA . . . 1-8
SCPI Command Types . . . 1-14
*CLS . . . 1-14
*IDN? . . . 1-14
*RST . . . 1-14
Status System Reporting . . . 1-15
SCPI Commands . . . 1-19
SCPI Command Programming Examples . . . 1-20
Common Commands . . . 2-1
*CLS . . . 2-1
*ESE <numeric_value> . . . 2-1
*ESE? . . . 2-1
*ESR? . . . 2-1
*IDN? . . . 2-1
*OPC . . . 2-2
*OPC? . . . 2-2
*OPT? . . . 2-2
*RCL <numeric_value> . . . 2-2
*RST . . . 2-2
*SAV <numeric_value> . . . 2-3
*SRE <numeric_value> . . . 2-3
*SRE? . . . 2-3
*STB? . . . 2-3
*TST? . . . 2-4
*WAI . . . 2-4
System Commands . . . 2-4
:DIAGnostic:MEMory? . . . 2-4
:DISPlay:LANGuage <EN|ES|ZH|JA|FR|KO> . . . 2-4
:DISPlay:LANGuage? . . . 2-4
:DISPlay[:WINDow]:TEXT:STATe <0 | 1 | ON | OFF> . . . 2-4
:DISPlay[:WINDow]:TEXT:STATe? . . . 2-4
:FETCh:GPS? . . . 2-5
:FETCh:GPS:ALL? . . . 2-5
:FETCh:GPS:FULL? . . . 2-5
:FETCh:GPS:LAST? . . . 2-6
:INSTrument:APPLication:STATe <SPA|HIPM|CAA|VNA|VVM>,<0 | 1 | ON | OFF> . . . 2-6
:INSTrument:CATalog:ACTive? . . . 2-6
:INSTrument:CATalog:ALL? . . . 2-7
:INSTrument:CATalog:FULL? . . . 2-7
:INSTrument:NSELect <numeric_value> . . . 2-7
:INSTrument:NSELect? . . . 2-7
:INSTrument[:SELect] <SPA|HIPM|CAA|VNA|VVM> . . . 2-7
:INSTrument[:SELect]? . . . 2-7
:MMEMory:CATalog:DIRectory? <string>,<string> . . . 2-8
:MMEMory:CATalog:DIRectory:SIZE? <string>,<string> . . . 2-8
:MMEMory:CATalog:MSUSs? . . . 2-8
:MMEMory:CDIRectory <string> . . . 2-9
:MMEMory:CDIRectory? . . . 2-9
:MMEMory:COPY <string>,<string>,<string>,<string> . . . 2-9
:MMEMory:CREate:DIRectory <string>,<string> . . . 2-10
:MMEMory:DATA <string>,<string>,<block data> . . . 2-11
:MMEMory:DATA? <string>,<string> . . . 2-11
:MMEMory:DELete:DIRectory <string>,<string> . . . 2-11

www.tehencom.com

:MMEMory:DELete:FILe <string>,<string> . . . 2-12
:MMEMory:EJECt <string> . . . 2-12
:MMEMory:LOAD:STATe <numeric_value>,<string>,<string> . . . 2-12
:MMEMory:LOAD:TRACe <string>,<string>,<string> . . . 2-13
:MMEMory:MSIS <string> . . . 2-13
:MMEMory:MSIS? . . . 2-13
:MMEMory:STORe:STATe <numeric_value>,<string>,<string> . . . 2-14
:MMEMory:STORe:TRACe <string>,<string>,<string> . . . 2-14
:OUTPut:ROSCillator:STATe <0 | 1 | ON | OFF> . . . 2-15
:OUTPut:ROSCillator:STATe? . . . 2-15
[:SENSe]:BIAS:EXTernal:CURRent? . . . 2-15
[:SENSe]:BIAS:EXTernal:STATe <0 | 1 | ON | OFF> . . . 2-15
[:SENSe]:BIAS:EXTernal:STATe? . . . 2-15
[:SENSe]:BIAS:EXTernal:TRIPped[:STATe]? . . . 2-15
[:SENSe]:BIAS:EXTernal:TRIPped[:STATe]:CLEar . . . 2-15
[:SENSe]:BIAS:EXTernal:VOLTage <numeric_value> . . . 2-15
[:SENSe]:BIAS:EXTernal:VOLTage? . . . 2-15
[:SENSe]:FREQuency:REFerence:SOURce? . . . 2-16
[:SENSe]:RF:SAFE:MODE <0 | 1 | ON | OFF> . . . 2-16
[:SENSe]:RF:SAFE:MODE? . . . 2-16
[:SENSe]:TIME:REFerence:SOURce? . . . 2-16
:SYSTem:COMMunicate:LAN:CONFig <string>,[<string>],[<string>] . . . 2-17
:SYSTem:COMMunicate:LAN:CONFig? . . . 2-17
:SYSTem:COMMunicate:LAN:CONFig:CURRent? . . . 2-17
:SYSTem:COMMunicate:LAN:DHCP <ON|OFF> . . . 2-18
:SYSTem:COMMunicate:LAN:DHCP? . . . 2-18
:SYSTem:COMMunicate:LAN:DNS <string>,<string>,<string> . . . 2-18
:SYSTem:COMMunicate:LAN:DNS? . . . 2-18
:SYSTem:COMMunicate:LAN:DNSServer:APPend <string>, {<string>}, ... 2-18
:SYSTem:COMMunicate:LAN:DNSServer:DELete <string>, {<string>}, ... 2-19
:SYSTem:COMMunicate:LAN:DNSServer:LIST <string>, {<string>}, ... 2-19
:SYSTem:COMMunicate:LAN:DNSServer:LIST? . . . 2-19
:SYSTem:COMMunicate:LAN:FTP:STATe <0 | 1 | ON | OFF> . . . 2-19
:SYSTem:COMMunicate:LAN:FTP:STATe? . . . 2-19
:SYSTem:COMMunicate:LAN:HOSTname <string> . . . 2-19
:SYSTem:COMMunicate:LAN:HOSTname? . . . 2-19
:SYSTem:COMMunicate:LAN:HTTP:SECure:STATe <0 | 1 | ON | OFF> . . . 2-20
:SYSTem:COMMunicate:LAN:HTTP:SECure:STATe? . . . 2-20
:SYSTem:COMMunicate:LAN:SECure:CREDentials <string>,<string>,<RSA> . . . 2-20
:SYSTem:COMMunicate:LAN:SECure:SSLCertificate? . . . 2-20
:SYSTem:COMMunicate:WLAN:CONFig:CURRent? . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection <string>,[<string>] . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection:ACTive? . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection:DISConnect . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection:FORGet <string> . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection:FORGet:ALL . . . 2-21
:SYSTem:COMMunicate:WLAN:CONNection:SAVed? . . . 2-22
:SYSTem:COMMunicate:WLAN:CONNection:STATus? . . . 2-22
:SYSTem:COMMunicate:WLAN:NETWorks? . . . 2-23
:SYSTem:COMMunicate:WLAN:NETWorks:REFResh . . . 2-23
:SYSTem:COMMunicate:WLAN:STATe <0 | 1 | ON | OFF> . . . 2-24
:SYSTem:COMMunicate:WLAN:STATe? . . . 2-24
:SYSTem:DATE <numeric_value>,<numeric_value>,<numeric_value> . . . 2-24
:SYSTem:DATE? . . . 2-24
:SYSTem:DEFault:RESet:ALL . . . 2-24
:SYSTem:DEFault:RESet:DATA <USER|SYSTem> . . . 2-24

www.tehencom.com

:SYSTem:DEFault:RESet:FACTory . . . 2-24
:SYSTem:ERRor:DISPlay <0 | 1 | ON | OFF> . . . 2-25
:SYSTem:ERRor:DISPlay? . . . 2-25
:SYSTem:ERRor[:NEXT]? . . . 2-25
:SYSTem:FIRMware:UPDate <string>,<string> . . . 2-26
:SYSTem:FIRMware:UPDate:LIST? . . . 2-26
:SYSTem:FIRMware:UPDate:REMote <string> . . . 2-26
:SYSTem:FIRMware:UPDate:REMote:AUTO <0 | 1 | ON | OFF> . . . 2-27
:SYSTem:FIRMware:UPDate:REMote:AUTO? . . . 2-27
:SYSTem:FIRMware:UPDate:REMote:LATest? . . . 2-27
:SYSTem:FIRMware:UPDate:REMote:LIST? . . . 2-27
:SYSTem:FIRMware:UPDate:REMote:LIST:REFResh . . . 2-28
:SYSTem:FIRMware:UPDate:REMote:SOURce <string> . . . 2-29
:SYSTem:FIRMware:UPDate:REMote:SOURce? . . . 2-29
:SYSTem:FIRMware:VERSion? . . . 2-30
:SYSTem:GPS:SEARch:MODE <GGLonass|GGALileo|GBEidou|GGGalileo> . . . 2-30
:SYSTem:GPS:SEARch:MODE? . . . 2-30
:SYSTem:GPS:STATe <0 | 1 | ON | OFF> . . . 2-30
:SYSTem:GPS:STATe? . . . 2-30
:SYSTem:GPS:VOLTage <numeric_value> . . . 2-30
:SYSTem:GPS:VOLTage? . . . 2-30
:SYSTem:LOG:ERRor? . . . 2-31
:SYSTem:MACaddress? . . . 2-31
:SYSTem:OPTions? . . . 2-31
:SYSTem:OPTions:ALL? . . . 2-31
:SYSTem:OPTions:CONFig? . . . 2-31
:SYSTem:OPTions:TIMed:ACTivate <string> . . . 2-31
:SYSTem:OPTions:UPDate:REMote . . . 2-31
:SYSTem:OPTions:UPGRade <string> . . . 2-32
:SYSTem:PASSword:CDISable <string> . . . 2-32
:SYSTem:PASSword:CENable <string> . . . 2-32
:SYSTem:PASSword:CENable:ALL <string> . . . 2-33
:SYSTem:PASSword:CONNection:STATe? . . . 2-33
:SYSTem:PASSword:INTegrity? . . . 2-34
:SYSTem:PASSword:NEW <string>,<string> . . . 2-35
:SYSTem:PASSword:SET? . . . 2-35
:SYSTem:PASSword:SSLKey? . . . 2-35
:SYSTem:PASSword:STATe? . . . 2-36
:SYSTem:PRESet . . . 2-36
:SYSTem:PRESet:MODE . . . 2-36
:SYSTem:REBoot . . . 2-36
:SYSTem:REMote:DISPlay:LOCK <0 | 1 | ON | OFF> . . . 2-36
:SYSTem:REMote:DISPlay:LOCK? . . . 2-36
:SYSTem:SETup:SHORtcuts <numeric_value>,<string>,[<string>] . . . 2-37
:SYSTem:SETup:SHORtcuts? . . . 2-37
:SYSTem:SETup:SHORtcuts:CLEar . . . 2-37
:SYSTem:SETup:SHORtcuts:DEL <numeric_value> . . . 2-37
:SYSTem:SETup:SHORtcuts:LOAD <numeric_value> . . . 2-38
:SYSTem:SETup:SHORtcuts:REName <numeric_value>,<string> . . . 2-38
:SYSTem:SHUTdown . . . 2-38
:SYSTem:TEMPerature? . . . 2-38
:SYSTem:TIME <numeric_value>,<numeric_value>,<numeric_value> . . . 2-38
:SYSTem:TIME? . . . 2-38
:SYSTem:TIME:SYNC <AUTO|MANual> . . . 2-39
:SYSTem:TIME:SYNC? . . . 2-39
:SYSTem:TIME:SYNC:STATus? . . . 2-39

www.tehencom.com

:SYSTem:TIME:ZONE <string> . . . 2-39
:SYSTem:TIME:ZONE? . . . 2-39
:SYSTem:TIME:ZONE:CATalog? . . . 2-39
:SYSTem:UNIT:NAMe <string> . . . 2-40
:SYSTem:UNIT:NAMe? . . . 2-40
:TEST:SELFtest? . . . 2-40
:TRIGger[:SEQuence]:PORT<n>[:DIRection] <IN|OUT> . . . 2-40
:TRIGger[:SEQuence]:PORT<n>[:DIRection]? . . . 2-40
Spectrum Analyzer Commands. . . . 2-40
:ABORt . . . 2-40
:CALCulate:LIMit<n>:COMMent <string> . . . 2-41
:CALCulate:LIMit<n>:COMMent? . . . 2-41
:CALCulate:LIMit<n>:CONTrol[:DATA] <numeric_value> {HZ | KHZ | MHZ | GHZ}, {<numeric_value> {HZ | KHZ | MHZ | GHZ}}, ... 2-41
:CALCulate:LIMit<n>:CONTrol[:DATA]? . . . 2-41
:CALCulate:LIMit<n>:CONTrol:MODE <ABSolute|RELative> . . . 2-42
:CALCulate:LIMit<n>:CONTrol:MODE? . . . 2-42
:CALCulate:LIMit<n>:CONTrol:SHIFt <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-42
:CALCulate:LIMit<n>:COPY <numeric_value> . . . 2-43
:CALCulate:LIMit<n>:DELete . . . 2-43
:CALCulate:LIMit<n>:FAIL? . . . 2-43
:CALCulate:LIMit<n>:LOWer[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-44
:CALCulate:LIMit<n>:LOWer[:DATA]? . . . 2-44
:CALCulate:LIMit<n>:LOWer:MODE <ABSolute|RELative> . . . 2-44
:CALCulate:LIMit<n>:LOWer:MODE? . . . 2-44
:CALCulate:LIMit<n>:LOWer:SHIFt <numeric_value> {DB} . . . 2-45
:CALCulate:LIMit<n>:LOWer:STATe <0 | 1 | ON | OFF> . . . 2-45
:CALCulate:LIMit<n>:LOWer:STATe? . . . 2-45
:CALCulate:LIMit<n>:NAME <string> . . . 2-45
:CALCulate:LIMit<n>:NAME? . . . 2-45
:CALCulate:LIMit<n>:STATe <0 | 1 | ON | OFF> . . . 2-46
:CALCulate:LIMit<n>:STATe? . . . 2-46
:CALCulate:LIMit<n>:TRACe<n>:CHECk <0 | 1 | ON | OFF> . . . 2-46
:CALCulate:LIMit<n>:TRACe<n>:CHECk? . . . 2-46
:CALCulate:LIMit<n>:UPPer[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-47
:CALCulate:LIMit<n>:UPPer[:DATA]? . . . 2-47
:CALCulate:LIMit<n>:UPPer:MODE <ABSolute|RELative> . . . 2-47
:CALCulate:LIMit<n>:UPPer:MODE? . . . 2-47
:CALCulate:LIMit<n>:UPPer:SHIFt <numeric_value> {DB} . . . 2-48
:CALCulate:LIMit<n>:UPPer:STATe <0 | 1 | ON | OFF> . . . 2-48
:CALCulate:LIMit<n>:UPPer:STATe? . . . 2-48
:CALCulate:LIMit:ACTive? . . . 2-48
:CALCulate:ACPower:LIMit:ADJacent:ABSolute <numeric_value> {<amplitude_units>} . . . 2-49
:CALCulate:ACPower:LIMit:ADJacent:ABSolute? . . . 2-49
:CALCulate:ACPower:LIMit:ADJacent:LOWer:FAIL? . . . 2-49
:CALCulate:ACPower:LIMit:ADJacent:RELative <numeric_value> {DB} . . . 2-49
:CALCulate:ACPower:LIMit:ADJacent:RELative? . . . 2-49
:CALCulate:ACPower:LIMit:ADJacent:UPPer:FAIL? . . . 2-49
:CALCulate:ACPower:LIMit:ALTernate:ABSolute <numeric_value> {<amplitude_units>} . . . 2-50
:CALCulate:ACPower:LIMit:ALTernate:ABSolute? . . . 2-50
:CALCulate:ACPower:LIMit:ALTernate:LOWer:FAIL? . . . 2-50
:CALCulate:ACPower:LIMit:ALTernate:RELative <numeric_value> {DB} . . . 2-50
:CALCulate:ACPower:LIMit:ALTernate:RELative? . . . 2-50
:CALCulate:ACPower:LIMit:ALTernate:UPPer:FAIL? . . . 2-50

www.tehencom.com

:CALCulate:ACPower:LIMit:FAIL? . . . 2-50
:CALCulate:ACPower:LIMit:MAIN <numeric_value> {<amplitude_units>} . . . 2-51
:CALCulate:ACPower:LIMit:MAIN? . . . 2-51
:CALCulate:ACPower:LIMit:MODE <ABSolute|RELative> . . . 2-51
:CALCulate:ACPower:LIMit:MODE? . . . 2-51
:CALCulate:ACPower:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-51
:CALCulate:ACPower:LIMit:STATe? . . . 2-51
:CALCulate:CHPower:LIMit <numeric_value> {<amplitude_units>} . . . 2-51
:CALCulate:CHPower:LIMit? . . . 2-51
:CALCulate:CHPower:LIMit:FAIL? . . . 2-51
:CALCulate:CHPower:LIMit:PSDensity <numeric_value> {<amplitude_units>} . . . 2-52
:CALCulate:CHPower:LIMit:PSDensity? . . . 2-52
:CALCulate:CHPower:LIMit:PSDensity:STATe <0 | 1 | ON | OFF> . . . 2-52
:CALCulate:CHPower:LIMit:PSDensity:STATe? . . . 2-52
:CALCulate:CHPower:LIMit:PSD:FAIL? . . . 2-52
:CALCulate:CHPower:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-52
:CALCulate:CHPower:LIMit:STATe? . . . 2-52
:CALCulate:CINTerference:CARrier:LIMit <numeric_value> {<amplitude_units>} . . . 2-53
:CALCulate:CINTerference:CARrier:LIMit? . . . 2-53
:CALCulate:CINTerference:CARrier:LIMit:FAIL? . . . 2-53
:CALCulate:CINTerference:CARrier:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-53
:CALCulate:CINTerference:CARrier:LIMit:STATe? . . . 2-53
:CALCulate:CINTerference:CIRatio:LIMit <numeric_value> {DB} . . . 2-53
:CALCulate:CINTerference:CIRatio:LIMit? . . . 2-53
:CALCulate:CINTerference:CIRatio:LIMit:FAIL? . . . 2-53
:CALCulate:CINTerference:CIRatio:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-54
:CALCulate:CINTerference:CIRatio:LIMit:STATe? . . . 2-54
:CALCulate:CINTerference:INTerference:LIMit <numeric_value> {<amplitude_units>} . . . 2-54
:CALCulate:CINTerference:INTerference:LIMit? . . . 2-54
:CALCulate:CINTerference:INTerference:LIMit:FAIL? . . . 2-54
:CALCulate:CINTerference:INTerference:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-54
:CALCulate:CINTerference:INTerference:LIMit:STATe? . . . 2-54
:CALCulate:EIRPower:HORizontal:LIMit:FAIL? . . . 2-54
:CALCulate:EIRPower:HORizontal:SAVE . . . 2-55
:CALCulate:EIRPower:LIMit:FAIL? . . . 2-55
:CALCulate:EIRPower:LIMit:LOWer <numeric_value> {<amplitude_units>} . . . 2-55
:CALCulate:EIRPower:LIMit:LOWer? . . . 2-55
:CALCulate:EIRPower:LIMit:LOWer:STATe <0 | 1 | ON | OFF> . . . 2-55
:CALCulate:EIRPower:LIMit:LOWer:STATe? . . . 2-55
:CALCulate:EIRPower:LIMit:UPPer <numeric_value> {<amplitude_units>} . . . 2-55
:CALCulate:EIRPower:LIMit:UPPer? . . . 2-55
:CALCulate:EIRPower:LIMit:UPPer:STATe <0 | 1 | ON | OFF> . . . 2-56
:CALCulate:EIRPower:LIMit:UPPer:STATe? . . . 2-56
:CALCulate:EIRPower:MAXimum:LIMit:FAIL? . . . 2-56
:CALCulate:EIRPower:SUM:LIMit:FAIL? . . . 2-56
:CALCulate:EIRPower:VERTical:LIMit:FAIL? . . . 2-56
:CALCulate:EIRPower:VERTical:SAVE . . . 2-56
:CALCulate:INTerference:LIMit <numeric_value> {<amplitude_units>} . . . 2-56
:CALCulate:INTerference:LIMit? . . . 2-56
:CALCulate:INTerference:LIMit:FAIL? . . . 2-56
:CALCulate:INTerference:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-57
:CALCulate:INTerference:LIMit:STATe? . . . 2-57
:CALCulate:LIMit<n>:ENVelope:UPDate:Y . . . 2-57
:CALCulate:LIMit<n>:LOWer:ENVelope:CREate . . . 2-57
:CALCulate:LIMit<n>:LOWer[:TRACe]:POINts? . . . 2-57
:CALCulate:LIMit<n>:UPPer:ENVelope:CREate . . . 2-57

www.tehencom.com

:CALCulate:LIMit<n>:UPPer[:TRACe]:POINts? . . . 2-58
:CALCulate:LIMit:ALARm <0 | 1 | ON | OFF> . . . 2-58
:CALCulate:LIMit:ALARm? . . . 2-58
:CALCulate:LIMit:ENVelope:OFFSet <numeric_value> {<amplitude_units>} . . . 2-58
:CALCulate:LIMit:ENVelope:OFFSet? . . . 2-58
:CALCulate:LIMit:ENVelope:POINt <numeric_value> . . . 2-59
:CALCulate:LIMit:ENVelope:POINt? . . . 2-59
:CALCulate:LIMit:ENVelope:SHAPe <SQUare|SLOPe> . . . 2-59
:CALCulate:LIMit:ENVelope:SHAPe? . . . 2-59
:CALCulate:MARKer<n>:FUNCtion <OFF|NOISe|FCOunter|QUASi> . . . 2-59
:CALCulate:MARKer<n>:FUNCtion? . . . 2-59
:CALCulate:MARKer<n>:MAXimum . . . 2-59
:CALCulate:MARKer<n>:MAXimum:LEFT . . . 2-59
:CALCulate:MARKer<n>:MAXimum:NEXT . . . 2-60
:CALCulate:MARKer<n>:MAXimum:RIGHt . . . 2-60
:CALCulate:MARKer<n>:MODE <POSition|DELTa|FIXed> . . . 2-60
:CALCulate:MARKer<n>:MODE? . . . 2-60
:CALCulate:MARKer<n>:MOVE:LEFT . . . 2-60
:CALCulate:MARKer<n>:MOVE:RIGHt . . . 2-60
:CALCulate:MARKer<n>:REFerence <numeric_value> . . . 2-61
:CALCulate:MARKer<n>:REFerence? . . . 2-61
:CALCulate:MARKer<n>[:SET]:CENTer . . . 2-61
:CALCulate:MARKer<n>[:SET]:RLEVel . . . 2-61
:CALCulate:MARKer<n>:STATe <0 | 1 | ON | OFF> . . . 2-61
:CALCulate:MARKer<n>:STATe? . . . 2-61
:CALCulate:MARKer<n>:TRACe <numeric_value> . . . 2-62
:CALCulate:MARKer<n>:TRACe? . . . 2-62
:CALCulate:MARKer<n>:X <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-62
:CALCulate:MARKer<n>:X? . . . 2-62
:CALCulate:MARKer<n>:X <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-62
:CALCulate:MARKer<n>:X? . . . 2-62
:CALCulate:MARKer<n>:Y <numeric_value> {<amplitude_units>} . . . 2-63
:CALCulate:MARKer<n>:Y? . . . 2-63
:CALCulate:MARKer:AOFF . . . 2-63
:CALCulate:MARKer:APReset . . . 2-63
:CALCulate:MARKer[:DATA]:ALL? . . . 2-63
:CALCulate:MARKer:FUNCtion:FCOunter:RESolution <R0|R1|R2|R3> . . . 2-63
:CALCulate:MARKer:FUNCtion:FCOunter:RESolution? . . . 2-63
:CALCulate:MARKer:PEAK:EXCursion <numeric_value> {DB} . . . 2-64
:CALCulate:MARKer:PEAK:EXCursion? . . . 2-64
:CALCulate:MARKer:PEAK:EXCursion:STATe <0 | 1 | ON | OFF> . . . 2-64
:CALCulate:MARKer:PEAK:EXCursion:STATe? . . . 2-64
:CALCulate:MARKer:PEAK:THReshold <numeric_value> {<amplitude_units>} . . . 2-64
:CALCulate:MARKer:PEAK:THReshold? . . . 2-64
:CALCulate:MARKer:PEAK:THReshold:STATe <0 | 1 | ON | OFF> . . . 2-64
:CALCulate:MARKer:PEAK:THReshold:STATe? . . . 2-64
:CALCulate:OBW:LIMit <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-65
:CALCulate:OBW:LIMit? . . . 2-65
:CALCulate:OBW:LIMit:FAIL? . . . 2-65
:CALCulate:OBW:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-65
:CALCulate:OBW:LIMit:STATe? . . . 2-65
:CONFigure:ACPower . . . 2-65
:CONFigure:CHPower . . . 2-65
:CONFigure:CINTerference . . . 2-66
:CONFigure:EIRPower . . . 2-66
:CONFigure:INTerference . . . 2-66

www.tehencom.com

:CONFigure:OBWidth . . . 2-66
:CONFigure:SEMask . . . 2-66
:CONFigure:USER:CARRiers[:STATe] <0 | 1 | ON | OFF> . . . 2-66
:CONFigure:USER:CARRiers[:STATe]? . . . 2-66
:CONFigure:USER:COUNtries[:STATe] <0 | 1 | ON | OFF> . . . 2-67
:CONFigure:USER:COUNtries[:STATe]? . . . 2-67
:CSCanner:ADD:CUSTom <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},[<numeric_value>],[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}] . . . 2-67
:CSCanner:ADD:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<numeric_value>],[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}] . . . 2-68
:CSCanner:ADD:SIGnalstandard <string>,<numeric_value>,<numeric_value>,<numeric_value>,[<numeric_value>],[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}] . . . 2-70
:CSCanner:AVERage:TYPE <LAST|MAX|MIN|AVER|RMAX|RMIN|RAV> . . . 2-72
:CSCanner:AVERage:TYPE? . . . 2-72
:CSCanner:CHANnel? . . . 2-72
:CSCanner:CHANnel:LIMit? . . . 2-72
:CSCanner:CLEar <numeric_value> . . . 2-72
:CSCanner:CLEar:ALL . . . 2-72
:CSCanner:DELete <numeric_value> . . . 2-73
:CSCanner:DELete:ALL . . . 2-73
:CSCanner:EDIT:CUSTom <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,[<string>],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}] . . . 2-73
:CSCanner:EDIT:SIGnalstandard <string>,<numeric_value>,<numeric_value>,[<numeric_value> {HZ | KHZ | MHZ | GHZ}],[<numeric_value> {PS | NS | US | MS | S | MIN | HR}],[<numeric_value> {<amplitude_units>}],[<numeric_value> {<amplitude_units>}] . . . 2-73
:CSCanner:LOG <0 | 1 | ON | OFF> . . . 2-74
:CSCanner:LOG? . . . 2-74
:CSCanner:LOG:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-75
:CSCanner:LOG:INTerval? . . . 2-75
:CSCanner:RESults? [<ALL|STRip|BAR>],[<numeric_value>] . . . 2-75
:CSCanner:SORT:ASC <CFR|BWID|DTIM|LIMI|LAST|MAX|MIN|AVER|RMAX|RMIN|RAV> . . . 2-75
:CSCanner:SORT:DESC <CFR|BWID|DTIM|ULIM|LLIM|LAST|MAX|MIN|AVER|RMAX|RMIN|RAV> . . . 2-76
:CSCanner:SSTandard:ATTRibutes? <string> . . . 2-76
:CSCanner:SSTandard:CATalog? . . . 2-76
:CSCanner:UPDate:STATe <0 | 1 | ON | OFF> . . . 2-77
:CSCanner:UPDate:STATe? . . . 2-77
:DIAGnostic:SWEep:TIME? . . . 2-77
:DISPlay:EXTernal:DEVices? . . . 2-77
:DISPlay:IMPedance:MATCh:DEVice <NONe|M75|OTHer> . . . 2-77
:DISPlay:IMPedance:MATCh:DEVice? . . . 2-77
:DISPlay:IMPedance:MATCh:DEVice:CUSTom:LOSS <numeric_value> {DB} . . . 2-77
:DISPlay:IMPedance:MATCh:DEVice:CUSTom:LOSS? . . . 2-77
:DISPlay:POINtcount <numeric_value> . . . 2-78
:DISPlay:POINtcount? . . . 2-78
:DISPlay:VIEW:SPECtrogram:AADJust . . . 2-78
:DISPlay:VIEW:SPECtrogram:BOTTom <numeric_value> {<amplitude_units>} . . . 2-78
:DISPlay:VIEW:SPECtrogram:BOTTom? . . . 2-78
:DISPlay:VIEW:SPECtrogram:HISTory[:DATA]? <numeric_value> . . . 2-79
:DISPlay:VIEW:SPECtrogram:HISTory:ELAPsed? <numeric_value> . . . 2-79
:DISPlay:VIEW:SPECtrogram:HUE <numeric_value> . . . 2-79
:DISPlay:VIEW:SPECtrogram:HUE? . . . 2-79

www.tehencom.com

:DISPlay:VIEW:SPECtrogram:REFerence <numeric_value> {<amplitude_units>} . . . 2-80
:DISPlay:VIEW:SPECtrogram:REFerence? . . . 2-80
:DISPlay:VIEW:SPECtrogram:TRACe:SELection <POSition|TIME> . . . 2-80
:DISPlay:VIEW:SPECtrogram:TRACe:SELection? . . . 2-80
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision <numeric_value> . . . 2-80
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision? . . . 2-80
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision <numeric_value> . . . 2-80
:DISPlay:WINDow:TRACe:Y[:SCALe]:PDIVision? . . . 2-80
:DISPlay[:WINDow]:TRACe:Y:SCALe:RLEVel <numeric_value> {<amplitude_units>} . . . 2-81
:DISPlay[:WINDow]:TRACe:Y:SCALe:RLEVel? . . . 2-81
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:AUTO[:IMMediate] <numeric_value> {DB} . . . 2-81
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet <numeric_value> {DB} . . . 2-82
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet? . . . 2-82
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet <numeric_value> {DB} . . . 2-82
:DISPlay[:WINDow]:TRACe:Y[:SCALe]:RLEVel:OFFSet? . . . 2-82
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision <numeric_value> {DB} . . . 2-82
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision? . . . 2-82
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision <numeric_value> {DB} . . . 2-83
:DISPlay[:WINDow]:TRACe:Y:SSCale:PDIVision? . . . 2-83
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel <numeric_value> {DB} . . . 2-83
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel? . . . 2-83
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel <numeric_value> {DB} . . . 2-83
:DISPlay[:WINDow]:TRACe:Y:SSCale:RLEVel? . . . 2-83
:EMF:STORe:PATH <string> . . . 2-84
:EMF:STORe:PATH? . . . 2-84
:FETCh:ACPower? . . . 2-84
:FETCh:AMPLitude? <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-84
:FETCh:BPOWer? . . . 2-84
:FETCh:CAGGregation? . . . 2-85
:FETCh:CHPower? . . . 2-85
:FETCh:CHPower:CHPower? . . . 2-85
:FETCh:CHPower:DENSity? . . . 2-86
:FETCh:CINTerference? . . . 2-86
:FETCh:CINTerference:CIRAtio? . . . 2-86
:FETCh:CINTerference:CPOWer? . . . 2-86
:FETCh:CINTerference:IPOWer? . . . 2-87
:FETCh:CONStellation:PBCH? . . . 2-87
:FETCh:CONStellation:PDSCh? . . . 2-87
:FETCh:CONTrol? . . . 2-88
:FETCh[:DATA]:ALL? [<ASCii|INTeger|REAL>],[<numeric_value>] . . . 2-92
:FETCh:DENSity:DATA? <numeric_value> . . . 2-92
:FETCh:EIRPower? . . . 2-92
:FETCh:EIRPower:DATA? . . . 2-93
:FETCh:EIRPower:MAXimum? . . . 2-93
:FETCh:EMF? . . . 2-93
:FETCh:FRAMe:POWer? . . . 2-94
:FETCh:INTerference:POWer? . . . 2-95
:FETCh:MIMO:ANTennas? . . . 2-96
:FETCh:OBWidth<n>? . . . 2-97
:FETCh:OTA:MAPPing? . . . 2-98
:FETCh:PCI? . . . 2-99
:FETCh:PDSCh? . . . 2-101
:FETCh:PEAK? . . . 2-102
:FETCh:RRM? . . . 2-103
:FETCh:SCANner? . . . 2-104
:FETCh:SEMask? . . . 2-107

www.tehencom.com

:FETCh:SSB? . . . 2-108
:FETCh:SYNC:EVM? . . . 2-111
:FETCh:SYNC:POWer? . . . 2-112
:FETCh:TAE? . . . 2-113
:FETCh:TRACe:STAT? . . . 2-114
:FETCh:WCDMa:SYNC? . . . 2-115
:FORMat[:TRACe][:DATA] <ASCii|INTeger|REAL>,[<numeric_value>] . . . 2-116
:FORMat[:TRACe][:DATA]? . . . 2-116
:FRAMe:SPECtrum:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF> . . . 2-116
:FRAMe:SPECtrum:TRACe:DISPlay[:STATe]? . . . 2-116
:FRAMe:SPECtrum:TRACe:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH> . . . 2-117
:FRAMe:SPECtrum:TRACe:TYPE? . . . 2-117
:FRAMe:SPECtrum:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF> . . . 2-117
:FRAMe:SPECtrum:TRACe:UPDate[:STATe]? . . . 2-117
:FRAMe:TDOMain:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF> . . . 2-117
:FRAMe:TDOMain:TRACe:DISPlay[:STATe]? . . . 2-117
:FRAMe:TDOMain:TRACe:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH> . . . 2-118
:FRAMe:TDOMain:TRACe:TYPE? . . . 2-118
:FRAMe:TDOMain:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF> . . . 2-118
:FRAMe:TDOMain:TRACe:UPDate[:STATe]? . . . 2-118
:INITiate:CONTinuous <0 | 1 | ON | OFF> . . . 2-119
:INITiate:CONTinuous? . . . 2-119
:INITiate[:IMMediate] . . . 2-119
:INITiate[:IMMediate]:ALL . . . 2-119
:INITiate:SPA:SELFtest? . . . 2-120
:INPut:OPOWer:RELay[:STATe] <CLOSed> . . . 2-120
:INPut:OPOWer:RELay[:STATe]? . . . 2-120
:INSTrument:ACTive:STATe <0 | 1 | ON | OFF> . . . 2-120
:INSTrument:ACTive:STATe? . . . 2-120
:INSTrument:REMote:STATe <0 | 1 | ON | OFF>,<string> . . . 2-121
:INSTrument:REMote:STATe? . . . 2-121
:MEASure:ACPower? . . . 2-121
:MEASure:CHPower? . . . 2-122
:MEASure:CHPower:CHPower? . . . 2-122
:MEASure:CHPower:DENSity? . . . 2-122
:MEASure:CINTerference:CANCel . . . 2-122
:MEASure:CINTerference:CONTinue . . . 2-122
:MEASure:INTerference:POWer? . . . 2-123
:MEASure:IQ:CAPTure [<PPS>] . . . 2-124
:MEASure:IQ:CAPTure:FAIL <OFF|FIRSt|REPeat> . . . 2-125
:MEASure:IQ:CAPTure:FAIL? . . . 2-125
:MEASure:OTA:MAPPing? . . . 2-125
:MEASure:OTA:MAPPing:RUN <0 | 1 | ON | OFF> . . . 2-125
:MEASure:OTA:MAPPing:RUN? . . . 2-125
:MMEMory:COEvent:CLEarall . . . 2-126
:MMEMory:COEvent:TIMer:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-126
:MMEMory:COEvent:TIMer:INTerval? . . . 2-126
:MMEMory:EMF:STORe:LOG <string> . . . 2-126
:MMEMory:EMF:STORe:LOG? . . . 2-126
:MMEMory:LOAD:LIMit <string>,<string>,<string> . . . 2-126
:MMEMory:LOAD:MAP <string> . . . 2-127
:MMEMory:LOAD:MAP? . . . 2-127
:MMEMory:LOAD[:OTA]:MAPPing:KML <string>,<string>,<string> . . . 2-127
:MMEMory:LOAD:RAM <numeric_value>,<numeric_value>,<string> . . . 2-127

www.tehencom.com

:MMEMory:LOAD:RECord <string>,<string> . . . 2-127
:MMEMory:LOAD:SEMask:CUSTom <string>,<string> . . . 2-128
:MMEMory:STOEvent:CLEarall . . . 2-128
:MMEMory:STOEvent:EOSWeep:MODE <CONTinuous|SINGle> . . . 2-128
:MMEMory:STOEvent:EOSWeep:MODE? . . . 2-128
:MMEMory:STOEvent:EOSWeep[:STATe] <0 | 1 | ON | OFF> . . . 2-128
:MMEMory:STOEvent:EOSWeep[:STATe]? . . . 2-128
:MMEMory:STOEvent:LIMit:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-129
:MMEMory:STOEvent:LIMit:INTerval? . . . 2-129
:MMEMory:STOEvent:LIMit:MODE <CONTinuous|SINGle|INTerval> . . . 2-129
:MMEMory:STOEvent:LIMit:MODE? . . . 2-129
:MMEMory:STOEvent:LIMit:PTRigger[:STATe] <0 | 1 | ON | OFF> . . . 2-129
:MMEMory:STOEvent:LIMit:PTRigger[:STATe]? . . . 2-129
:MMEMory:STOEvent:LIMit[:STATe] <0 | 1 | ON | OFF> . . . 2-130
:MMEMory:STOEvent:LIMit[:STATe]? . . . 2-130
:MMEMory:STOEvent:TIMer:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-130
:MMEMory:STOEvent:TIMer:INTerval? . . . 2-130
:MMEMory:STOEvent:TIMer[:STATe] <0 | 1 | ON | OFF> . . . 2-130
:MMEMory:STOEvent:TIMer[:STATe]? . . . 2-130
:MMEMory:STORe:CAPTure . . . 2-130
:MMEMory:STORe:CAPTure:MODE <AUTomatic|MANual> . . . 2-131
:MMEMory:STORe:CAPTure:MODE? . . . 2-131
:MMEMory:STORe:CAPTure:MSUS <string> . . . 2-131
:MMEMory:STORe:CAPTure:MSUS? . . . 2-131
:MMEMory:STORe:CAPTure:PATH <string> . . . 2-131
:MMEMory:STORe:CAPTure:PATH? . . . 2-131
:MMEMory:STORe:CAPTure:PREFix <string> . . . 2-131
:MMEMory:STORe:CAPTure:PREFix? . . . 2-131
:MMEMory:STORe:CSCanner:CSV:MSUS <string> . . . 2-131
:MMEMory:STORe:CSCanner:CSV:MSUS? . . . 2-131
:MMEMory:STORe:CSCanner:CSV:PATH <string> . . . 2-132
:MMEMory:STORe:CSCanner:CSV:PATH? . . . 2-132
:MMEMory:STORe:LIMit <string>,<string>,<string> . . . 2-132
:MMEMory:STORe[:OTA]:MAPPing:CSV <string>,<string>,<string> . . . 2-133
:MMEMory:STORe[:OTA]:MAPPing:KML <string>,<string>,<string> . . . 2-134
:MMEMory:STORe:RAM <numeric_value>,<numeric_value>,<string> . . . 2-134
:MMEMory:STORe:RECord:CSV:DISCard . . . 2-135
:MMEMory:STORe:RECord:CSV:MSUS <string> . . . 2-135
:MMEMory:STORe:RECord:CSV:MSUS? . . . 2-135
:MMEMory:STORe:RECord:CSV:PATH <string> . . . 2-135
:MMEMory:STORe:RECord:CSV:PATH? . . . 2-135
:MMEMory:STORe:RECord:CSV:PREFix <string> . . . 2-135
:MMEMory:STORe:RECord:CSV:PREFix? . . . 2-135
:MMEMory:STORe:RECord:MSUS <string> . . . 2-135
:MMEMory:STORe:RECord:MSUS? . . . 2-135
:MMEMory:STORe:RECord:PATH <string> . . . 2-135
:MMEMory:STORe:RECord:PATH? . . . 2-135
:MMEMory:STORe:RECord:PREFix <string> . . . 2-136
:MMEMory:STORe:RECord:PREFix? . . . 2-136
:MMEMory:STORe:STREam:MSUS <string> . . . 2-136
:MMEMory:STORe:STREam:MSUS? . . . 2-136
:MMEMory:STORe:STREam:PATH <string> . . . 2-136
:MMEMory:STORe:STREam:PATH? . . . 2-136
:MMEMory:STORe:TRACe:CSV <string>,<string>,<string> . . . 2-136
:OUTPut[:STATe] <0 | 1 | ON | OFF> . . . 2-137
:OUTPut[:STATe]? . . . 2-137

www.tehencom.com

:READ:ACPower? . . . 2-137
:READ:CHPower? . . . 2-137
:READ:CHPower:CHPower? . . . 2-138
:READ:CHPower:DENSity? . . . 2-138
:READ:EIRPower? . . . 2-138
:READ:EIRPower:DATA? . . . 2-138
:READ:EIRPower:MAXimum? . . . 2-139
:READ:INTerference:POWer? . . . 2-139
:READ:OTA:MAPPing? . . . 2-139
:READ:SEMask? . . . 2-139
[:SENSe]:ACPower:BANDwidth|BWIDth:ADJacent <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:ADJacent? . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:ALTernate <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:ALTernate? . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:MAIN <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:MAIN? . . . 2-140
[:SENSe]:ACPower:BANDwidth|BWIDth:SPACing <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-141
[:SENSe]:ACPower:BANDwidth|BWIDth:SPACing? . . . 2-141
[:SENSe]:ACPower:STATe <0 | 1 | ON | OFF> . . . 2-141
[:SENSe]:ACPower:STATe? . . . 2-141
[:SENSe]:AMFM:AUDio:RECord . . . 2-141
[:SENSe]:AMFM:AUDio:RECord:DURation <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-141
[:SENSe]:AMFM:AUDio:RECord:DURation? . . . 2-141
[:SENSe]:AMFM:AUDio:RESults? . . . 2-141
[:SENSe]:AMFM:AUDio:STATe <0 | 1 | ON | OFF> . . . 2-142
[:SENSe]:AMFM:AUDio:STATe? . . . 2-142
[:SENSe]:AMFM:DEMod:BWIDth? . . . 2-142
[:SENSe]:AMFM:DEMod:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-142
[:SENSe]:AMFM:DEMod:FREQuency? . . . 2-142
[:SENSe]:AMFM:DEMod:MARKer:SELect <numeric_value> . . . 2-142
[:SENSe]:AMFM:DEMod:MARKer:SELect? . . . 2-142
[:SENSe]:AMFM:DEMod:MARKer:STATe <0 | 1 | ON | OFF> . . . 2-143
[:SENSe]:AMFM:DEMod:MARKer:STATe? . . . 2-143
[:SENSe]:AMFM:DEMod:TYPE <AM|USBand|LSBand|FMWideband|FMNarrowband|FM125|FM625> . . . 2-143
[:SENSe]:AMFM:DEMod:TYPE? . . . 2-143
[:SENSe]:AMFM:SQUelch <numeric_value> {<amplitude_units>} . . . 2-143
[:SENSe]:AMFM:SQUelch? . . . 2-143
[:SENSe]:AMFM:STATe <0 | 1 | ON | OFF> . . . 2-143
[:SENSe]:AMFM:STATe? . . . 2-143
[:SENSe]:ARFChannel <numeric_value> . . . 2-144
[:SENSe]:ARFChannel? . . . 2-144
[:SENSe]:AVERage:COUNt <numeric_value> . . . 2-144
[:SENSe]:AVERage:COUNt? . . . 2-144
[:SENSe]:AVERage:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH> . . . 2-144
[:SENSe]:AVERage:TYPE? . . . 2-144
[:SENSe]:BANDwidth|BWIDth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-145
[:SENSe]:BANDwidth|BWIDth[:RESolution]? . . . 2-145
[:SENSe]:BANDwidth|BWIDth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-145
[:SENSe]:BANDwidth|BWIDth[:RESolution]? . . . 2-145
[:SENSe]:BANDwidth|BWIDth[:RESolution]:RATio <numeric_value> . . . 2-145
[:SENSe]:BANDwidth|BWIDth[:RESolution]:RATio? . . . 2-145
[:SENSe]:BANDwidth|BWIDth:VIDeo <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo? . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo? . . . 2-146

www.tehencom.com

[:SENSe]:BANDwidth|BWIDth:VIDeo:RATio <numeric_value> . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo:RATio? . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo:TYPE <LINear|LOGarithmic> . . . 2-146
[:SENSe]:BANDwidth|BWIDth:VIDeo:TYPE? . . . 2-146
[:SENSe]:BANDwidth[:RESolution]:AUTO <0 | 1 | ON | OFF> . . . 2-147
[:SENSe]:BANDwidth[:RESolution]:AUTO? . . . 2-147
[:SENSe]:BANDwidth:VIDeo:AUTO <0 | 1 | ON | OFF> . . . 2-147
[:SENSe]:BANDwidth:VIDeo:AUTO? . . . 2-147
[:SENSe]:BEAM <numeric_value> . . . 2-147
[:SENSe]:BEAM? . . . 2-147
[:SENSe]:BEAM:TRACking:STATe <0 | 1 | ON | OFF> . . . 2-147
[:SENSe]:BEAM:TRACking:STATe? . . . 2-147
[:SENSe]:BPOWer:END <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-148
[:SENSe]:BPOWer:END? . . . 2-148
[:SENSe]:BPOWer:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-148
[:SENSe]:BPOWer:STARt? . . . 2-148
[:SENSe]:BPOWer:STATe <0 | 1 | ON | OFF> . . . 2-148
[:SENSe]:BPOWer:STATe? . . . 2-148
[:SENSe]:CAGGregation? . . . 2-148
[:SENSe]:CAGGregation:CARRier:ACTive <numeric_value> . . . 2-148
[:SENSe]:CAGGregation:CARRier:ACTive? . . . 2-148
[:SENSe]:CAGGregation:CARRier:COUNt <numeric_value> . . . 2-149
[:SENSe]:CAGGregation:CARRier:COUNt? . . . 2-149
[:SENSe]:CAGGregation:STATe <0 | 1 | ON | OFF> . . . 2-149
[:SENSe]:CAGGregation:STATe? . . . 2-149
[:SENSe]:CBWidth <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-149
[:SENSe]:CBWidth? . . . 2-149
[:SENSe]:CBWidth <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-149
[:SENSe]:CBWidth? . . . 2-149
[:SENSe]:CBWidth:CATalog? . . . 2-150
[:SENSe]:CCHannel:STATe <0 | 1 | ON | OFF> . . . 2-150
[:SENSe]:CCHannel:STATe? . . . 2-150
[:SENSe]:CHANnel:SCSPacing:CATalog? . . . 2-150
[:SENSe]:CHPower:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-150
[:SENSe]:CHPower:BANDwidth|BWIDth:INTegration? . . . 2-150
[:SENSe]:CHPower:STATe <0 | 1 | ON | OFF> . . . 2-150
[:SENSe]:CHPower:STATe? . . . 2-150
[:SENSe]:CINTerference:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-151
[:SENSe]:CINTerference:BANDwidth|BWIDth:INTegration? . . . 2-151
[:SENSe]:CINTerference:CARRier:STATe? . . . 2-151
[:SENSe]:CINTerference:STATe <0 | 1 | ON | OFF> . . . 2-151
[:SENSe]:CINTerference:STATe? . . . 2-151
[:SENSe]:CLOCk:ADJust <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-151
[:SENSe]:CLOCk:ADJust? . . . 2-151
[:SENSe]:CONStellation <PBCH|PDSCh> . . . 2-152
[:SENSe]:CONStellation? . . . 2-152
[:SENSe]:CONStellation:PBCH? . . . 2-152
[:SENSe]:CONStellation:PBCH:BEAM <numeric_value> . . . 2-152
[:SENSe]:CONStellation:PBCH:BEAM? . . . 2-152
[:SENSe]:CONStellation:PDSCh? . . . 2-152
[:SENSe]:CONStellation:REFerence:STATe <0 | 1 | ON | OFF> . . . 2-152
[:SENSe]:CONStellation:REFerence:STATe? . . . 2-152
[:SENSe]:CONStellation:STATe <0 | 1 | ON | OFF> . . . 2-153
[:SENSe]:CONStellation:STATe? . . . 2-153
[:SENSe]:CYCLicprefix <NORMal|EXTended|AUTO> . . . 2-153
[:SENSe]:CYCLicprefix? . . . 2-153

www.tehencom.com

[:SENSe]:CYCLicprefix <NORMal|EXTended|AUTO> . . . 2-153
[:SENSe]:CYCLicprefix? . . . 2-153
[:SENSe]:DEMod:DISCard:CSV . . . 2-153
[:SENSe]:DEMod:GATE:DURation <COUPled|FRAMe> . . . 2-153
[:SENSe]:DEMod:GATE:DURation? . . . 2-153
[:SENSe]:DEMod:GATE:SPECtrum:TYPe <UPLink|DWLink|FLEXible|GP|ALL|NONe> . . . 2-154
[:SENSe]:DEMod:GATE:SPECtrum:TYPe? . . . 2-154
[:SENSe]:DEMod:LOG <LOG|PAUSe|STOP> . . . 2-154
[:SENSe]:DEMod:LOG? . . . 2-154
[:SENSe]:DEMod:STORe:MSUS <string> . . . 2-154
[:SENSe]:DEMod:STORe:MSUS? . . . 2-154
[:SENSe]:DEMod:STORe:PATH <string> . . . 2-154
[:SENSe]:DEMod:STORe:PATH? . . . 2-154
[:SENSe]:DENSity:ACQuisition <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-155
[:SENSe]:DENSity:ACQuisition? . . . 2-155
[:SENSe]:DENSity:CSCale:AUTO <0 | 1 | ON | OFF> . . . 2-155
[:SENSe]:DENSity:CSCale:AUTO? . . . 2-155
[:SENSe]:DENSity:CSCale:HIGH <numeric_value> . . . 2-155
[:SENSe]:DENSity:CSCale:HIGH? . . . 2-155
[:SENSe]:DENSity:CSCale:LOW <numeric_value> . . . 2-155
[:SENSe]:DENSity:CSCale:LOW? . . . 2-155
[:SENSe]:DENSity:DETection:MINimum? . . . 2-156
[:SENSe]:DENSity:DISPlay:RESolution <NORMal|HIGH> . . . 2-156
[:SENSe]:DENSity:DISPlay:RESolution? . . . 2-156
[:SENSe]:DENSity:FFT:COUNt? . . . 2-156
[:SENSe]:DENSity:PERSistence <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-156
[:SENSe]:DENSity:PERSistence? . . . 2-156
[:SENSe]:DENSity:PERSistence:CLEar . . . 2-156
[:SENSe]:DENSity:PERSistence:STATe <VARiable|INFinite> . . . 2-157
[:SENSe]:DENSity:PERSistence:STATe? . . . 2-157
[:SENSe]:DENSity:POI? . . . 2-157
[:SENSe]:DENSity:STATe <0 | 1 | ON | OFF> . . . 2-157
[:SENSe]:DENSity:STATe? . . . 2-157
[:SENSe]:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal> . . . 2-157
[:SENSe]:DETector[:FUNCtion]? . . . 2-157
[:SENSe]:DF:INFormation? . . . 2-158
[:SENSe]:DUPLex <FDD|TDD> . . . 2-158
[:SENSe]:DUPLex? . . . 2-158
[:SENSe]:EARFchannel <numeric_value> . . . 2-159
[:SENSe]:EARFchannel? . . . 2-159
[:SENSe]:EIRPower:CLOSs <numeric_value> {DB} . . . 2-159
[:SENSe]:EIRPower:CLOSs? . . . 2-159
[:SENSe]:EIRPower:DISTance <numeric_value> . . . 2-159
[:SENSe]:EIRPower:DISTance? . . . 2-159
[:SENSe]:EIRPower:DISTance:UNIT <METers|FEET> . . . 2-160
[:SENSe]:EIRPower:DISTance:UNIT? . . . 2-160
[:SENSe]:EIRPower:MAXimum:COUNt? . . . 2-160
[:SENSe]:EIRPower:MAXimum:RESet . . . 2-160
[:SENSe]:EIRPower:PLOSs? . . . 2-160
[:SENSe]:EIRPower:RAGain <numeric_value> {DB} . . . 2-160
[:SENSe]:EIRPower:RAGain? . . . 2-160
[:SENSe]:EIRPower:STATe <0 | 1 | ON | OFF> . . . 2-161
[:SENSe]:EIRPower:STATe? . . . 2-161
[:SENSe]:EIRPower:SUM:RESet . . . 2-161
[:SENSe]:EIRPower:TAGain <numeric_value> {DB} . . . 2-161
[:SENSe]:EIRPower:TAGain? . . . 2-161

www.tehencom.com

[:SENSe]:EMF:AXIS <X|Y|Z> . . . 2-161
[:SENSe]:EMF:AXIS? . . . 2-161
[:SENSe]:EMF:AXIS:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-162
[:SENSe]:EMF:AXIS:TIME? . . . 2-162
[:SENSe]:EMF:ICNirp? . . . 2-162
[:SENSe]:EMF:ICNirp:STATe <0 | 1 | ON | OFF> . . . 2-162
[:SENSe]:EMF:ICNirp:STATe? . . . 2-162
[:SENSe]:EMF:LOG <0 | 1 | ON | OFF> . . . 2-162
[:SENSe]:EMF:LOG? . . . 2-162
[:SENSe]:EMF:MEASurement:COUNt <numeric_value> . . . 2-163
[:SENSe]:EMF:MEASurement:COUNt? . . . 2-163
[:SENSe]:EMF:MEASurement:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-163
[:SENSe]:EMF:MEASurement:TIME? . . . 2-163
[:SENSe]:EMF:RUN <0 | 1 | ON | OFF> . . . 2-163
[:SENSe]:EMF:RUN? . . . 2-163
[:SENSe]:EMF:STATe <0 | 1 | ON | OFF> . . . 2-163
[:SENSe]:EMF:STATe? . . . 2-163
[:SENSe]:FETch:THD? . . . 2-164
[:SENSe]:FPAView <FRAMe|SUBFrame|SLOT> . . . 2-164
[:SENSe]:FPAView? . . . 2-164
[:SENSe]:FRAMe:POWer:STATe <0 | 1 | ON | OFF> . . . 2-164
[:SENSe]:FRAMe:POWer:STATe? . . . 2-164
[:SENSe]:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-165
[:SENSe]:FREQuency:CENTer? . . . 2-165
[:SENSe]:FREQuency:CENTer:SHARe <0 | 1 | ON | OFF> . . . 2-165
[:SENSe]:FREQuency:CENTer:SHARe? . . . 2-165
[:SENSe]:FREQuency:LIMit? . . . 2-165
[:SENSe]:FREQuency:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-165
[:SENSe]:FREQuency:OFFSet? . . . 2-165
[:SENSe]:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-166
[:SENSe]:FREQuency:SPAN? . . . 2-166
[:SENSe]:FREQuency:SPAN:FULL . . . 2-166
[:SENSe]:FREQuency:SPAN:LAST . . . 2-166
[:SENSe]:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-166
[:SENSe]:FREQuency:STARt? . . . 2-166
[:SENSe]:FREQuency:STEP[:INCRement] <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-167
[:SENSe]:FREQuency:STEP[:INCRement]? . . . 2-167
[:SENSe]:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-167
[:SENSe]:FREQuency:STOP? . . . 2-167
[:SENSe]:FREQuency:SWEep:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-167
[:SENSe]:FREQuency:SWEep:TIME? . . . 2-167
[:SENSe]:FREQuency:SWEep:TIMe:AUTO <0 | 1 | ON | OFF> . . . 2-168
[:SENSe]:FREQuency:SWEep:TIMe:AUTO? . . . 2-168
[:SENSe]:FSTRength:ANTenna <string> . . . 2-168
[:SENSe]:FSTRength:ANTenna? . . . 2-168
[:SENSe]:FSTRength:ANTenna:FACTor? . . . 2-168
[:SENSe]:FSTRength:ANTenna:FILE <block data> . . . 2-168
[:SENSe]:FSTRength:ANTenna:FILE? . . . 2-168
[:SENSe]:FSTRength:ANTenna:LIST? . . . 2-169
[:SENSe]:FSTRength:ANTenna:LIST:USER? . . . 2-169
[:SENSe]:FSTRength:STATe <0 | 1 | ON | OFF> . . . 2-170
[:SENSe]:FSTRength:STATe? . . . 2-170
[:SENSe]:FSTRength:STATe <0 | 1 | ON | OFF> . . . 2-170
[:SENSe]:FSTRength:STATe? . . . 2-170
[:SENSe]:GATE:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-170
[:SENSe]:GATE:DELay? . . . 2-170

www.tehencom.com

[:SENSe]:GATE:DLSLots[:ONE] <numeric_value> . . . 2-171
[:SENSe]:GATE:DLSLots[:ONE]? . . . 2-171
[:SENSe]:GATE:DLSLots:TWO <numeric_value> . . . 2-171
[:SENSe]:GATE:DLSLots:TWO? . . . 2-171
[:SENSe]:GATE:DLSYmbols[:ONE] <numeric_value> . . . 2-171
[:SENSe]:GATE:DLSYmbols[:ONE]? . . . 2-171
[:SENSe]:GATE:DLSYmbols:TWO <numeric_value> . . . 2-172
[:SENSe]:GATE:DLSYmbols:TWO? . . . 2-172
[:SENSe]:GATE:FRAMe:OFFSet <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-172
[:SENSe]:GATE:FRAMe:OFFSet? . . . 2-172
[:SENSe]:GATE:FRAMe:STARttime <AUTO|SYNO|UTC|UTC3pos|UTC2neg|CUSTom> . . . 2-173
[:SENSe]:GATE:FRAMe:STARttime? . . . 2-173
[:SENSe]:GATE:FRAMe:STARttime:FORCe . . . 2-173
[:SENSe]:GATE:FRAMestructure <A|B1|B2|CUSTom> . . . 2-173
[:SENSe]:GATE:FRAMestructure? . . . 2-173
[:SENSe]:GATE:FRAMestructure:SSTYpe <TYP1|TYP2> . . . 2-174
[:SENSe]:GATE:FRAMestructure:SSTYpe? . . . 2-174
[:SENSe]:GATE:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-174
[:SENSe]:GATE:LENGth? . . . 2-174
[:SENSe]:GATE:PERiod <P1s|P20ms|P10ms> . . . 2-174
[:SENSe]:GATE:PERiod? . . . 2-174
[:SENSe]:GATE:PERIodicity[:ONE]
<M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE> . . . 2-174
[:SENSe]:GATE:PERIodicity[:ONE]? . . . 2-174
[:SENSe]:GATE:PERIodicity:TWO
<M0P5|M0P625|M1P0|M1P25|M2P0|M2P5|M3P0|M4P0|M5P0|M10P0|NONE> . . . 2-175
[:SENSe]:GATE:PERIodicity:TWO? . . . 2-175
[:SENSe]:GATE:STATe <0 | 1 | ON | OFF> . . . 2-175
[:SENSe]:GATE:STATe? . . . 2-175
[:SENSe]:GATE:TRIGger <GPS|EXT> . . . 2-175
[:SENSe]:GATE:TRIGger? . . . 2-175
[:SENSe]:GATE:ULSLots[:ONE] <numeric_value> . . . 2-175
[:SENSe]:GATE:ULSLots[:ONE]? . . . 2-175
[:SENSe]:GATE:ULSLots:TWO <numeric_value> . . . 2-176
[:SENSe]:GATE:ULSLots:TWO? . . . 2-176
[:SENSe]:GATE:ULSYmbols[:ONE] <numeric_value> . . . 2-176
[:SENSe]:GATE:ULSYmbols[:ONE]? . . . 2-176
[:SENSe]:GATE:ULSYmbols:TWO <numeric_value> . . . 2-176
[:SENSe]:GATE:ULSYmbols:TWO? . . . 2-176
[:SENSe]:GSCNumber <numeric_value> . . . 2-177
[:SENSe]:GSCNumber? . . . 2-177
[:SENSe]:INTerference:BANDwidth|BWIDth:INTegration <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-177
[:SENSe]:INTerference:BANDwidth|BWIDth:INTegration? . . . 2-177
[:SENSe]:INTerference:MAX <numeric_value> {<amplitude_units>} . . . 2-177
[:SENSe]:INTerference:MAX? . . . 2-177
[:SENSe]:INTerference:MIN <numeric_value> {<amplitude_units>} . . . 2-178
[:SENSe]:INTerference:MIN? . . . 2-178
[:SENSe]:INTerference:STATe <0 | 1 | ON | OFF> . . . 2-178
[:SENSe]:INTerference:STATe? . . . 2-178
[:SENSe]:IQ:BITS <F32|I32|I16|A16|I10|I8> . . . 2-178
[:SENSe]:IQ:BITS? . . . 2-178
[:SENSe]:IQ:CONCatenate[:STATe] <0 | 1 | ON | OFF> . . . 2-179
[:SENSe]:IQ:CONCatenate[:STATe]? . . . 2-179
[:SENSe]:IQ:DISCard . . . 2-179
[:SENSe]:IQ:FPGA:SWITch <PCIe|IQC> . . . 2-179
[:SENSe]:IQ:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-179

www.tehencom.com

[:SENSe]:IQ:LENGth? . . . 2-179
[:SENSe]:IQ:LENGth:MAX? . . . 2-180
[:SENSe]:IQ:MEMory? . . . 2-180
[:SENSe]:IQ:MEMory:STREam? . . . 2-180
[:SENSe]:IQ:METadata? . . . 2-181
[:SENSe]:IQ:MODE <SINGle|STREam|CONTinuous> . . . 2-182
[:SENSe]:IQ:MODE? . . . 2-182
[:SENSe]:IQ:PORT <DATaout|USB|ETHernet> . . . 2-182
[:SENSe]:IQ:PORT? . . . 2-182
[:SENSe]:IQ:PORT:DATAout? . . . 2-182
[:SENSe]:IQ:SAMPle <SB6|SB7|SB8|SB9|SB10|SB11|SB12|SB13|SB14|SB15|SB16|SB17|SB18|SB19|SB20> 2-183
[:SENSe]:IQ:SAMPle? . . . 2-183
[:SENSe]:IQ:SAMPle:CALibration:CONFiguration? . . . 2-184
[:SENSe]:IQ:SAMPle:CONFiguration? . . . 2-184
[:SENSe]:IQ:SAVE:PROGress? . . . 2-185
[:SENSe]:IQ:SIGNing <0 | 1 | ON | OFF> . . . 2-185
[:SENSe]:IQ:SIGNing? . . . 2-185
[:SENSe]:IQ:STATus? . . . 2-185
[:SENSe]:IQ:TIMEstamps <0 | 1 | ON | OFF> . . . 2-186
[:SENSe]:IQ:TIMEstamps? . . . 2-186
[:SENSe]:ISOTropic:AXIS <X|Y|Z|NONE> . . . 2-187
[:SENSe]:ISOTropic:FACTors? . . . 2-187
[:SENSe]:ISOTropic:INFOrmation? . . . 2-188
[:SENSe]:LTE:CFI <AUTO|CFI1|CFI2|CFI3> . . . 2-188
[:SENSe]:LTE:CFI? . . . 2-188
[:SENSe]:LTE:OBANd <INValid|UL1|DL1|UL2|DL2|UL3|DL3|UL4|DL4|UL5|DL5|UL6|DL6|UL7|DL7|UL8|DL8|UL9|DL9|UL10|DL10|UL11|DL11|UL12|DL12|UL13|DL13|UL14|DL14|UL17|DL17|UL18|DL18|UL19|DL19|UL20|DL20|UL21|DL21|UL22|DL22|UL23|DL23|UL24|DL24|UL25|DL25|UL26|DL26|UL27|DL27|UL28|DL28|DL29|UL30|DL30|UL31|DL31|DL32|UL33|DL33|UL34|DL34|UL35|DL35|UL36|DL36|UL37|DL37|UL38|DL38|UL39|DL39|UL40|DL40|UL41|DL41|UL42|DL42|UL43|DL43|UL44|DL44|UL45|DL45|UL46|DL46|UL47|DL47|UL48|DL48|UL49|DL49|UL50|DL50|UL51|DL51|UL52|DL52|UL53|DL53|UL54|DL54|UL65|DL65|UL66|DL66|DL67|UL68|DL68|DL69|UL70|DL70|UL71|DL71|UL72|DL72|UL73|DL73|UL74|DL74|DL75|DL76|UL85|DL85|UL87|DL87|UL88|DL88|U103|D103|U106|D106> . . . 2-188
[:SENSe]:LTE:OBANd? . . . 2-189
[:SENSe]:MIMO:ANTenna:PORT <AUTO|ANT0|ANT1|ANT2|ANT3> . . . 2-189
[:SENSe]:MIMO:ANTenna:PORT? . . . 2-189
[:SENSe]:MODE <SPECtrum|NRADio|RTSA|LTE|IASPectrum|IARTsa> . . . 2-190
[:SENSe]:MODE? . . . 2-190
[:SENSe]:MODE:CATalog? . . . 2-190
[:SENSe]:MODulation:REFerence? . . . 2-190
[:SENSe]:MODulation:TYPE <ALL|QPSK|Q16|Q64|Q256> . . . 2-190
[:SENSe]:MODulation:TYPE? . . . 2-190
[:SENSe]:NGFactor <ONESixth|HALF|ONE|TWO> . . . 2-191
[:SENSe]:NGFactor? . . . 2-191
[:SENSe]:NRADio:MAPPing:PATTern <P1|P2|AUTO> . . . 2-191
[:SENSe]:NRADio:MAPPing:PATTern? . . . 2-191
[:SENSe]:OBANd <INValid|GLOBal|N1|N2|N3|N5|N7|N8|N12|N13|N14|N18|N20|N24|N25|N26|N28|N29|N30|N34|N38|N39|N40|N41|N46|N48|N50|N51|N53|N54|N65|N66|N67|N70|N71|N74|N75|N76|N77|N78|N79|N85|N90|N91|N92|N93|N94|N96|N100|N101|N102|N104|N105|N257|N258|N259|N260|N261|N262|N263> . . . 2-191
[:SENSe]:OBANd? . . . 2-191
[:SENSe]:OBWidth:METHod <XDB|PERCent> . . . 2-192
[:SENSe]:OBWidth:METHod? . . . 2-192
[:SENSe]:OBWidth:PERCent <numeric_value> . . . 2-192

www.tehencom.com

[:SENSe]:OBWidth:PERCent? . . . 2-192
[:SENSe]:OBWidth:STATe <0 | 1 | ON | OFF> . . . 2-192
[:SENSe]:OBWidth:STATe? . . . 2-192
[:SENSe]:OBWidth:XDB <numeric_value> {DB} . . . 2-193
[:SENSe]:OBWidth:XDB? . . . 2-193
[:SENSe][:OTA]:MAPPing:CHP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-193
[:SENSe][:OTA]:MAPPing:CHP:THReshold[:DATA]? . . . 2-193
[:SENSe][:OTA]:MAPPing:CSCanner:BESt <0 | 1 | ON | OFF> . . . 2-193
[:SENSe][:OTA]:MAPPing:CSCanner:BESt? . . . 2-193
[:SENSe][:OTA]:MAPPing:CSCanner:INDex <numeric_value> . . . 2-194
[:SENSe][:OTA]:MAPPing:CSCanner:INDex? . . . 2-194
[:SENSe][:OTA]:MAPPing:DEFaults <0 | 1 | ON | OFF> . . . 2-194
[:SENSe][:OTA]:MAPPing:DEFaults? . . . 2-194
[:SENSe][:OTA]:MAPPing:DISTance:UNIT <METers|FEET> . . . 2-194
[:SENSe][:OTA]:MAPPing:DISTance:UNIT? . . . 2-194
[:SENSe][:OTA]:MAPPing:MEASurement <CHPower|PSDensity|RSSI> . . . 2-195
[:SENSe][:OTA]:MAPPing:MEASurement? . . . 2-195
[:SENSe][:OTA]:MAPPing:POINts? . . . 2-195
[:SENSe][:OTA]:MAPPing:POINts:DELete . . . 2-195
[:SENSe][:OTA]:MAPPing:POINts:STAT? . . . 2-195
[:SENSe][:OTA]:MAPPing:POSition <string> . . . 2-196
[:SENSe][:OTA]:MAPPing:POSition? . . . 2-196
[:SENSe][:OTA]:MAPPing:PSD:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-196
[:SENSe][:OTA]:MAPPing:PSD:THReshold[:DATA]? . . . 2-196
[:SENSe][:OTA]:MAPPing:REPeat:DISTance <numeric_value> . . . 2-196
[:SENSe][:OTA]:MAPPing:REPeat:DISTance? . . . 2-196
[:SENSe][:OTA]:MAPPing:REPeat:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-197
[:SENSe][:OTA]:MAPPing:REPeat:TIME? . . . 2-197
[:SENSe][:OTA]:MAPPing:REPeat:TYPE <TIME|DISTance> . . . 2-197
[:SENSe][:OTA]:MAPPing:REPeat:TYPE? . . . 2-197
[:SENSe][:OTA]:MAPPing:RSP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-197
[:SENSe][:OTA]:MAPPing:RSP:THReshold[:DATA]? . . . 2-197
[:SENSe][:OTA]:MAPPing:RSQ:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-198
[:SENSe][:OTA]:MAPPing:RSQ:THReshold[:DATA]? . . . 2-198
[:SENSe][:OTA]:MAPPing:RSSI:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-198
[:SENSe][:OTA]:MAPPing:RSSI:THReshold[:DATA]? . . . 2-198
[:SENSe][:OTA]:MAPPing:RSS:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-198
[:SENSe][:OTA]:MAPPing:RSS:THReshold[:DATA]? . . . 2-198
[:SENSe][:OTA]:MAPPing:SOURce <ANY|DEFined> . . . 2-199
[:SENSe][:OTA]:MAPPing:SOURce? . . . 2-199
[:SENSe][:OTA]:MAPPing:SOURce:VALue <numeric_value> . . . 2-199
[:SENSe][:OTA]:MAPPing:SOURce:VALue? . . . 2-199
[:SENSe][:OTA]:MAPPing:SSP:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-199
[:SENSe][:OTA]:MAPPing:SSP:THReshold[:DATA]? . . . 2-199
[:SENSe][:OTA]:MAPPing:SSQ:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-200
[:SENSe][:OTA]:MAPPing:SSQ:THReshold[:DATA]? . . . 2-200
[:SENSe][:OTA]:MAPPing:SSS:THReshold[:DATA] <numeric_value> {<amplitude_units>}, {<numeric_value> {<amplitude_units>}}, ... 2-200

www.tehencom.com

[:SENSe][:OTA]:MAPPing:SSS:THReshold[:DATA]? . . . 2-200
[:SENSe][:OTA]:MAPPing:STATe <0 | 1 | ON | OFF> . . . 2-200
[:SENSe][:OTA]:MAPPing:STATe? . . . 2-200
[:SENSe][:OTA]:MAPPing:TYPE <INDoor|OUTDoor> . . . 2-201
[:SENSe][:OTA]:MAPPing:TYPE? . . . 2-201
[:SENSe]:PCI? . . . 2-202
[:SENSe]:POLar:CLEar . . . 2-203
[:SENSe]:POLar:DATA? . . . 2-203
[:SENSe]:POLar:DCOLlect <0 | 1 | ON | OFF> . . . 2-203
[:SENSe]:POLar:DCOLlect? . . . 2-203
[:SENSe]:POLar:STATe <0 | 1 | ON | OFF> . . . 2-203
[:SENSe]:POLar:STATe? . . . 2-203
[:SENSe]:POWer:RF:ATTenuation <numeric_value> {DB} . . . 2-204
[:SENSe]:POWer:RF:ATTenuation? . . . 2-204
[:SENSe]:POWer:RF:ATTenuation <numeric_value> {DB} . . . 2-204
[:SENSe]:POWer:RF:ATTenuation? . . . 2-204
[:SENSe]:POWer:RF:ATTenuation:AUTO <0 | 1 | ON | OFF> . . . 2-204
[:SENSe]:POWer:RF:ATTenuation:AUTO? . . . 2-204
[:SENSe]:POWer:RF:ATTenuation:AUTO <0 | 1 | ON | OFF> . . . 2-205
[:SENSe]:POWer:RF:ATTenuation:AUTO? . . . 2-205
[:SENSe]:POWer:RF:GAIN:AUTO <0 | 1 | ON | OFF> . . . 2-205
[:SENSe]:POWer:RF:GAIN:AUTO? . . . 2-205
[:SENSe]:POWer:RF:GAIN:STATe <0 | 1 | ON | OFF> . . . 2-205
[:SENSe]:POWer:RF:GAIN:STATe? . . . 2-205
[:SENSe]:POWer:RF:GAIN:STATe <0 | 1 | ON | OFF> . . . 2-205
[:SENSe]:POWer:RF:GAIN:STATe? . . . 2-205
[:SENSe]:SCANner? . . . 2-206
[:SENSe]:SCANner:STATe <0 | 1 | ON | OFF> . . . 2-208
[:SENSe]:SCANner:STATe? . . . 2-208
[:SENSe]:SEMask:CENTer:BWIDth <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-209
[:SENSe]:SEMask:CENTer:BWIDth? . . . 2-209
[:SENSe]:SEMask:MASK
<GT38|LT38|W43|W41|W35|W31|WK43|WK41|WK35|WK31|LK24|LK22|LK20|NK38|NK35|NK28|NK24|CUSTom> . . . 2-209
[:SENSe]:SEMask:MASK? . . . 2-209
[:SENSe]:SEMask:MASK:CUSTom <string>,<block data> . . . 2-210
[:SENSe]:SEMask:MASK:CUSTom? . . . 2-210
[:SENSe]:SEMask:MASK:TYPe? . . . 2-210
[:SENSe]:SEMask:RPOWer <numeric_value> {<amplitude_units>} . . . 2-211
[:SENSe]:SEMask:RPOWer? . . . 2-211
[:SENSe]:SEMask:RPOWer:STATe <0 | 1 | ON | OFF> . . . 2-211
[:SENSe]:SEMask:RPOWer:STATe? . . . 2-211
[:SENSe]:SEMask:STATe <0 | 1 | ON | OFF> . . . 2-211
[:SENSe]:SEMask:STATe? . . . 2-211
[:SENSe]:SIB:STATe <0 | 1 | ON | OFF> . . . 2-211
[:SENSe]:SIB:STATe? . . . 2-211
[:SENSe]:SSB? . . . 2-212
[:SENSe]:SSB:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-214
[:SENSe]:SSB:FREQuency? . . . 2-214
[:SENSe]:SSB:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-214
[:SENSe]:SSB:OFFSet? . . . 2-214
[:SENSe]:SSB:OFFSet:AUTO:ABORt . . . 2-214
[:SENSe]:SSB:OFFSet:AUTO:STARt . . . 2-214
[:SENSe]:SSB:OFFSet:AUTO:STATus? . . . 2-215
[:SENSe][:SSB]:SCSPacing <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-215
[:SENSe][:SSB]:SCSPacing? . . . 2-215

www.tehencom.com

[:SENSe][:SSB]:SCSPacing:CATalog? . . . 2-215
[:SENSe]:STATistics:CLEar . . . 2-215
[:SENSe]:SUBFrame <numeric_value> . . . 2-215
[:SENSe]:SUBFrame? . . . 2-215
[:SENSe]:SUBFrame:CONFiguration <AUTO|SSF0|SSF1|SSF2|SSF3|SSF4|SSF5|SSF6|SSF7|SSF8|SSF9|INValid> . . . 2-216
[:SENSe]:SUBFrame:CONFiguration? . . . 2-216
[:SENSe]:SUBFrame:SLOT <numeric_value> . . . 2-216
[:SENSe]:SUBFrame:SLOT? . . . 2-216
[:SENSe]:SWEep:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-216
[:SENSe]:SWEep:TIME? . . . 2-216
[:SENSe]:SWEep:TIME:AUTO <0 | 1 | ON | OFF> . . . 2-216
[:SENSe]:SWEep:TIME:AUTO? . . . 2-216
[:SENSe]:SYNCtype <SS> . . . 2-217
[:SENSe]:SYNCtype? . . . 2-217
[:SENSe]:TDOMain:DISPlay:LENGth <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-217
[:SENSe]:TDOMain:DISPlay:LENGth? . . . 2-217
[:SENSe]:TDOMain:DISPlay:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-217
[:SENSe]:TDOMain:DISPlay:STARt? . . . 2-217
[:SENSe]:TDOMain:STATe <0 | 1 | ON | OFF> . . . 2-217
[:SENSe]:TDOMain:STATe? . . . 2-217
[:SENSe]:TDOMain:TRACe[:DATa]? [<ASCii|INTeger|REAL>],[<numeric_value>] . . . 2-218
[:SENSe]:TDOMain:TRACe:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal> . . . 2-218
[:SENSe]:TDOMain:TRACe:DETector[:FUNCtion]? . . . 2-218
[:SENSe]:TDOMain:TRACe:DISPlay[:STATe] <0 | 1 | ON | OFF> . . . 2-218
[:SENSe]:TDOMain:TRACe:DISPlay[:STATe]? . . . 2-218
[:SENSe]:TDOMain:TRACe:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH> . . . 2-219
[:SENSe]:TDOMain:TRACe:TYPE? . . . 2-219
[:SENSe]:TDOMain:TRACe:UPDate[:STATe] <0 | 1 | ON | OFF> . . . 2-219
[:SENSe]:TDOMain:TRACe:UPDate[:STATe]? . . . 2-219
[:SENSe]:THD:FREQuency:FUNDamental <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-219
[:SENSe]:THD:FREQuency:FUNDamental? . . . 2-219
[:SENSe]:THD:FREQuency:FUNDamental:AUTO <0 | 1 | ON | OFF> . . . 2-220
[:SENSe]:THD:FREQuency:FUNDamental:AUTO? . . . 2-220
[:SENSe]:THD:STATe <0 | 1 | ON | OFF> . . . 2-220
[:SENSe]:THD:STATe? . . . 2-220
[:SENSe]:TRANsmission:STATe <0 | 1 | ON | OFF> . . . 2-220
[:SENSe]:TRANsmission:STATe? . . . 2-220
[:SENSe]:TRIangulation:BEARing:SOURce <ANTenna|MANual> . . . 2-220
[:SENSe]:TRIangulation:BEARing:SOURce? . . . 2-220
[:SENSe]:TRIangulation:BEARing:VALue <numeric_value> . . . 2-221
[:SENSe]:TRIangulation:BEARing:VALue? . . . 2-221
[:SENSe]:TRIangulation:CLEar . . . 2-221
[:SENSe]:TRIangulation:DATA? . . . 2-221
[:SENSe]:TRIangulation:REMove [<numeric_value>] . . . 2-221
[:SENSe]:TRIangulation:STATe <0 | 1 | ON | OFF> . . . 2-221
[:SENSe]:TRIangulation:STATe? . . . 2-221
[:SENSe]:TRIangulation:TRIGger . . . 2-221
[:SENSe]:UPDown:CONFig <numeric_value> . . . 2-222
[:SENSe]:UPDown:CONFig? . . . 2-222
[:SENSe]:WCDMa:DEMod:CPICh <numeric_value> {<amplitude_units>} . . . 2-222
[:SENSe]:WCDMa:DEMod:CPICh? . . . 2-222
[:SENSe]:WCDMa:DEMod:CPICh:STATe <0 | 1 | ON | OFF> . . . 2-222
[:SENSe]:WCDMa:DEMod:CPICh:STATe? . . . 2-222
[:SENSe]:WCDMa:DEMod:PICH:CODE <numeric_value> . . . 2-222

www.tehencom.com

[:SENSe]:WCDMa:DEMod:PICH:CODE? . . . 2-222
[:SENSe]:WCDMa:DEMod:SCCPch:CODE <numeric_value> . . . 2-223
[:SENSe]:WCDMa:DEMod:SCCPch:CODE? . . . 2-223
[:SENSe]:WCDMa:DEMod:SCCPch:SFACtor <string> . . . 2-223
[:SENSe]:WCDMa:DEMod:SCCPch:SFACtor? . . . 2-223
[:SENSe]:WCDMa:DEMod:SCODe <numeric_value> . . . 2-223
[:SENSe]:WCDMa:DEMod:SCODe? . . . 2-223
[:SENSe]:WCDMa:DEMod:SCODe:AUTO <0 | 1 | ON | OFF> . . . 2-223
[:SENSe]:WCDMa:DEMod:SCODe:AUTO? . . . 2-223
[:SENSe]:WCDMa:DEMod:SFACtor <string> . . . 2-224
[:SENSe]:WCDMa:DEMod:SFACtor? . . . 2-224
[:SENSe]:WCDMa:DEMod:THRShold <numeric_value> {DB} . . . 2-224
[:SENSe]:WCDMa:DEMod:THRShold? . . . 2-224
[:SENSe]:WCDMa:DEMod:THRShold:AUTO <0 | 1 | ON | OFF> . . . 2-224
[:SENSe]:WCDMa:DEMod:THRShold:AUTO? . . . 2-224
[:SENSe]:WCDMa:DEMod:TXPower <numeric_value> {<amplitude_units>} . . . 2-224
[:SENSe]:WCDMa:DEMod:TXPower? . . . 2-224
[:SENSe]:WCDMa:SYNC? . . . 2-225
:SOURce:FREQuency[:CW|FIXed] <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-226
:SOURce:FREQuency[:CW|FIXed]? . . . 2-226
:SOURce:FREQuency:OFFSet <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-226
:SOURce:FREQuency:OFFSet? . . . 2-226
:SOURce:MODe <SWEEp|OFFSet|FIXed|COUPled> . . . 2-227
:SOURce:MODe? . . . 2-227
:SOURce:POWer:DISPlay:OFFSet <numeric_value> {DB} . . . 2-227
:SOURce:POWer:DISPlay:OFFSet? . . . 2-227
:SOURce:POWer[:PORT][:LEVel][:IMMediate][:AMPLitude] <numeric_value> {<amplitude_units>} . . . 2-228
:SOURce:POWer[:PORT][:LEVel][:IMMediate][:AMPLitude]? . . . 2-228
:STATus:OPERation[:EVENt]? . . . 2-229
:THReshold:SINR <numeric_value> {DB} . . . 2-229
:THReshold:SINR? . . . 2-229
:TRACe<n>:IQ:DATA? [<numeric_value>] . . . 2-230
:TRACe<n>:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal> . . . 2-230
:TRACe<n>:DETector[:FUNCtion]? . . . 2-230
:TRACe<n>:DISPlay[:STATe] <0 | 1 | ON | OFF> . . . 2-231
:TRACe<n>:DISPlay[:STATe]? . . . 2-231
:TRACe<n>:DISPlay:VIEW:SPECtrogram:ELAPsed? . . . 2-231
:TRACe<n>:DISPlay:VIEW:SPECtrogram:POSition <numeric_value> . . . 2-231
:TRACe<n>:DISPlay:VIEW:SPECtrogram:POSition? . . . 2-231
:TRACe<n>:DISPlay:VIEW:SPECtrogram:TIME <numeric_value> . . . 2-231
:TRACe<n>:DISPlay:VIEW:SPECtrogram:TIME? . . . 2-231
:TRACe<n>:NORMalize <0 | 1 | ON | OFF> . . . 2-232
:TRACe<n>:NORMalize? . . . 2-232
:TRACe<n>:SWEep:COUNt[:CURRent]? . . . 2-232
:TRACe<n>:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage|MATH> 2-233
:TRACe<n>:TYPE? . . . 2-233
:TRACe<n>:UPDate[:STATe] <0 | 1 | ON | OFF> . . . 2-233
:TRACe<n>:UPDate[:STATe]? . . . 2-233
:TRACe:CLEar <numeric_value> . . . 2-233
:TRACe:CLEar:ALL . . . 2-234
:TRACe[:DATA]? <numeric_value> . . . 2-234
:TRACe[:DATA]:ALL? [<ASCii|INTeger|REAL>],[<numeric_value>] . . . 2-235
:TRACe:IQ:DATA:FORMat <PACKed> . . . 2-236
:TRACe:IQ:DATA:FORMat? . . . 2-236
:TRACe:PLAYback <PLAY|STOP|PAUSe> . . . 2-237
:TRACe:PLAYback? . . . 2-237

www.tehencom.com

:TRACe:PLAYback:FILE? 2-237
:TRACe:PLAYback:INTerval <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-237
:TRACe:PLAYback:INTerval? 2-237
:TRACe:PLAYback:LOOP <0 | 1 | ON | OFF> 2-237
:TRACe:PLAYback:LOOP? 2-237
:TRACe:PLAYback:POSition? 2-238
:TRACe:PLAYback:SEEK <numeric_value> 2-238
:TRACe:PLAYback:SEEK? 2-238
:TRACe:PLAYback:TAG <NEXT|PREVious|ADD|REMove|ALL> 2-238
:TRACe:PLAYback:TAGS? [<RECord|PLAYback>] 2-239
:TRACe:PLAYback:TAG:TABLe <0 | 1 | ON | OFF> 2-239
:TRACe:PLAYback:TAG:TABLe? 2-239
:TRACe:PRESet:ALL 2-239
:TRACe:RECord <RECord|STOP|PAUSe> 2-239
:TRACe:RECord? 2-239
:TRACe:RECord:CSV:LINK <RECord|PLAYback|OFF> 2-240
:TRACe:RECord:CSV:LINK? 2-240
:TRACe:RECord:CSV:STATe <RECord|STOP|PAUSe> 2-240
:TRACe:RECord:CSV:STATe? 2-240
:TRACe:RECord:INTerval:MODE <AUTO|MANual> 2-241
:TRACe:RECord:INTerval:MODE? 2-241
:TRACe:RECord:INTerval:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-241
:TRACe:RECord:INTerval:TIME? 2-241
:TRACe:RECord:LINK <0 | 1 | ON | OFF> 2-241
:TRACe:RECord:LINK? 2-241
:TRACe:RECord:MODE <AUTO|TIMed> 2-242
:TRACe:RECord:MODE? 2-242
:TRACe:RECord:TAG 2-242
:TRACe:RECord:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-242
:TRACe:RECord:TIME? 2-242
:TRACe:SELect <numeric_value> 2-242
:TRACe:SELect? 2-242
:TRACe:SPECtrogram:DETector[:FUNCtion] <POSitive|RMS|NEGative|SAMPle|NORMal> 2-243
:TRACe:SPECtrogram:DETector[:FUNCtion]? 2-243
:TRACe:SPECtrogram:TYPE <NORMal|MINimum|MAXimum|AVERage|RMAXimum|RMINimum|RAVerage> . . 2-243
:TRACe:SPECtrogram:TYPE? 2-243
:TRACe:STATus? <numeric_value> 2-244
:TRIGger:GATE:SLOPe <POSitive|NEGative> 2-244
:TRIGger:GATE:SLOPe? 2-244
:TRIGger[:SEQuence]:ATRigger <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-245
:TRIGger[:SEQuence]:ATRigger? 2-245
:TRIGger[:SEQuence]:ATRigger:STATe <0 | 1 | ON | OFF> 2-245
:TRIGger[:SEQuence]:ATRigger:STATe? 2-245
:TRIGger[:SEQuence]:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-245
:TRIGger[:SEQuence]:DELay? 2-245
:TRIGger[:SEQuence]:DELay:STATe <0 | 1 | ON | OFF> 2-245
:TRIGger[:SEQuence]:DELay:STATe? 2-245
:TRIGger[:SEQuence]:HOLDoff <numeric_value> {PS | NS | US | MS | S | MIN | HR} 2-246
:TRIGger[:SEQuence]:HOLDoff? 2-246
:TRIGger[:SEQuence]:HOLDoff:STATe <0 | 1 | ON | OFF> 2-246
:TRIGger[:SEQuence]:HOLDoff:STATe? 2-246
:TRIGger[:SEQuence]:SLOPe <POSitive|NEGative> 2-246
:TRIGger[:SEQuence]:SLOPe? 2-246
:TRIGger[:SEQuence]:SOURce <EXT|IMMediate|VIDeo> 2-246
:TRIGger[:SEQuence]:SOURce? 2-246

www.tehencom.com

:TRIGger[:SEQuence]:VIDeo:HYSTeresis <numeric_value> {DB} . . . 2-247
:TRIGger[:SEQuence]:VIDeo:HYSTeresis? . . . 2-247
:TRIGger[:SEQuence]:VIDeo:LEVel <numeric_value> {<amplitude_units>} . . . 2-247
:TRIGger[:SEQuence]:VIDeo:LEVel? . . . 2-247
:UNIT:CHPower:PSDensity <HZ|MHZ> . . . 2-247
:UNIT:CHPower:PSDensity? . . . 2-247
:UNIT:POWer <DBM|DBM/M2|DBW|DBW/M2|DBV|DBV/M|DBMV|DB-MV/M|DBUV|DBUV/M|DBA|DBA/M|V|V/M|A|A/M|W|W/M2|W/CM2> . . . 2-248
:UNIT:POWer? . . . 2-248
:UNIT:POWer <DBM|DBM/M2|DBW|DBW/M2|DBV|DBV/M|DBMV|DB-MV/M|DBUV|DBUV/M|DBA|DBA/M|V|V/M|A|A/M|W|W/M2|W/CM2> . . . 2-248
:UNIT:POWer? . . . 2-248
High Accuracy Power Meter Commands . . . 2-249
:CALCulate:FORWard:LIMit:LOWer <numeric_value> {DBM} . . . 2-249
:CALCulate:FORWard:LIMit:LOWer? . . . 2-249
:CALCulate:FORWard:LIMit:LOWer:FAIL? . . . 2-249
:CALCulate:FORWard:LIMit:LOWer:PERCent <percent_value> . . . 2-249
:CALCulate:FORWard:LIMit:LOWer:PERCent? . . . 2-249
:CALCulate:FORWard:LIMit:UPPer <numeric_value> {DBM} . . . 2-250
:CALCulate:FORWard:LIMit:UPPer? . . . 2-250
:CALCulate:FORWard:LIMit:UPPer:FAIL? . . . 2-250
:CALCulate:FORWard:LIMit:UPPer:PERCent <percent_value> . . . 2-250
:CALCulate:FORWard:LIMit:UPPer:PERCent? . . . 2-250
:CALCulate:FORWard:RELative:STATe <0 | 1 | ON | OFF> . . . 2-251
:CALCulate:FORWard:RELative:STATe? . . . 2-251
:CALCulate:LIMit:ALARm:STATe <0 | 1 | ON | OFF> . . . 2-251
:CALCulate:LIMit:ALARm:STATe? . . . 2-251
:CALCulate:LIMit:LOWer <numeric_value> {DBM} . . . 2-251
:CALCulate:LIMit:LOWer? . . . 2-251
:CALCulate:LIMit:LOWer:FAIL? . . . 2-252
:CALCulate:LIMit:LOWer:PERCent <percent_value> . . . 2-252
:CALCulate:LIMit:LOWer:PERCent? . . . 2-252
:CALCulate:LIMit:STATe <0 | 1 | ON | OFF> . . . 2-252
:CALCulate:LIMit:STATe? . . . 2-252
:CALCulate:LIMit:UPPer <numeric_value> {DBM} . . . 2-252
:CALCulate:LIMit:UPPer? . . . 2-252
:CALCulate:LIMit:UPPer:FAIL? . . . 2-253
:CALCulate:LIMit:UPPer:PERCent <percent_value> . . . 2-253
:CALCulate:LIMit:UPPer:PERCent? . . . 2-253
:CALCulate:MAXHold:STATe <0 | 1 | ON | OFF> . . . 2-253
:CALCulate:MAXHold:STATe? . . . 2-253
:CALCulate:RELative:STATe <0 | 1 | ON | OFF> . . . 2-253
:CALCulate:RELative:STATe? . . . 2-253
:CALCulate:REVerse:LIMit:LOWer <numeric_value> {DBM} . . . 2-254
:CALCulate:REVerse:LIMit:LOWer? . . . 2-254
:CALCulate:REVerse:LIMit:LOWer:FAIL? . . . 2-254
:CALCulate:REVerse:LIMit:LOWer:PERCent <percent_value> . . . 2-254
:CALCulate:REVerse:LIMit:LOWer:PERCent? . . . 2-254
:CALCulate:REVerse:LIMit:UPPer <numeric_value> {DBM} . . . 2-255
:CALCulate:REVerse:LIMit:UPPer? . . . 2-255
:CALCulate:REVerse:LIMit:UPPer:FAIL? . . . 2-255
:CALCulate:REVerse:LIMit:UPPer:PERCent <percent_value> . . . 2-255
:CALCulate:REVerse:LIMit:UPPer:PERCent? . . . 2-255
:CALCulate:REVerse:RELative:STATe <0 | 1 | ON | OFF> . . . 2-256
:CALCulate:REVerse:RELative:STATe? . . . 2-256
:CALibration:ZERO . . . 2-256

www.tehencom.com

:DISPlay:WINDow[:SCALe]:MAXimum <numeric_value> {DBM} . . . 2-256
:DISPlay:WINDow[:SCALe]:MAXimum? . . . 2-256
:DISPlay:WINDow[:SCALe]:MAXimum:PERCent <percent_value> . . . 2-256
:DISPlay:WINDow[:SCALe]:MAXimum:PERCent? . . . 2-256
:DISPlay:WINDow[:SCALe]:MINimum <numeric_value> {DBM} . . . 2-257
:DISPlay:WINDow[:SCALe]:MINimum? . . . 2-257
:DISPlay:WINDow[:SCALe]:MINimum:PERCent <percent_value> . . . 2-257
:DISPlay:WINDow[:SCALe]:MINimum:PERCent? . . . 2-257
:MMEMory:STORe:FDATa:CSV <string>,<string> . . . 2-257
:SENSe:APERture <numeric_value> . . . 2-258
:SENSe:APERture? . . . 2-258
:SENSe:APERture:MODE <HAT|LAT> . . . 2-258
:SENSe:APERture:MODE? . . . 2-258
:SENSe:AVERage:COUNt <numeric_value> . . . 2-258
:SENSe:AVERage:COUNt? . . . 2-258
:SENSe:AVERage:SWEep? . . . 2-258
:SENSe:CCDFthreshold <numeric_value> . . . 2-259
:SENSe:CCDFthreshold? . . . 2-259
:SENSe:CORRection:EXTernal:GAIN <numeric_value> {DB} . . . 2-259
:SENSe:CORRection:EXTernal:GAIN? . . . 2-259
:SENSe:CORRection:EXTernal:LOSS <numeric_value> {DB} . . . 2-259
:SENSe:CORRection:EXTernal:LOSS? . . . 2-259
:SENSe:DUTYcycle <percent_value> . . . 2-260
:SENSe:DUTYcycle? . . . 2-260
:SENSe:FREQuency <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-260
:SENSe:FREQuency? . . . 2-260
:SENSe:FREQuency:SSTandard:CATalog? . . . 2-260
:SENSe:FREQuency:SSTandard:NAME <string> . . . 2-260
:SENSe:FREQuency:SSTandard:NAME? . . . 2-260
:SENSe:MAXHold:DATA? . . . 2-261
:SENSe:MODType <NONE|GSM|SINGle|MULT|ISDB|CDMA> . . . 2-261
:SENSe:MODType? . . . 2-261
:SENSe:POWer:DATA? . . . 2-261
:SENSe:POWer:FORWard <FAVG|CRESt|BAM|PEAK|BAA|CCDF> . . . 2-262
:SENSe:POWer:FORWard? . . . 2-262
:SENSe:POWer:INLine:DATA? . . . 2-263
:SENSe:POWer:REVerse <RAVG|REFL|RLOSs|VSWR> . . . 2-266
:SENSe:POWer:REVerse? . . . 2-266
:SENSe:SUMMary <0 | 1 | ON | OFF> . . . 2-266
:SENSe:SUMMary? . . . 2-266
:SENSe:SWEep:MODE <CONTinuous|SINGle> . . . 2-266
:SENSe:SWEep:MODE? . . . 2-266
:SENSe:USBDevice:PSENsor:INFormation? . . . 2-267
:SENSe:VBW <FULL|FOUR|TWO> . . . 2-267
:SENSe:VBW? . . . 2-267
:TRIGger[:SEQuence][:REMote]:SINGle . . . 2-267
:UNIT:POWer <DBM|WATTs> . . . 2-267
:UNIT:POWer? . . . 2-267
Cable and Antenna Analyzer Commands . . . 2-268
:CALCulate<n>:LIMit:PRESet . . . 2-268
:CALCulate<n>:MARKer:ALL:OFF . . . 2-268
:CALCulate<n>:MARKer:ALL:ON . . . 2-268
:CALCulate<n>:MARKer:PRESet . . . 2-268
:CALCulate<n>:MARKer:TABLe[:STATe] <0 | 1 | ON | OFF> . . . 2-268
:CALCulate<n>:MARKer:TABLe[:STATe]? . . . 2-268
:CALCulate<n>:MEASurement:CONFigure <RLDTf|TDDTf> . . . 2-269

www.tehencom.com

:CALCulate<n>:TRACe<n>:DATA? <FDATa|SDATa|FMEM|SMEM> . . . 2-269
:CALCulate<n>:TRACe<n>:LIMit:ALARm <0 | 1 | ON | OFF> . . . 2-269
:CALCulate<n>:TRACe<n>:LIMit:ALARm? . . . 2-269
:CALCulate<n>:TRACe<n>:LIMit:FAIL? . . . 2-270
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe] <0 | 1 | ON | OFF> . . . 2-270
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe]? . . . 2-270
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y <numeric_value> . . . 2-271
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y? . . . 2-271
:CALCulate<n>:TRACe<n>:LIMit:MESSage <0 | 1 | ON | OFF> . . . 2-271
:CALCulate<n>:TRACe<n>:LIMit:MESSage? . . . 2-271
:CALCulate<n>:TRACe<n>:LIMit:MODE <SINGle|SEGMented> . . . 2-272
:CALCulate<n>:TRACe<n>:LIMit:MODE? . . . 2-272
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ADD . . . 2-272
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL <block data> . . . 2-273
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL? . . . 2-273
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:CLEar . . . 2-273
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:COUNt? [<UPPer|LOWer>] . . . 2-273
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:DELete [<numeric_value>] . . . 2-274
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect <numeric_value> . . . 2-274
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect? . . . 2-274
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X <numeric_value> . . . 2-275
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X? . . . 2-275
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y <numeric_value> . . . 2-275
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y? . . . 2-275
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X <numeric_value> . . . 2-276
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X? . . . 2-276
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y <numeric_value> . . . 2-276
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y? . . . 2-276
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE <UPPer|LOWer> . . . 2-277
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE? . . . 2-277
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:STATus? [<block data>] . . . 2-277
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe <numeric_value> . . . 2-278
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe? . . . 2-278
:CALCulate<n>:TRACe<n>:LIMit:TYPE <UPPer|LOWer> . . . 2-278
:CALCulate<n>:TRACe<n>:LIMit:TYPE? . . . 2-278
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe] <0 | 1 | ON | OFF> . . . 2-279
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe]? . . . 2-279
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y <numeric_value> . . . 2-279
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y? . . . 2-279
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE <NORMal|DELTa> . . . 2-280
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE? . . . 2-280
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE <TRACe|MEMory> . . . 2-280
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE? . . . 2-280
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe] <0 | 1 | ON | OFF> . . . 2-281
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe]? . . . 2-281
:CALCulate<n>:TRACe<n>:MARKer<n>:TIME:X? . . . 2-281
:CALCulate<n>:TRACe<n>:MARKer<n>:X <numeric_value> . . . 2-282
:CALCulate<n>:TRACe<n>:MARKer<n>:X? . . . 2-282
:CALCulate<n>:TRACe<n>:MARKer<n>:Y? . . . 2-282
:CALCulate<n>:TRACe<n>:MARKer:LSearch? . . . 2-283
:CALCulate<n>:TRACe<n>:MARKer:MOVE:LEFT . . . 2-283
:CALCulate<n>:TRACe<n>:MARKer:MOVE:RIGHt . . . 2-283
:CALCulate<n>:TRACe<n>:MARKer:PEAK . . . 2-284
:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:OTWO . . . 2-284
:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:TFOur . . . 2-284
:CALCulate<n>:TRACe<n>:MARKer:SELect <numeric_value> . . . 2-285

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:SELect? . . . 2-285
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe] <0 | 1 | ON | OFF> . . . 2-285
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe]? . . . 2-285
:CALCulate<n>:TRACe<n>:MARKer:VALLey . . . 2-285
:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:OTWO . . . 2-286
:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:TFOur . . . 2-286
:CALCulate<n>:TRACe<n>:MATH:FUNCtion <NORMal|FADD|FSUBtract|FAVerage> . . . 2-287
:CALCulate<n>:TRACe<n>:MATH:FUNCtion? . . . 2-287
:CALCulate<n>:TRACe<n>:SMOothing:APERture <numeric_value> . . . 2-287
:CALCulate<n>:TRACe<n>:SMOothing:APERture? . . . 2-287
:CALCulate<n>:TRACe<n>:CLAVerage? . . . 2-288
:CALCulate<n>:TRACe<n>:MEASurement <RLOSs|DTFRloss|VSWR|DTFVswr|CLOSs|TRES|SMITh|PHASe|TRANsmission|TDOHm|TDLin> . . . 2-288
:CALCulate<n>:TRACe<n>:MEASurement? . . . 2-288
:CALCulate<n>:TRACe[:DATA]:ALL? . . . 2-288
:CALCulate<n>:TRACe:LIMit:PRESet . . . 2-289
:CALCulate<n>:TRANsform:CLAVerage? . . . 2-289
:CALCulate<n>:TRANsform:DISTance:CABLe:INFormation? [<string>] . . . 2-289
:CALCulate<n>:TRANsform:DISTance:CABLelist:ACTive? . . . 2-290
:CALCulate<n>:TRANsform:DISTance:CABLelist:CATalog? . . . 2-290
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME <string> . . . 2-290
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME? . . . 2-290
:CALCulate<n>:TRANsform:DISTance:CABLoss <numeric_value> . . . 2-290
:CALCulate<n>:TRANsform:DISTance:CABLoss? . . . 2-290
:CALCulate<n>:TRANsform:DISTance:DATA? . . . 2-291
:CALCulate<n>:TRANsform:DISTance:DMAX? . . . 2-291
:CALCulate<n>:TRANsform:DISTance:PVELocity <numeric_value> . . . 2-291
:CALCulate<n>:TRANsform:DISTance:PVELocity? . . . 2-291
:CALCulate<n>:TRANsform:DISTance:RESolution? . . . 2-292
:CALCulate<n>:TRANsform:DISTance:STARt <numeric_value> . . . 2-292
:CALCulate<n>:TRANsform:DISTance:STARt? . . . 2-292
:CALCulate<n>:TRANsform:DISTance:STOP <numeric_value> . . . 2-292
:CALCulate<n>:TRANsform:DISTance:STOP? . . . 2-292
:CALCulate<n>:TRANsform:DISTance:UNIT <METers|FEET> . . . 2-293
:CALCulate<n>:TRANsform:DISTance:UNIT? . . . 2-293
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:ADD <string> . . . 2-293
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:CLEar . . . 2-293
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:DELete <string> . . . 2-293
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:INFormation? [<string>] . . . 2-294
:CALCulate<n>:TRANsform:DISTance:USER:CABLelist:CATalog? . . . 2-294
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME <string> . . . 2-294
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME? . . . 2-294
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:REName <string>,<string> . . . 2-294
:CALCulate<n>:TRANsform:DISTance:WINDow <RECTangular|NSLobe|LSLobe|MSLobe> . . . 2-295
:CALCulate<n>:TRANsform:DISTance:WINDow? . . . 2-295
:DIAGnostic:SWEep:FREQuency:DATA? . . . 2-295
:DISPlay<n>:WINDow:TRACe<n>:STATe <TRACe|MEMory|BOTH> . . . 2-295
:DISPlay<n>:WINDow:TRACe<n>:STATe? . . . 2-295
:DISPlay:WINDow<n>:LAYout <SINGle|HDUal> . . . 2-296
:DISPlay:WINDow<n>:LAYout? . . . 2-296
:DISPlay:WINDow<n>:TRACe<n>:Y:AUTO . . . 2-296
:DISPlay:WINDow<n>:TRACe<n>:Y:BOTTom <numeric_value> . . . 2-296
:DISPlay:WINDow<n>:TRACe<n>:Y:BOTTom? . . . 2-296
:DISPlay:WINDow<n>:TRACe<n>:Y:FULL . . . 2-297
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart <STANdard|E10|E20|E30|C3> . . . 2-297
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart? . . . 2-297

www.tehencom.com

:DISPlay:WINDow<n>:TRACe<n>:Y:TOP <numeric_value> . . . 2-297
:DISPlay:WINDow<n>:TRACe<n>:Y:TOP? . . . 2-297
:DISPlay:WINDow<n>:TRACe:SCALe:PRESet . . . 2-298
:FORMat[:READings][:DATA] <REAL|INTeger>,[<numeric_value>] . . . 2-298
:FORMat[:READings][:DATA]? . . . 2-298
:INITiate:VNA:SELFtest? . . . 2-298
:MMEMory:CABLelist? . . . 2-298
:MMEMory:LOAD <string> . . . 2-299
:MMEMory:STORe <string> . . . 2-299
:MMEMory:USER:CABLelist <block data> . . . 2-299
:MMEMory:USER:CABLelist? . . . 2-299
:SENSe<n>:AVERage:CLEar . . . 2-300
:SENSe<n>:AVERage:COUNt <numeric_value> . . . 2-300
:SENSe<n>:AVERage:COUNt? . . . 2-300
:SENSe<n>:AVERage:STATe <0 | 1 | ON | OFF> . . . 2-300
:SENSe<n>:AVERage:STATe? . . . 2-300
:SENSe<n>:AVERage:SWEep? . . . 2-300
:SENSe<n>:CORRection:COLLect:ABORt . . . 2-300
:SENSe<n>:CORRection:COLLect[:ACQuire] <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value> . . . 2-301
:SENSe<n>:CORRection:COLLect:ACQuire:STATus? <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|INSTacal>,<numeric_value> . . . 2-301
:SENSe<n>:CORRection:COLLect:ACTive:TYPE? . . . 2-302
:SENSe<n>:CORRection:COLLect:CKIT:INFormation? <numeric_value> . . . 2-302
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:CATalog? . . . 2-302
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:RIMPedance? . . . 2-303
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string> . . . 2-303
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect]? . . . 2-303
:SENSe<n>:CORRection:COLLect:CONNector:CATalog? <numeric_value> . . . 2-303
:SENSe<n>:CORRection:COLLect:INFormation? . . . 2-304
:SENSe<n>:CORRection:COLLect:INFormation:FACTory:INFormation? . . . 2-304
:SENSe<n>:CORRection:COLLect:INITialize . . . 2-304
:SENSe<n>:CORRection:COLLect:LOAD . . . 2-304
:SENSe<n>:CORRection:COLLect:OPEN . . . 2-305
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector <MN|FN> . . . 2-305
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector? . . . 2-305
:SENSe<n>:CORRection:COLLect:SAVE . . . 2-305
:SENSe<n>:CORRection:COLLect:SHORt . . . 2-305
:SENSe<n>:CORRection:COLLect:STATus? . . . 2-306
:SENSe<n>:CORRection:COLLect:STEP:STATus? . . . 2-306
:SENSe<n>:CORRection:COLLect:TYPE <RFP1|ES2P|TRES|TRFP|FP2P|IRP1|IS2P|IF2P> . . . 2-306
:SENSe<n>:CORRection:COLLect:TYPE? . . . 2-306
:SENSe<n>:CORRection:COLLect:VALid:STATus? . . . 2-307
:SENSe<n>:CORRection:DATA? <ERF|EDF|ESF|ETF|ELF|EXF|ERR|EDR|ESR|ETR|ELR|EXR> . . . 2-307
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart <numeric_value> . . . 2-307
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart? . . . 2-307
:SENSe<n>:CORRection[:STATe] <0 | 1 | ON | OFF> . . . 2-308
:SENSe<n>:CORRection[:STATe]? . . . 2-308
:SENSe<n>:CORRection:TYPE <STANdard|FLEX> . . . 2-308
:SENSe<n>:CORRection:TYPE? . . . 2-308
:SENSe<n>:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-308
:SENSe<n>:FREQuency:CENTer? . . . 2-308
:SENSe<n>:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-309
:SENSe<n>:FREQuency:SPAN? . . . 2-309
:SENSe<n>:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-309
:SENSe<n>:FREQuency:STARt? . . . 2-309

www.tehencom.com

:SENSe<n>:FREQuency:STEP? . . . 2-309
:SENSe<n>:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-310
:SENSe<n>:FREQuency:STOP? . . . 2-310
:SENSe<n>:HOLD:FUNCtion:RF[:STATe] <0 | 1 | ON | OFF> . . . 2-310
:SENSe<n>:HOLD:FUNCtion:RF[:STATe]? . . . 2-310
:SENSe<n>:SWEep:DYNamic:RANGe <HIGH|NORMal> . . . 2-310
:SENSe<n>:SWEep:DYNamic:RANGe? . . . 2-310
:SENSe<n>:SWEep:MODE <CONTinuous|SINGle> . . . 2-311
:SENSe<n>:SWEep:MODE? . . . 2-311
:SENSe<n>:SWEep:POINt <numeric_value> . . . 2-311
:SENSe<n>:SWEep:POINt? . . . 2-311
:SENSe<n>:SWEep:RATE <NORMal|FAST> . . . 2-311
:SENSe<n>:SWEep:RATE? . . . 2-311
:SENSe<n>:SWEep:RFIMmunity <HIGH|LOW> . . . 2-312
:SENSe<n>:SWEep:RFIMmunity? . . . 2-312
:SENSe<n>:SWEep:STATe <RUN|HOLD> . . . 2-312
:SENSe<n>:SWEep:STATe? . . . 2-312
:SENSe<n>:SWEep:TIME? . . . 2-312
:SENSe<n>:TRACe<n>:AMPLitude:UNIT? . . . 2-312
:SENSe<n>:TRACe:PRESet . . . 2-313
:SENSe<n>:TRACe:SELect <numeric_value> . . . 2-313
:SENSe<n>:TRACe:SELect? . . . 2-313
:SENSe<n>:TRACe:TOTal <numeric_value> . . . 2-313
:SENSe<n>:TRACe:TOTal? . . . 2-313
:SENSe<n>:USBDevice:INSTacal:INFormation? . . . 2-313
:SENSe<n>:USBDevice:PSENsor:INFormation? . . . 2-314
[:SENSe]:FREQuency:SPAN:FULL . . . 2-314
:SOURce<n>:POWer:PORT<n>:RANGe <HIGH|LOW> . . . 2-314
:SOURce<n>:POWer:PORT<n>:RANGe? . . . 2-314
:STATus:OPERation[:EVENt]? . . . 2-315
:TRACe[:DATA]? <numeric_value> . . . 2-316
:TRIGger[:SEQuence][:IMMediate][:REMote] . . . 2-316
:TRIGger[:SEQuence][:REMote]:SINGle . . . 2-316
Vector Network Analyzer Commands . . . 2-317
:CALCulate<n>:FORMat:SNP[:DATA] <DB|MA|RI> . . . 2-317
:CALCulate<n>:FORMat:SNP[:DATA]? . . . 2-317
:CALCulate<n>:FORMat:SNP:FREQuency <HZ|KHZ|MHZ|GHZ> . . . 2-317
:CALCulate<n>:FORMat:SNP:FREQuency? . . . 2-317
:CALCulate<n>:FSEGment:CLEar . . . 2-317
:CALCulate<n>:FSEGment:INFormation? [<numeric_value>] . . . 2-318
:CALCulate<n>:FSEGment[:TABLe]:DATA? . . . 2-318
:CALCulate<n>:LIMit:PRESet . . . 2-318
:CALCulate<n>:MARKer:ALL:OFF . . . 2-318
:CALCulate<n>:MARKer:ALL:ON . . . 2-318
:CALCulate<n>:MARKer:PRESet . . . 2-319
:CALCulate<n>:MARKer:TABLe[:STATe] <0 | 1 | ON | OFF> . . . 2-319
:CALCulate<n>:MARKer:TABLe[:STATe]? . . . 2-319
:CALCulate<n>:PARameter<n>:FORMat
<MLOGarithmic|SWR|PHASe|SMITh|GDELay|REAL|IMAGinary|RIMPedance|IIMPedance|ISMith|ML/2|PLINear
|PLOGarithmic|UWPHase|MLINear|ZMAGnitude> . . . 2-319
:CALCulate<n>:PARameter<n>:FORMat? . . . 2-319
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric <AIR|MICRoporus|OTHer|POLYethylene|TEFLon>
2-320
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric? . . . 2-320
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric:OTHer <numeric_value> . . . 2-320
:CALCulate<n>:REFerence:EXTension:COAXial:DIELectric:OTHer? . . . 2-320

www.tehencom.com

:CALCulate<n>:REFerence:EXTension:PORT<n>:DISTance <numeric_value> 2-320
:CALCulate<n>:REFerence:EXTension:PORT<n>:DISTance? 2-320
:CALCulate<n>:REFerence:EXTension:PORT<n>:LOSS <numeric_value> {DB} 2-321
:CALCulate<n>:REFerence:EXTension:PORT<n>:LOSS? 2-321
:CALCulate<n>:REFerence:EXTension:PORT<n>:POFFset <numeric_value> 2-321
:CALCulate<n>:REFerence:EXTension:PORT<n>:POFFset? 2-321
:CALCulate<n>:REFerence:EXTension:PORT<n>:SLOPe <numeric_value> 2-322
:CALCulate<n>:REFerence:EXTension:PORT<n>:SLOPe? 2-322
:CALCulate<n>:REFerence:EXTension:PORT<n>:TIME <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . 2-322
:CALCulate<n>:REFerence:EXTension:PORT<n>:TIME? 2-322
:CALCulate<n>:REFerence:EXTension:STATe? 2-322
:CALCulate<n>:REFerence:EXTension:WAVeguide:DIELectric <numeric_value> 2-323
:CALCulate<n>:REFerence:EXTension:WAVeguide:DIELectric? 2-323
:CALCulate<n>[:SELected]:GDELay:APERture <numeric_value> 2-323
:CALCulate<n>[:SELected]:GDELay:APERture? 2-323
:CALCulate<n>[:SELected]:PARameter<n>:MEMory:MEMorize <ML1|ML2|ML3|ML4> 2-323
:CALCulate<n>[:SELected]:SMOothing:APERture <numeric_value> 2-323
:CALCulate<n>[:SELected]:SMOothing:APERture? 2-323
:CALCulate<n>:TRACe<n>:DATA? <FDATa|SDATa|FMEM|SMEM> 2-324
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:CENTer <numeric_value> {M | FT} 2-324
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:CENTer? 2-324
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:SPAN <numeric_value> {M | FT} 2-325
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:SPAN? 2-325
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STARt <numeric_value> {M | FT} 2-325
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STARt? 2-325
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STOP <numeric_value> {M | FT} 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE:DISTance:STOP? 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE:NOTCh[:STATe] <0 | 1 | ON | OFF> 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE:NOTCh[:STATe]? 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE:SHAPe <MAXimum|WIDE|NORMal|MINimum> 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE:SHAPe? 2-326
:CALCulate<n>:TRACe<n>:FILTer:GATE[:STATe] <OFF|DISPlay|ON> 2-327
:CALCulate<n>:TRACe<n>:FILTer:GATE[:STATe]? 2-327
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:CENTer <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . 2-327
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:CENTer? 2-327
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:SPAN <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-328
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:SPAN? 2-328
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-328
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STARt? 2-328
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STOP <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-329
:CALCulate<n>:TRACe<n>:FILTer:GATE:TIME:STOP? 2-329
:CALCulate<n>:TRACe<n>:GDELay:APERture <numeric_value> 2-329
:CALCulate<n>:TRACe<n>:GDELay:APERture? 2-329
:CALCulate<n>:TRACe<n>:LIMit:ALARm <0 | 1 | ON | OFF> 2-329
:CALCulate<n>:TRACe<n>:LIMit:ALARm? 2-329
:CALCulate<n>:TRACe<n>:LIMit:FAIL? 2-330
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe] <0 | 1 | ON | OFF> 2-330
:CALCulate<n>:TRACe<n>:LIMit:LOWer[:STATe]? 2-330
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y <numeric_value> 2-331
:CALCulate<n>:TRACe<n>:LIMit:LOWer:Y? 2-331
:CALCulate<n>:TRACe<n>:LIMit:MESSage <0 | 1 | ON | OFF> 2-331

www.tehencom.com

:CALCulate<n>:TRACe<n>:LIMit:MESSage? . . . 2-331
:CALCulate<n>:TRACe<n>:LIMit:MODE <SINGle|SEGMented> . . . 2-332
:CALCulate<n>:TRACe<n>:LIMit:MODE? . . . 2-332
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ADD . . . 2-332
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL <block data> . . . 2-333
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:ALL? . . . 2-333
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:CLEar . . . 2-333
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:COUNt? [<UPPer|LOWer>] . . . 2-333
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:DELete [<numeric_value>] . . . 2-334
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect <numeric_value> . . . 2-334
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:SELect? . . . 2-334
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X <numeric_value> . . . 2-335
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:X? . . . 2-335
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y <numeric_value> . . . 2-335
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STARt:Y? . . . 2-335
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X <numeric_value> . . . 2-336
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:X? . . . 2-336
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y <numeric_value> . . . 2-336
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:STOP:Y? . . . 2-336
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE <UPPer|LOWer> . . . 2-337
:CALCulate<n>:TRACe<n>:LIMit:SEGMent[:SELected]:TYPE? . . . 2-337
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:STATus? [<block data>] . . . 2-337
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe <numeric_value> . . . 2-338
:CALCulate<n>:TRACe<n>:LIMit:SEGMent:VMOVe? . . . 2-338
:CALCulate<n>:TRACe<n>:LIMit:TYPE <UPPer|LOWer> . . . 2-338
:CALCulate<n>:TRACe<n>:LIMit:TYPE? . . . 2-338
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe] <0 | 1 | ON | OFF> . . . 2-339
:CALCulate<n>:TRACe<n>:LIMit:UPPer[:STATe]? . . . 2-339
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y <numeric_value> . . . 2-339
:CALCulate<n>:TRACe<n>:LIMit:UPPer:Y? . . . 2-339
:CALCulate<n>:TRACe<n>:MARKer<n>:DISTance:X? . . . 2-340
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE <NORMal|DELTa> . . . 2-340
:CALCulate<n>:TRACe<n>:MARKer<n>:MODE? . . . 2-340
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE <TRACe|MEMory> . . . 2-341
:CALCulate<n>:TRACe<n>:MARKer<n>:MOVE? . . . 2-341
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe] <0 | 1 | ON | OFF> . . . 2-341
:CALCulate<n>:TRACe<n>:MARKer<n>[:STATe]? . . . 2-341
:CALCulate<n>:TRACe<n>:MARKer<n>:X <numeric_value> . . . 2-342
:CALCulate<n>:TRACe<n>:MARKer<n>:X? . . . 2-342
:CALCulate<n>:TRACe<n>:MARKer<n>:Y? . . . 2-342
:CALCulate<n>:TRACe<n>:MARKer:LSearch? . . . 2-343
:CALCulate<n>:TRACe<n>:MARKer:MAXimum . . . 2-343
:CALCulate<n>:TRACe<n>:MARKer:MINimum . . . 2-343
:CALCulate<n>:TRACe<n>:MARKer:MOVE:CENTer . . . 2-344
:CALCulate<n>:TRACe<n>:MARKer:MOVE:LEFT . . . 2-344
:CALCulate<n>:TRACe<n>:MARKer:MOVE:REFerence . . . 2-344
:CALCulate<n>:TRACe<n>:MARKer:MOVE:RIGHt . . . 2-345
:CALCulate<n>:TRACe<n>:MARKer:MOVE:STARt . . . 2-345
:CALCulate<n>:TRACe<n>:MARKer:MOVE:STOP . . . 2-345
:CALCulate<n>:TRACe<n>:MARKer:PEAK . . . 2-346
:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:OTWO . . . 2-346
:CALCulate<n>:TRACe<n>:MARKer:PEAK:BOUNded:TFOur . . . 2-346
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion <numeric_value> . . . 2-347
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion? . . . 2-347
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion:STATe <0 | 1 | ON | OFF> . . . 2-347
:CALCulate<n>:TRACe<n>:MARKer:PEAK:EXCursion:STATe? . . . 2-347

www.tehencom.com

:CALCulate<n>:TRACe<n>:MARKer:PEAK:LEFT . . . 2-347
:CALCulate<n>:TRACe<n>:MARKer:PEAK:NEXT . . . 2-348
:CALCulate<n>:TRACe<n>:MARKer:PEAK:RIGHt . . . 2-348
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold <numeric_value> . . . 2-348
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold? . . . 2-348
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold:STATe <0 | 1 | ON | OFF> . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:PEAK:THReshold:STATe? . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:SELect <numeric_value> . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:SELect? . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe] <0 | 1 | ON | OFF> . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:TRACking[:STATe]? . . . 2-349
:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:OTWO . . . 2-350
:CALCulate<n>:TRACe<n>:MARKer:VALLey:BOUNded:TFOur . . . 2-350
:CALCulate<n>:TRACe<n>:MATH:FUNCtion <NORMal|ADD|SUBTract|MULTiply|DIVide|AVERage> . . . 2-351
:CALCulate<n>:TRACe<n>:MATH:FUNCtion? . . . 2-351
:CALCulate<n>:TRACe<n>:REFerence:EXTension:AUTO:DISTance . . . 2-351
:CALCulate<n>:TRACe<n>:REFerence:EXTension:FDEPendent:AUTO . . . 2-352
:CALCulate<n>:TRACe<n>:SMOothing:APERture <numeric_value> . . . 2-352
:CALCulate<n>:TRACe<n>:SMOothing:APERture? . . . 2-352
:CALCulate<n>:TRACe<n>:TRANsform:TIME:BPASs:STIMulus <STANdard|PHASor> . . . 2-352
:CALCulate<n>:TRACe<n>:TRANsform:TIME:BPASs:STIMulus? . . . 2-352
:CALCulate<n>:TRACe<n>:TRANsform:TIME:LPASs:STIMulus <STEP|IMPulse> . . . 2-353
:CALCulate<n>:TRACe<n>:TRANsform:TIME:LPASs:STIMulus? . . . 2-353
:CALCulate<n>:TRACe[:DATA]:ALL? . . . 2-353
:CALCulate<n>:TRACe:LIMit:PRESet . . . 2-354
:CALCulate<n>:TRANsform:DISTance:CABLe:INFormation? [<string>] . . . 2-354
:CALCulate<n>:TRANsform:DISTance:CABLelist:ACTive? . . . 2-354
:CALCulate<n>:TRANsform:DISTance:CABLelist:CATalog? . . . 2-354
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME <string> . . . 2-355
:CALCulate<n>:TRANsform:DISTance:CABLe:NAME? . . . 2-355
:CALCulate<n>:TRANsform:DISTance:CABLoss <numeric_value> . . . 2-355
:CALCulate<n>:TRANsform:DISTance:CABLoss? . . . 2-355
:CALCulate<n>:TRANsform:DISTance:DATA? . . . 2-355
:CALCulate<n>:TRANsform:DISTance:DMAX? . . . 2-356
:CALCulate<n>:TRANsform:DISTance:FCUToff <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-356
:CALCulate<n>:TRANsform:DISTance:FCUToff? . . . 2-356
:CALCulate<n>:TRANsform:DISTance:MEDium <COAX|WAVeguide> . . . 2-356
:CALCulate<n>:TRANsform:DISTance:MEDium? . . . 2-356
:CALCulate<n>:TRANsform:DISTance:PVELocity <numeric_value> . . . 2-357
:CALCulate<n>:TRANsform:DISTance:PVELocity? . . . 2-357
:CALCulate<n>:TRANsform:DISTance:RESolution? . . . 2-357
:CALCulate<n>:TRANsform:DISTance:STARt <numeric_value> . . . 2-357
:CALCulate<n>:TRANsform:DISTance:STARt? . . . 2-357
:CALCulate<n>:TRANsform:DISTance:STOP <numeric_value> . . . 2-358
:CALCulate<n>:TRANsform:DISTance:STOP? . . . 2-358
:CALCulate<n>:TRANsform:DISTance:UNIT <METers|FEET> . . . 2-358
:CALCulate<n>:TRANsform:DISTance:UNIT? . . . 2-358
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:ADD <string> . . . 2-358
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:CLEar . . . 2-359
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:DELete <string> . . . 2-359
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:INFormation? [<string>] . . . 2-359
:CALCulate<n>:TRANsform:DISTance:USER:CABLelist:CATalog? . . . 2-359
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME <string> . . . 2-360
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:NAME? . . . 2-360
:CALCulate<n>:TRANsform:DISTance:USER:CABLe:REName <string>,<string> . . . 2-360
:CALCulate<n>:TRANsform:DISTance:WAVeguidelist:CATalog? . . . 2-360

www.tehencom.com

:CALCulate<n>:TRANsform:DISTance:WAVeguide:NAME <string> . . . 2-360
:CALCulate<n>:TRANsform:DISTance:WAVeguide:NAME? . . . 2-360
:CALCulate<n>:TRANsform:DISTance:WGLoss <numeric_value> . . . 2-360
:CALCulate<n>:TRANsform:DISTance:WGLoss? . . . 2-360
:CALCulate<n>:TRANsform:DISTance:WINDow <RECTangular|NSLobe|LSLobe|MSLobe|KBESsel|DCHeby-shev> . . . 2-361
:CALCulate<n>:TRANsform:DISTance:WINDow? . . . 2-361
:CALCulate<n>:TRANsform:DISTance:WINDow:DCGamma <numeric_value> {DB} . . . 2-361
:CALCulate<n>:TRANsform:DISTance:WINDow:DCGamma? . . . 2-361
:CALCulate<n>:TRANsform:DISTance:WINDow:KBBeta <numeric_value> . . . 2-361
:CALCulate<n>:TRANsform:DISTance:WINDow:KBBeta? . . . 2-361
:CALCulate<n>:TRANsform:TIME:DATA? . . . 2-362
:CALCulate<n>:TRANsform:TIME:RESolution? . . . 2-362
:CALCulate<n>:TRANsform:TIME:STARt <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-362
:CALCulate<n>:TRANsform:TIME:STARt? . . . 2-362
:CALCulate<n>:TRANsform:TIME:STOP <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-363
:CALCulate<n>:TRANsform:TIME:STOP? . . . 2-363
:CALCulate<n>:TRANsform:TIME:TMAX? . . . 2-363
:CALCulate<n>:TRANsform:TIME:TYPE? . . . 2-363
:CALCulate<n>:TRANsform:TIME:TYPE:AUTO <0 | 1 | ON | OFF> . . . 2-364
:CALCulate<n>:TRANsform:TIME:TYPE:AUTO? . . . 2-364
:CALCulate<n>:TRANsform:TIME:WINDow <RECTangular|NSLobe|LSLobe|MSLobe|KBESsel|DCHebyshev> . 2-364
:CALCulate<n>:TRANsform:TIME:WINDow? . . . 2-364
:CALCulate<n>:TRANsform:TIME:WINDow:DCGamma <numeric_value> {DB} . . . 2-364
:CALCulate<n>:TRANsform:TIME:WINDow:DCGamma? . . . 2-364
:CALCulate<n>:TRANsform:TIME:WINDow:KBBeta <numeric_value> . . . 2-365
:CALCulate<n>:TRANsform:TIME:WINDow:KBBeta? . . . 2-365
:CALCulate:TRANsform:GATE[:DATA]:BINary? <numeric_value> . . . 2-365
:DIAGnostic:SWEep:FREQuency:DATA? . . . 2-365
:DISPlay<n>:WINDow:TRACe<n>:STATe <TRACe|MEMory|BOTH> . . . 2-366
:DISPlay<n>:WINDow:TRACe<n>:STATe? . . . 2-366
:DISPlay:WINDow<n>:LAYout <SINGle|HDUal|VDUal|HTRI|VTRI|QUAD> . . . 2-366
:DISPlay:WINDow<n>:LAYout? . . . 2-366
:DISPlay:WINDow<n>:SPLit <R1C1|R1C2|R2C1|C2R2R1|R2C1C2|R2C2> . . . 2-367
:DISPlay:WINDow<n>:SPLit? . . . 2-367
:DISPlay:WINDow<n>:TRACe<n>:CENTer:MOVE . . . 2-367
:DISPlay:WINDow<n>:TRACe<n>:REFMarker:MOVE . . . 2-367
:DISPlay:WINDow<n>:TRACe<n>:STARt:MOVE . . . 2-368
:DISPlay:WINDow<n>:TRACe<n>:STOP:MOVE . . . 2-368
:DISPlay:WINDow<n>:TRACe<n>:Y:AUTO . . . 2-368
:DISPlay:WINDow<n>:TRACe<n>:Y:FULL . . . 2-368
:DISPlay:WINDow<n>:TRACe<n>:Y:PDIV <numeric_value> . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:PDIV? . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:RLEV <numeric_value> . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:RLEV? . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:RPOS <numeric_value> . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:RPOS? . . . 2-369
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart <STANdard|E10|E20|E30|C3> . . . 2-370
:DISPlay:WINDow<n>:TRACe<n>:Y:SMCHart? . . . 2-370
:DISPlay:WINDow<n>:TRACe:SCALe:PRESet . . . 2-370
:FORMat[:READings][:DATA] <REAL|INTeger>,[<numeric_value>] . . . 2-370
:FORMat[:READings][:DATA]? . . . 2-370
:INITiate:VNA:SELFtest? . . . 2-370
:MMEMory:CABLelist? . . . 2-371
:MMEMory:LOAD <string> . . . 2-371

www.tehencom.com

:MMEMory:LOAD:FSEGment <string>,<string> . . . 2-371
:MMEMory:LOAD:LIMit <string>,<string> . . . 2-372
:MMEMory:STORe <string> . . . 2-372
:MMEMory:STORe:FSEGment <string>,<string> . . . 2-372
:MMEMory:STORe:LIMit <string>,<string> . . . 2-373
:MMEMory:USER:CABLelist <block data> . . . 2-373
:MMEMory:USER:CABLelist? . . . 2-373
:SENSe<n>:AVERage:CLEar . . . 2-373
:SENSe<n>:AVERage:COUNt <numeric_value> . . . 2-374
:SENSe<n>:AVERage:COUNt? . . . 2-374
:SENSe<n>:AVERage:STATe <0 | 1 | ON | OFF> . . . 2-374
:SENSe<n>:AVERage:STATe? . . . 2-374
:SENSe<n>:AVERage:SWEep? . . . 2-374
:SENSe<n>:BANDwidth[:RESolution] <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-374
:SENSe<n>:BANDwidth[:RESolution]? . . . 2-374
:SENSe<n>:CORRection:COLLect:ABORt . . . 2-375
:SENSe<n>:CORRection:COLLect[:ACQuire] <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZERO|IN-STacal>,<numeric_value> . . . 2-375
:SENSe<n>:CORRection:COLLect:ACQuire:STATus? <OPEN|SHORt|SHT1|SHT2|LOAD|THRU|ISOLation|ZE-RO|INSTacal>,<numeric_value> . . . 2-376
:SENSe<n>:CORRection:COLLect:ACTive:TYPE? . . . 2-376
:SENSe<n>:CORRection:COLLect:CKIT:INFormation? <numeric_value> . . . 2-376
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:CATalog? . . . 2-377
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>:RIMPedance? . . . 2-377
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string> . . . 2-377
:SENSe<n>:CORRection:COLLect:CKIT:PORT<n>[:SELect]? . . . 2-377
:SENSe<n>:CORRection:COLLect:CONNector:CATalog? <numeric_value> . . . 2-378
:SENSe<n>:CORRection:COLLect:INFormation? . . . 2-378
:SENSe<n>:CORRection:COLLect:INFormation:FACTory:INFormation? . . . 2-378
:SENSe<n>:CORRection:COLLect:INITialize . . . 2-379
:SENSe<n>:CORRection:COLLect:INTerpolation[:STATe] <0 | 1 | ON | OFF> . . . 2-379
:SENSe<n>:CORRection:COLLect:INTerpolation[:STATe]? . . . 2-379
:SENSe<n>:CORRection:COLLect:LOAD . . . 2-379
:SENSe<n>:CORRection:COLLect:MEDium <COAX|WAVeguide> . . . 2-379
:SENSe<n>:CORRection:COLLect:MEDium? . . . 2-379
:SENSe<n>:CORRection:COLLect:METHod <SOLT|SSLT> . . . 2-380
:SENSe<n>:CORRection:COLLect:METHod? . . . 2-380
:SENSe<n>:CORRection:COLLect:OPEN . . . 2-380
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector
<MK|FK|MN|FN|MC|FC|M716|F716|MS|FS|MV|FV|M4P310|F4P310|WG11|WG12|WG13> . . . 2-381
:SENSe<n>:CORRection:COLLect:PORT<n>:DCONnector? . . . 2-381
:SENSe<n>:CORRection:COLLect:RDEVice <OPEN|SHORt|SHT1|SHT2> . . . 2-381
:SENSe<n>:CORRection:COLLect:RDEVice? . . . 2-381
:SENSe<n>:CORRection:COLLect:RDEVice:CATalog:FULL? . . . 2-381
:SENSe<n>:CORRection:COLLect:SAVE . . . 2-382
:SENSe<n>:CORRection:COLLect:SHORt . . . 2-382
:SENSe<n>:CORRection:COLLect:STATus? . . . 2-382
:SENSe<n>:CORRection:COLLect:STEP:STATus? . . . 2-382
:SENSe<n>:CORRection:COLLect:THRU:SELect <P1THru|P2THru|USRThru> . . . 2-383
:SENSe<n>:CORRection:COLLect:THRU:SELect? . . . 2-383
:SENSe<n>:CORRection:COLLect:TUPDate . . . 2-383
:SENSe<n>:CORRection:COLLect:TYPE <RFP1|ES2P|TRES|TRFP|RRP1|FP2P|IRP1|IS2P|IF2P> . . . 2-383
:SENSe<n>:CORRection:COLLect:TYPE? . . . 2-383
:SENSe<n>:CORRection:COLLect:USRThru:INFormation? . . . 2-384
:SENSe<n>:CORRection:COLLect:USRThru:LDELay <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-384

www.tehencom.com

:SENSe<n>:CORRection:COLLect:USRThru:LDELay? . . . 2-384
:SENSe<n>:CORRection:COLLect:USRThru:LENGth <numeric_value> . . . 2-384
:SENSe<n>:CORRection:COLLect:USRThru:LENGth? . . . 2-384
:SENSe<n>:CORRection:COLLect:VALid:STATus? . . . 2-385
:SENSe<n>:CORRection:DATA? <ERF|EDF|ESF|ETF|ELF|EXF|ERR|EDR|ESR|ETR|ELR|EXR> . . . 2-385
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart <numeric_value> . . . 2-385
:SENSe<n>:CORRection:IMPedance[:INPut][:MAGNitude]:SMCHart? . . . 2-385
:SENSe<n>:CORRection:SPARams? . . . 2-385
:SENSe<n>:CORRection[:STATe] <0 | 1 | ON | OFF> . . . 2-386
:SENSe<n>:CORRection[:STATe]? . . . 2-386
:SENSe<n>:CORRection:TYPE <STANdard|FLEX> . . . 2-386
:SENSe<n>:CORRection:TYPE? . . . 2-386
:SENSe<n>:DFRequency:DATA <block data> . . . 2-386
:SENSe<n>:DFRequency:DATA? . . . 2-386
:SENSe<n>:DFRequency:DATA:SIZE? . . . 2-387
:SENSe<n>:FREQuency:CENTer <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-387
:SENSe<n>:FREQuency:CENTer? . . . 2-387
:SENSe<n>:FREQuency:SPAN <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-387
:SENSe<n>:FREQuency:SPAN? . . . 2-387
:SENSe<n>:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-388
:SENSe<n>:FREQuency:STARt? . . . 2-388
:SENSe<n>:FREQuency:STEP? . . . 2-388
:SENSe<n>:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-388
:SENSe<n>:FREQuency:STOP? . . . 2-388
:SENSe<n>:FSEGment:ADD <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>] 2-388
:SENSe<n>:FSEGment:ADD:AUTO [<numeric_value>] . . . 2-389
:SENSe<n>:FSEGment:COUNt? . . . 2-389
:SENSe<n>:FSEGment:DELete [<numeric_value>] . . . 2-390
:SENSe<n>:FSEGment:EDIT <numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value>,<numeric_value> {HZ | KHZ | MHZ | GHZ},<numeric_value> {DBM},[<numeric_value>] 2-390
:SENSe<n>:FSEGment:FREQuency:STARt <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-390
:SENSe<n>:FSEGment:FREQuency:STARt? . . . 2-390
:SENSe<n>:FSEGment:FREQuency:STOP <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-391
:SENSe<n>:FSEGment:FREQuency:STOP? . . . 2-391
:SENSe<n>:FSEGment:POINts? . . . 2-391
:SENSe<n>:FSEGment:SELect <numeric_value> . . . 2-391
:SENSe<n>:FSEGment:SELect? . . . 2-391
:SENSe<n>:FSEGment:STARt? . . . 2-392
:SENSe<n>:FSEGment:STOP? . . . 2-392
:SENSe<n>:FSEGment:SWEep:IFBW <numeric_value> {HZ | KHZ | MHZ | GHZ} . . . 2-392
:SENSe<n>:FSEGment:SWEep:IFBW? . . . 2-392
:SENSe<n>:FSEGment:SWEep:POINt <numeric_value> . . . 2-393
:SENSe<n>:FSEGment:SWEep:POINt? . . . 2-393
:SENSe<n>:HOLD:FUNCtion:RF[:STATe] <0 | 1 | ON | OFF> . . . 2-393
:SENSe<n>:HOLD:FUNCtion:RF[:STATe]? . . . 2-393
:SENSe<n>:SWEep:MODE <CONTinuous|SINGle> . . . 2-393
:SENSe<n>:SWEep:MODE? . . . 2-393
:SENSe<n>:SWEep:POINt <numeric_value> . . . 2-394
:SENSe<n>:SWEep:POINt? . . . 2-394
:SENSe<n>:SWEep:RFIMmunity <HIGH|LOW> . . . 2-394
:SENSe<n>:SWEep:RFIMmunity? . . . 2-394
:SENSe<n>:SWEep:STATe <RUN|HOLD> . . . 2-394
:SENSe<n>:SWEep:STATe? . . . 2-394

www.tehencom.com

:SENSe<n>:SWEep:TIME? . . . 2-394
:SENSe<n>:SWEep:TYPE <SEGMented|LINear> . . . 2-395
:SENSe<n>:SWEep:TYPE? . . . 2-395
:SENSe<n>:TRACe<n>:AMPLitude:UNIT? . . . 2-395
:SENSe<n>:TRACe<n>:DOMain <FREQuency|TIME|DISTance|FGT> . . . 2-395
:SENSe<n>:TRACe<n>:DOMain? . . . 2-395
:SENSe<n>:TRACe<n>:SPARams <S11|S21|USR|ES21> . . . 2-396
:SENSe<n>:TRACe<n>:SPARams? . . . 2-396
:SENSe<n>:TRACe<n>:SPARams:USR:DENominator <A1|B1|B2|ONE> . . . 2-396
:SENSe<n>:TRACe<n>:SPARams:USR:DENominator? . . . 2-396
:SENSe<n>:TRACe<n>:SPARams:USR:NUMerator <A1|B1|B2|ONE> . . . 2-396
:SENSe<n>:TRACe<n>:SPARams:USR:NUMerator? . . . 2-396
:SENSe<n>:TRACe<n>:SPARams:USR:PORT <numeric_value> . . . 2-397
:SENSe<n>:TRACe<n>:SPARams:USR:PORT? . . . 2-397
:SENSe<n>:TRACe:PRESet . . . 2-397
:SENSe<n>:TRACe:SELect <numeric_value> . . . 2-397
:SENSe<n>:TRACe:SELect? . . . 2-397
:SENSe<n>:TRACe:TOTal <numeric_value> . . . 2-397
:SENSe<n>:TRACe:TOTal? . . . 2-397
:SENSe<n>:USBDevice:INSTacal:INFormation? . . . 2-398
:SENSe<n>:USBDevice:PSENsor:INFormation? . . . 2-398
[:SENSe]:FREQuency:SPAN:FULL . . . 2-398
:SOURce<n>:FSEGment:POWer:PORT<n> <numeric_value> {DBM} . . . 2-398
:SOURce<n>:FSEGment:POWer:PORT<n>? . . . 2-398
:SOURce<n>:POWer:CORRection:COLLect:ABORt . . . 2-399
:SOURce<n>:POWer:CORRection:COLLect[:ACQuire] <ZERO|PCAL> . . . 2-399
:SOURce<n>:POWer:CORRection:COLLect:APPLy . . . 2-399
:SOURce<n>:POWer:CORRection:PORT:SELect <PORT1> . . . 2-399
:SOURce<n>:POWer:CORRection:PORT:SELect? . . . 2-399
:SOURce<n>:POWer:PORT<n>:CORRection:COLLect:STATus? . . . 2-400
:SOURce<n>:POWer:PORT<n>:CORRection:STATe <0 | 1 | ON | OFF> . . . 2-400
:SOURce<n>:POWer:PORT<n>:CORRection:STATe? . . . 2-400
:SOURce<n>:POWer:PORT<n>:CORRection:TARGet <numeric_value> {DBM} . . . 2-400
:SOURce<n>:POWer:PORT<n>:CORRection:TARGet? . . . 2-400
:SOURce<n>:POWer:PORT<n>[:LEVel][:IMMediate][:AMPLitude] <numeric_value> . . . 2-401
:SOURce<n>:POWer:PORT<n>[:LEVel][:IMMediate][:AMPLitude]? . . . 2-401
:SOURce<n>:RECeiver:CORRection:COLLect:ABORt . . . 2-401
:SOURce<n>:RECeiver:CORRection:COLLect[:ACQuire] . . . 2-401
:SOURce<n>:RECeiver:CORRection:COLLect:APPLy . . . 2-401
:SOURce<n>:RECeiver:CORRection:PORT:SELect <PORT2> . . . 2-401
:SOURce<n>:RECeiver:CORRection:PORT:SELect? . . . 2-401
:SOURce<n>:RECeiver:PORT<n>:CORRection:COLLect:STATus? . . . 2-402
:SOURce<n>:RECeiver:PORT<n>:CORRection:STATe <0 | 1 | ON | OFF> . . . 2-402
:SOURce<n>:RECeiver:PORT<n>:CORRection:STATe? . . . 2-402
:SOURce<n>:RECeiver:PORT<n>:CORRection:TARGet <numeric_value> {DBM} . . . 2-402
:SOURce<n>:RECeiver:PORT<n>:CORRection:TARGet? . . . 2-402
:STATus:OPERation[:EVENt]? . . . 2-403
:TRACe[:DATA]? <numeric_value> . . . 2-404
:TRIGger<n>[:SEQuence]:DELay <numeric_value> {PS | NS | US | MS | S | MIN | HR} . . . 2-404
:TRIGger<n>[:SEQuence]:DELay? . . . 2-404
:TRIGger<n>[:SEQuence]:SOURce <INTernal|EXT1|EPO1> . . . 2-405
:TRIGger<n>[:SEQuence]:SOURce? . . . 2-405
:TRIGger[:SEQuence][:IMMediate][:REMote] . . . 2-405
:TRIGger[:SEQuence][:REMote]:SINGle . . . 2-405
Vector Volt Meter Commands . . . 2-405
:FETCh:VVM:DATA? . . . 2-405

www.tehencom.com

:FETCh:VVM:TABLe:MEASurement? <ABSolute|RELative>,[<numeric_value>] 2-406
:FETCh:VVM:ZERO:REFerence? 2-406
:INITiate[:IMMediate] 2-406
:INITiate:VVM:HOLD <0 | 1 | ON | OFF> 2-406
:INITiate:VVM:HOLD? 2-406
:MMEMory:LOAD <string> 2-407
:MMEMory:STORe <string> 2-407
[:SENSe]:VVM:AVERage:CLEar 2-407
[:SENSe]:VVM:AVERage:COUNt <numeric_value> | DEFault | MINimum | MAXimum 2-407
[:SENSe]:VVM:AVERage:COUNt? [DEFault | MINimum | MAXimum] 2-407
[:SENSe]:VVM:AVERage:MODE <SINGle|CONTinuous> 2-408
[:SENSe]:VVM:AVERage:MODE? 2-408
[:SENSe]:VVM:CALibration:STATe? 2-408
[:SENSe]:VVM:CORRection:COLLect:ABORt 2-408
[:SENSe]:VVM:CORRection:COLLect[:ACQuire] <OPEN|SHORt|LOAD|THRU>,<numeric_value> 2-408
[:SENSe]:VVM:CORRection:COLLect:ACQuire:STATus? <OPEN|SHORt|LOAD|THRU>,<numeric_value> 2-409
[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>:CATalog? 2-409
[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>:INFormation? 2-409
[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>[:SELect] <string> 2-410
[:SENSe]:VVM:CORRection:COLLect:CKIT:PORT<n>[:SELect]? 2-410
[:SENSe]:VVM:CORRection:COLLect:INFormation? 2-410
[:SENSe]:VVM:CORRection:COLLect:INFormation:FACTory:INFormation? 2-410
[:SENSe]:VVM:CORRection:COLLect:INFO:STATus? 2-410
[:SENSe]:VVM:CORRection:COLLect:INITialize 2-411
[:SENSe]:VVM:CORRection:COLLect:LOAD 2-411
[:SENSe]:VVM:CORRection:COLLect:OPEN 2-411
[:SENSe]:VVM:CORRection:COLLect:PORT<n>:CONNector:CATalog? 2-411
[:SENSe]:VVM:CORRection:COLLect:PORT<n>:DCONnector
<MK|MN|MC|M716|MS|MV|M4P310|FK|FN|FC|F716|FS|FV|F4P310> 2-411
[:SENSe]:VVM:CORRection:COLLect:PORT<n>:DCONnector? 2-411
[:SENSe]:VVM:CORRection:COLLect:SAVE 2-411
[:SENSe]:VVM:CORRection:COLLect:SHORt 2-412
[:SENSe]:VVM:CORRection:COLLect:TUPDate 2-412
[:SENSe]:VVM:CORRection:COLLect:TYPE <RFP1|RRP1|TRFP|FP2P> 2-412
[:SENSe]:VVM:CORRection:COLLect:TYPE? 2-412
[:SENSe]:VVM:CORRection:COLLect:TYPE:ACTive? 2-412
[:SENSe]:VVM:CORRection[:STATe] <0 | 1 | ON | OFF> 2-412
[:SENSe]:VVM:CORRection[:STATe]? 2-412
[:SENSe]:VVM:DISPlay:FORMat <CW|TABLe> 2-412
[:SENSe]:VVM:DISPlay:FORMat? 2-412
[:SENSe]:VVM:DISPlay:RESolution <ONEDigit|TWODigit> 2-413
[:SENSe]:VVM:DISPlay:RESolution? 2-413
[:SENSe]:VVM:FORMat <LMP|LNMP|VSWR|IMPedance> 2-413
[:SENSe]:VVM:FORMat? 2-413
[:SENSe]:VVM:FREQuency:CW <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum . . 2-413
[:SENSe]:VVM:FREQuency:CW? [DEFault | MINimum | MAXimum] 2-413
[:SENSe]:VVM:IMPedance <numeric_value> | DEFault | MINimum | MAXimum 2-413
[:SENSe]:VVM:IMPedance? [DEFault | MINimum | MAXimum] 2-413
[:SENSe]:VVM:MEASurement:TYPE <P1T|P1R|A/B|B/A|A|B> 2-414
[:SENSe]:VVM:MEASurement:TYPE? 2-414
[:SENSe]:VVM:PORT<n>:RFON[:STATe] <0 | 1 | ON | OFF> 2-414
[:SENSe]:VVM:PORT<n>:RFON[:STATe]? 2-414
[:SENSe]:VVM:SWEep:IFBW <numeric_value> {HZ | KHZ | MHZ | GHZ} | DEFault | MINimum | MAXimum 2-414

www.tehencom.com

[:SENSe]:VVM:SWEep:IFBW? [DEFault | MINimum | MAXimum] 2-414
[:SENSe]:VVM:TABLe:CABLe:NAME <string>,[<numeric_value>] 2-415
[:SENSe]:VVM:TABLe:CABLe:NAME? [<numeric_value>] 2-415
[:SENSe]:VVM:TABLe:CABLe:SELect <numeric_value> | DEFault | MINimum | MAXimum 2-415
[:SENSe]:VVM:TABLe:CABLe:SELect? [DEFault | MINimum | MAXimum] 2-415
[:SENSe]:VVM:TABLe:CLEar [<numeric_value>] 2-415
[:SENSe]:VVM:TABLe:CLEar:SELected 2-416
[:SENSe]:VVM:TABLe:MEMorize [<numeric_value>] 2-416
[:SENSe]:VVM:ZERO:REFerence:CLEar 2-416
[:SENSe]:VVM:ZERO:REFerence:SET 2-416
[:SENSe]:VVM:ZERO:REFerence:TYPE <OPEN|SHORt> 2-416
[:SENSe]:VVM:ZERO:REFerence:TYPE? 2-416
:SOURce:VVM:POWer <LOW|HIGH> 2-417
:SOURce:VVM:POWer? 2-417
:SOURce:VVM:POWer:MODE <HILow|DISCrete> 2-417
:SOURce:VVM:POWer:MODE? 2-417
[:SOURce]:VVM:POWer:PORT<n>[:LEVel] <numeric_value> {DBM} | DEFault | MINimum | MAXimum . . 2-417
[:SOURce]:VVM:POWer:PORT<n>[:LEVel]? [DEFault | MINimum | MAXimum] 2-417

www.tehencom.com

www.tehencom.com

Anritsu

10580-00502 B

Anritsu utilizes recycled paper and environmentally conscious inks and toner.

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA
http://www.anritsu.com

Build: 2025-3-27T13:59:41

www.tehencom.com